

KV-X2530B

RM-816

SONY SERVICE MANUAL

French Model
Serial NO. 4,500,001 and later
Serial NO. 6,500,001 and later
Chassis No. SCC-E 19 R-A
MK 2

SUPPLEMENT-1

SUBJECT : AE - I C CHASSIS

File this supplement with the service manual.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			4. CIRCUIT ADJUSTMENTS		
	Switching On/Off	4	4-1. A Board Adjustments	18	
	Presetting	4	4-2. B Board Adjustment	18	
	Basic TV Operation	6	4-3. D Board Adjustments	19	
	Advanced TV Operation	7	4-4. J1 Board Adjustments	20	
	Optional Connections/Operations	8	4-5. Secondary Adjustments	21	
	Additional Remote Commander Operation	9			
	Additional Information	10	5. DIAGRAMS		
2. DISASSEMBLY			5-1. Block Diagram	23	
2-1. Rear Cover Removal	11		5-2. Circuit Boards Location	29	
2-2. Chassis Assembly Removal	11		5-3. Schematic Diagrams and		
2-3. A and J1 Boards Removal	12		Printed Wiring Boards	29	
2-4. B Board Removal	12		5-4. Semiconductors	60	
2-5. Service Position	12		6. EXPLODED VIEWS		
2-6. Picture Tube Removal	13		6-1. Chassis	61	
3. SET-UP ADJUSTMENTS			6-2. Picture Tube	62	
3-1. Beam Landing	14		7. ELECTRICAL PARTS LIST	63	
3-2. Convergence	15				
3-3. Focus	17				
3-4. Screen (G2) and White Balance	17				

KV-X2530B

RM-816

Television system	B/G/H, I, L
Color system	PAL, SECAM, NTSC3.58, NTSC4.43
Stereo system	GERMAN stereo
Channel coverage	B, G, H : VHF : E2-E12 UHF : E21-E69 CABLE : S01-S41 L : VHF 02-10 UHF F21-F69 CABLE : B-Q I : VHF A-I UHF B21-B69
Picture tube	Black Trinitron Approx. 63.5cm (25 inches) (Approx. 59cm picture measured diagonally 110-degree deflection)
Inputs	<ul style="list-style-type: none"> ① 21-pin connector : CENELEC standard including RGB input. ② 21-pin connector : including S video input ③ Video, Audio : phono jack.
Outputs	21-pin connector : CENELEC standard Headphones jack : stereo minijack External speaker terminals : 2-pin DIN Audio output jacks : phono jack (output dependent upon TV settings)

Sound output	15W+15W (music power)
Power consumption	104Wh
Dimensions	Approx. 575×489×480mm (w/h/d)
Weight	Approx. 35.0kg

【RM-816】

Remote control system	infrared control
Power requirements	3V dc 2 batteries IEC designation R6 (size AA)
Dimensions	Approx. 75×221×23mm(w/h/d)
Weight	Approx. 230g (including batters)
Accessories supplied	IEC designation R6 batteries (2)
Supplied accessories	RM-816 Remote Commander (1) IEC designation R6 batteries (2)

Design and specifications are subject to change without notice.


CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.


ATTENTION

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.



SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE  SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÉCES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

21 pin connector (1, 2)

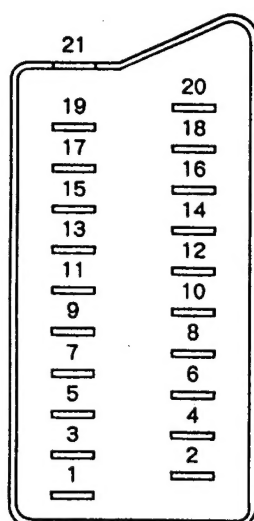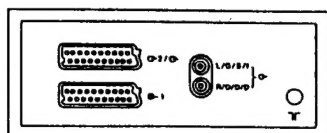

Pin No	1	2	Signal	Signal level
1	○	○	Audio output B (right)	Standard level: 0.5Vrms Output impedance: Less than 1kohm*
2	○	○	Audio input B (right)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
3	○	○	Audio output A (left)	Standard level: 0.5Vrms Output impedance: Less than 1kohm*
4	○	○	Ground (audio)	
5	○	○	Ground (blue)	
6	○	○	Audio input A (left)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
7	○	●	Blue input	0.7V±3dB, 75ohms, positive
8	○	○	Function select (AV control)	High state (9.5-12 V): Part mode Low state (0-2 V): TV mode Input impedance: More than 10kohms Input capacitance: Less than 2 nF
9	○	○	Ground (green)	
10	○	○	Open	
11	○	●	Green	Green signal: 0.7V±3dB, 75ohms, positive
12	○	○	Open	
13	○	○	Ground (red)	
14	○	○	Ground (blanking)	
15	○	-	Red input	0.7V±3dB, 75ohms, positive
	-	○	(S signal) croma input	0.3V±3dB, 75ohms, positive
16	○	●	Blanking input (Ys signal)	High state (1-3 V) Low state (0-0.4 V) Input impedance: 75ohms
17	○	○	Ground (video output)	
18	○	○	Ground (video input)	
19	○	○	Video output	1V±3dB, 75ohms, positive Sync: 0.3V (-3, +10dB)
20	○	-	Video input	1 V±3dB, 75ohms, positive Sync: 0.3V (-3, +10dB)
	-	○	Video input/Y (S signal)	1 V±3dB, 75ohms, positive Sync: 0.3V (-3, +10dB)
21	○	○	Common ground (plug, shield)	


○ connected ● unconnected (open)

* at 20 Hz-20 kHz

SECTION 1 GENERAL

Switching on/off

After you have completed the basic preparation your TV is ready to be connected to the mains power supply (220/240V AC, 50Hz).

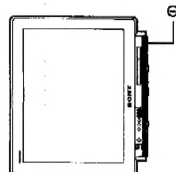


How to turn the TV on

Action	Result
Press on the TV.	The TV will turn on. Note: If the screen remains blank, the TV may be in the standby mode. Press or any number button on the commander to switch it on.

How to turn the TV off

A Temporarity	
Press to enter standby mode.	The TV will be in standby. To return to the TV mode press .
B Completely	
Press on the TV.	The TV will turn off.

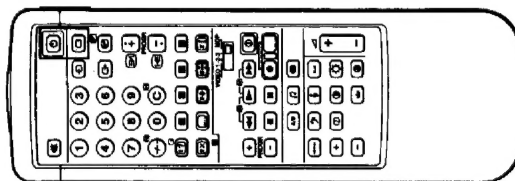


Presetting

After you have installed this TV you need to preset TV channels. TV stations broadcast their channels at certain frequencies. You must preset these channels to programme numbers on this TV before you can watch the TV programmes.

There are 60 spaces for storing these channels. Slide open the full function side of the remote commander to reveal preset buttons.

How to preset channels
If you are unfamiliar with the channel numbers of the stations you wish to preset, use "How to preset channels automatically". If you are familiar with the channel numbers refer to "How to preset T.V. channels directly".

Action	Result
1 Press to enter the preset mode.	The programme number will start flashing.
2 Press PROG + or - or the number buttons to select the programme number to which you want to preset channels. 	The programme number changes
Note To select a double-digit number, use the +/- button. For example, if you want to choose 23, press +/-, 2, and then 3.	
3 Press + or - once to search forward or backward for channels. +	When a channel is tuned in, the search will stop. Note If you want to skip a channel, press + or -.
4 Press if you want to store the channel which is tuned in. Press to exit preset mode without storing.	The channel is now stored and you have returned to TV mode.
5 Repeat steps 1 to 4 to store the other channels.	

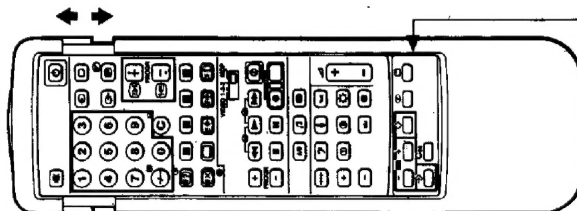


Note: These buttons should be used in preset mode only.

Presetting

How to preset channels directly

Action	Result
1 Press \rightarrow to enter the preset mode.	The programme number will start flashing.
2 Press PROG +/- or the number buttons to select the programme number on which you want to preset a channel. Note To select a double-digit number, use the +/- button. For example, if you want to choose 23, press +/-, 2, and then 3.	The programme number changes.
3 Press C. If you want to select a cable channel, press C twice.	The indication "C--" ("S--" for a cable channel) starts flashing on the display.
4 Select the channel number with two digits (e.g. D4) by pressing the number buttons. Note Press the second number within 5 seconds after the first one, otherwise the operation will be cancelled.	The channel number changes. Note If you have made a mistake the letter "X" will appear. Repeat step 4 again.
5 Press \diamond to store the channel which is tuned in. Press \rightarrow to exit the preset mode without storing. Repeat steps 1 to 5 to store the other channels.	The channel is now stored and you have returned to TV mode.

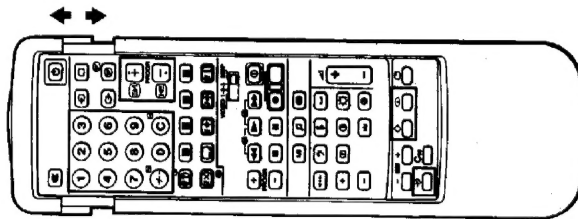

How to Name a Station

You can use up to five characters to "name" a channel or station (i.e. BBC1).

Action	Result
1 Select a programme number you want to name by pressing the PROG +/- or the number buttons	The selected programme number will appear.
2 Press \rightarrow .	The programme number starts flashing.
3 Press C.	The first column of the station name indication will start flashing.
4 Press + or - to select a letter in the alphabet, a number, or a blank space.	The letters of the alphabet, numbers and the space (" ") will appear sequentially.
5 Press C.	The first character is now set and the second column will start flashing.
6 Repeat steps 4 and 5 to set each letter.	
7 Press \diamond .	The channel name is now stored and you have returned to TV mode.

How to tune in a channel temporarily

You can tune a channel in temporarily, if it has not been preset.

Action	Result
1 Press C. For cable channels, press C twice.	The indication "C" ("S" for cable channels) appears on the screen.
2 Select the channel number with two digits by pressing the number buttons (e.g. for channel 4, first press 0, then 4).	The channel is received, but it is not stored to any programme number.

Presetting

Using the PROG +/- buttons you can skip unused programme channel numbers. However, the skipped numbers may still be called up using the number buttons.

Action	Result
1 Press \rightarrow to enter the preset mode.	The programme number will start flashing.
2 Select the programme number that you want to skip by pressing PROG +/- or the number buttons.	The programme number changes.
3 Press Coo.	The lowest channel number appears under the programme number.
4 Press \diamond .	The channel is now stored and you have returned to TV mode.

Repeat steps 1 to 4 to skip other programme numbers.

How to Fine Tune Manually

If the picture is distorted, you can fine tune the channel manually.


Action	Result
Press \leftarrow or \rightarrow repeatedly until the picture looks normal.	The indication \leftarrow F \rightarrow appears on the screen.
Press \rightarrow to enter the preset mode.	The programme number starts flashing.
Press \diamond .	The fine tuning is stored.

Note: The automatic fine tuning will function again when you preset the channel once more.

Basic TV Operation

This section introduces you to the basic control functions which are available on the simple side of the remote commander.

Note: Press \perp on door to open.

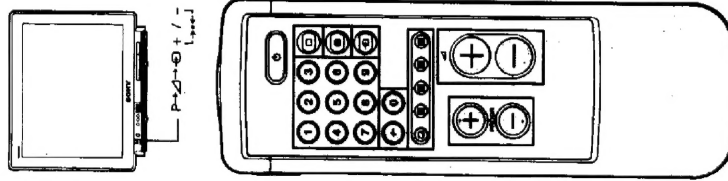

Before you can select programmes make sure that you have preset channels, refer to page 29.

Action	Result
Press PROG +/- or the number buttons. To select a double-digit number, use the +/- button. For example, if you want to choose 23, press +/-, 2, and then 3.	The selected programme is displayed.

Action	Result
Press Δ or ∇ .	The volume markers will appear.

How to operate with the buttons on the TV

You can also select programmes and adjust the volume using the Δ and ∇ buttons on the front of the TV.
For operation, first press the Δ button repeatedly so that the P (for programme) or Δ (for volume) indication appears on the screen, and then adjust with the \rightarrow and \leftarrow buttons.

How to view the teletext


Press \boxtimes . To return to the TV mode, press \square .
For details about the teletext operation, refer to page 12.

How to view the video input picture

Press \boxtimes . To return to the TV mode, press \square . For further details, refer to page 16.

Advanced TV Operation

This section shows you how to use convenient features and how to adjust the picture and sound to your taste. Use the full-function side of the Remote Commander.

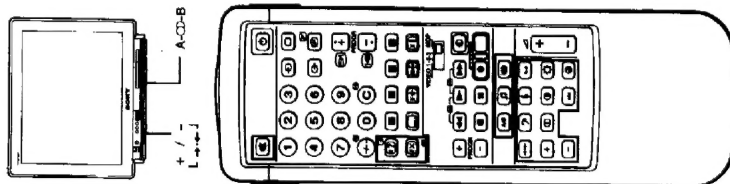

How to use on-screen display and special sound features

You can enjoy the following convenient features.

How to	Action	To resume normal picture/sound
Display on-screen indications	Press CA	Indications disappear after some seconds
Display programme numbers	Press CB twice	Press CB twice again.
Mute the sound	Press CC	Press CC again.
Select a language in bilingual programmes.	Press A/B . The selected mode of the A-C-B indicator on the TV lights up.	Press A/B .
Set the sound to music listening position	Press D	Press D again.
Use the space sound (special acoustic effect)	Press CE	Press CE again.
Request the time	Press CD	Press CD again.

How to adjust the picture and sound

Although the picture and sound have been adjusted at the factory, you might want to adjust them to your own taste. To do this, please follow the steps.

For picture adjustment

To Adjust:	Press:	Then:	Result: (+ → -)
Picture:			
Colour Intensity	⊙		More → Less
Picture Contrast	⊖	+	More → Less
Brightness	⊕	-	Bright → Dark
Hue (for NTSC only)	↺		Reddish → Greenish
Sound:			
Bass	?	+	More → Less
Treble	↓	-	More → Less
Balance	↔		More Right/More Left

To reset the picture and sound to factory set levels press **↔**.

On the set:

Press **→** **←** **+** **-** buttons simultaneously.

Optional Connections/Operations


You can connect other audio-video equipment such as VTRs, video disc players, and stereo systems to this TV.

How to connect audio-video equipment to this TV

This TV has three different input/output connectors. Each of them has different facilities as follows.


Connector	Acceptable input signal	Available output signal
Ⓔ1	Normal audio/video and RGB signal	Video/audio from TV tuner
Ⓔ2/Ⓔ3	Normal audio/video and S-video signal	Video/audio from selected source — refer to page 36
Ⓔ4 on the front	Normal audio/video signal	No outputs

Connecting video equipment

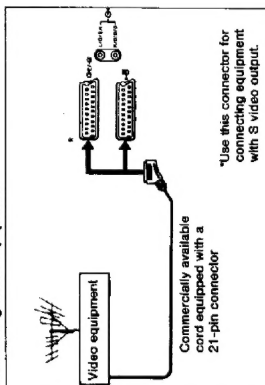


Connecting video equipment temporarily


It is convenient to use the front connectors when connecting equipment such as a video camera recorder.

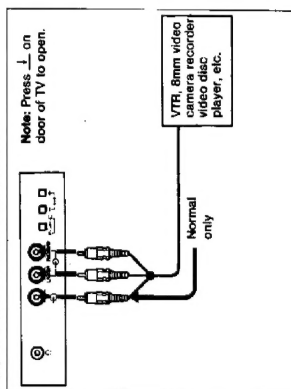

Connecting an audio equipment

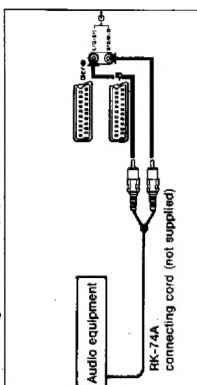

Connecting a computer with RGB output

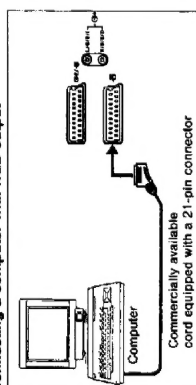

Optional Connections/Operations

How to view the video input picture

You can view the picture of video equipment connected to the input terminals by selecting the input mode.

Operation	Result
Press Ⓔ repeatedly to select the desired input.	Symbol for the selected input appears. (See the table below.)
To return to the TV mode, press the Ⓔ button.	

Input modes

Symbol	Result
Ⓔ1	Audio/video input through the Ⓔ1 connector.
Ⓔ2	RGB input through the Ⓔ2 connector.
Ⓔ2	Audio/video input through the Ⓔ2/Ⓔ3 connector.
Ⓔ2	S video input (from a VTR equipped with an S video output) through the Ⓔ2/Ⓔ3 connector.
Ⓔ3	Audio/video input through Ⓔ4 and Ⓔ5 jacks on the front.
You can also select the input mode using the P-SELECT button on the TV. In this case, first select Ⓔ and then press +/- buttons to select the input.	

How to select the Output

The Ⓔ2/Ⓔ3 connector outputs four kinds of audio/video signals. You have to select one of them as follows.

Operation	Result
Press Ⓔ repeatedly to select the desired input.	Symbol for the selected output appears. (See the table below.)

Output modes

Symbol	Output from
1	The audio/video signal from the Ⓔ1 connector
2	The audio/video signal from the Ⓔ2/Ⓔ3 connector
3	The audio/video signal from the Ⓔ4 and Ⓔ5 connectors.
TV	The audio/video signal from the TV aerial terminal.

Additional Remote Commander Operation


How to Control Other Sony Video Equipment

By switching the VIDEO 1/2/3, MDP selector, you can operate most Sony video equipment (Beta VTR, 8mm VTR, VHS VTR, and video disc player).

1 Set VIDEO 1/2/3, MDP selector according to the desired video equipment.

VIDEO 1: Beta or ED Beta VTR
VIDEO 2: 8mm VTR
VIDEO 3: VHS VTR
MDP: Video disc player

VIDEO 1-2-3 MDP




2 Use the buttons in the indicated area to operate video equipment.

Note
When you use ● button, be sure to press this button and the one on the right simultaneously.



Notes

- If your video equipment is furnished with COMMAND MODE selector, set the selector to the same position as the VIDEO 1/2/3, MDP selector on the supplied Remote Commander.
- If the equipment does not have a certain function, the corresponding button on the Remote Commander will not work.

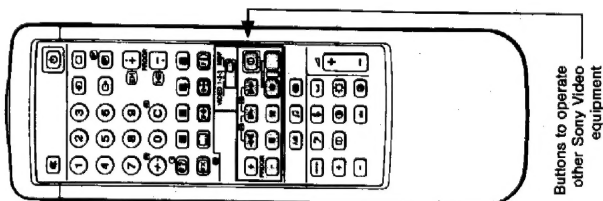

Buttons to operate other Sony Video equipment

Additional Information

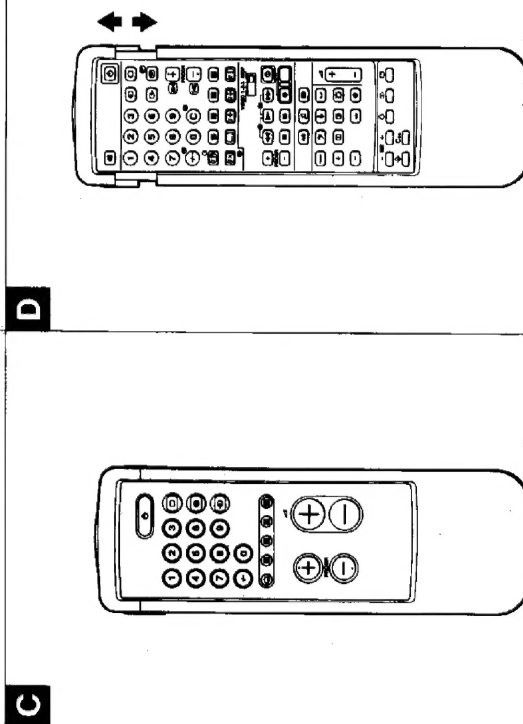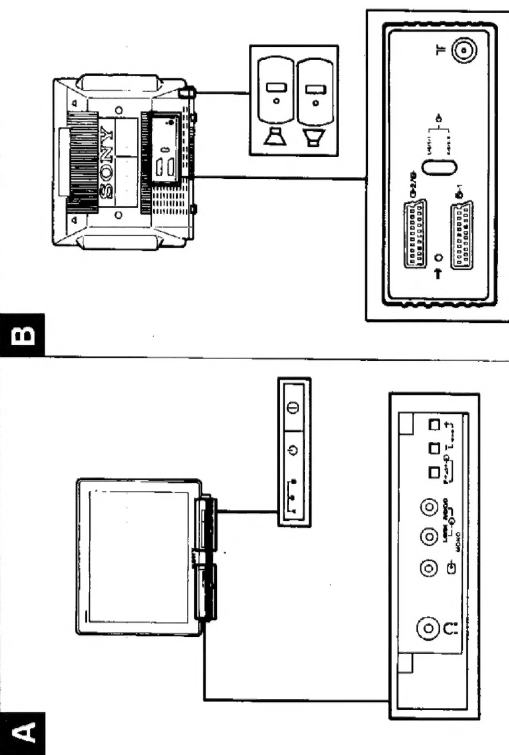


This section briefly describes the buttons and controls on the TV set and on the Remote Commander. For more information, refer to the pages given next to each description.


A TV set – Front	
Sign	Name
	Main power switch
	Standby indicator
	Headphones jack (stereo mini-jack)
	Input jacks (video / audio)
	Function selector (Programme/ volume/input)
	Adjustment buttons for function selector
B TV set – Rear	
Sign	Name
	Loudspeaker terminals (top: left, bottom: right)
	21-pin Euro-AV connector (S-video/video input, TV/video output)
	21-pin Euro-AV connector (RGB/video input, TV output)
	Audio output jacks (phone jacks)
	Aerial terminal (IEC type)
C Remote Commander – simple side	
Sign	Name
	Input mode selector
	Fasttext buttons
	TV mode selector
	Standby button
	Number buttons
	Double-digit entering button
	Volume control button
	Programme selector
D Remote Commander – full function side	
Sign	Name
	Mute on/off button
	Standby button
	Number buttons
	Input mode selector
	TV power on/TV mode selector button
	Output mode selector
	Teletext button
	Music button
	Selector for NICAM
	Double-digit entering button
	Direct channel entering button
	Space sound button
	Request line display button
	Teletext operation buttons
	Fasttext buttons
	On-screen display button
	Picture and sound adjustment reset button
	Volume control button
	Programme selector
	Picture and sound controls
	Video equipment selector
	Video equipment operation buttons
	Programme number clear button
	Channel preset button
	Tuning buttons
	Channel store button
	Station label button

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

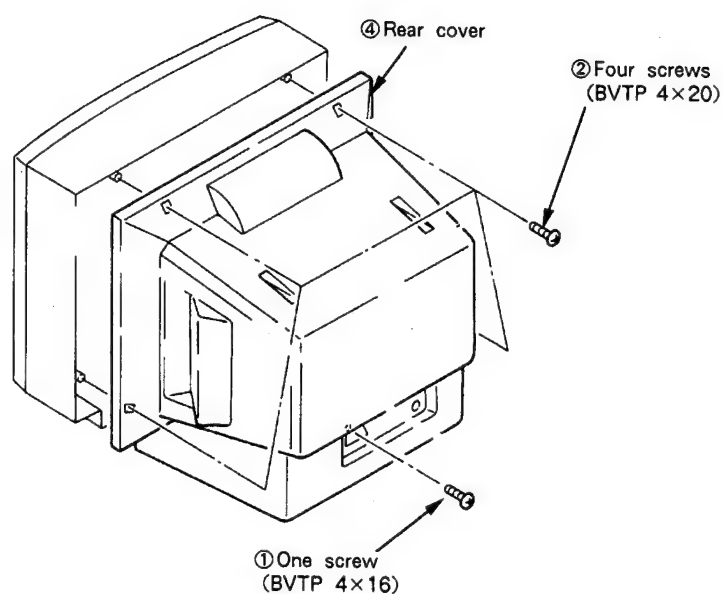


2-2. CHASSIS ASSEMBLY REMOVAL

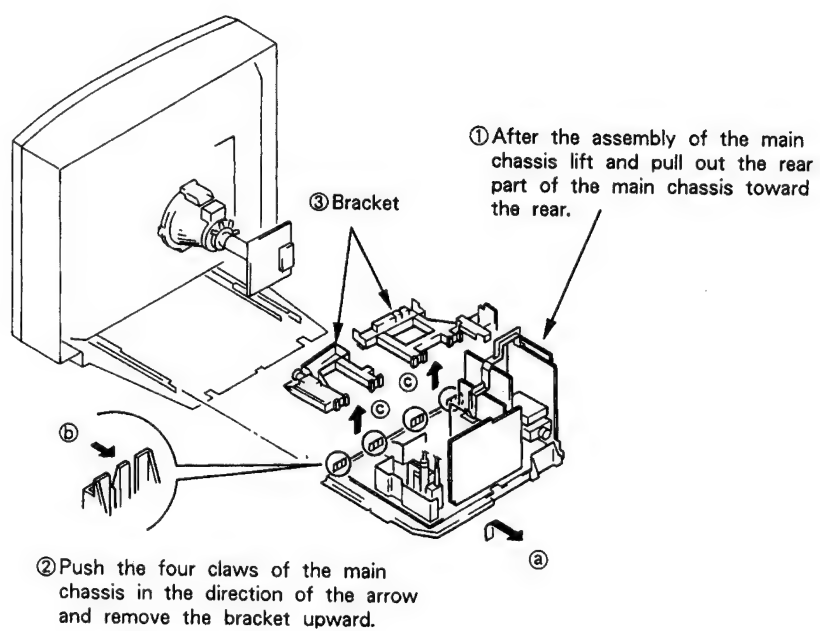

2.3. A AND J1 BOARDS REMOVAL

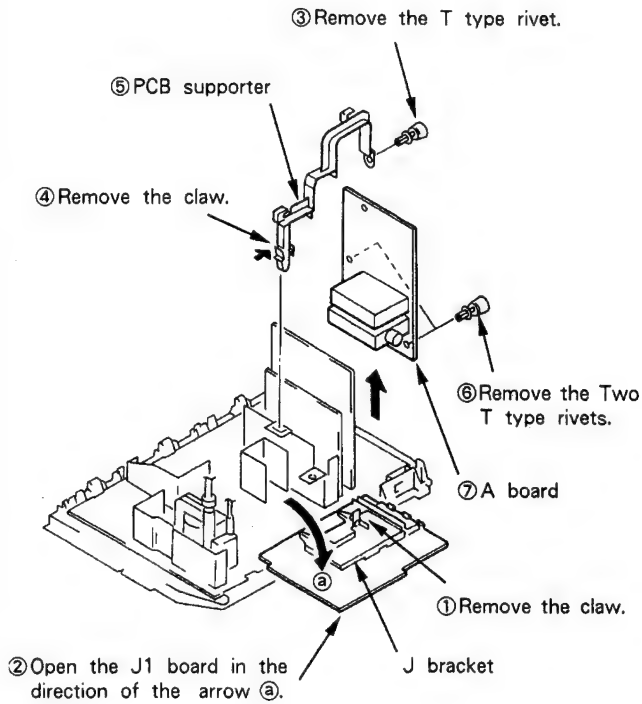


2.4. B BOARD REMOVAL

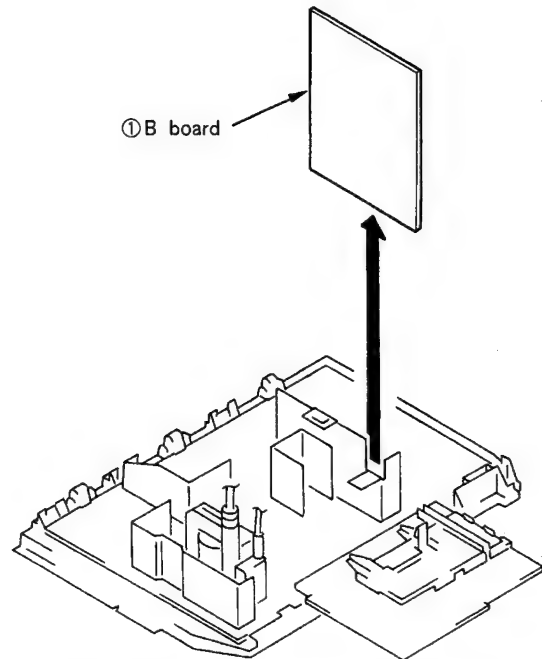


Note : 10pin extension cable (S-0945-001-0)

2.5. SERVICE POSITION

※ Remove the bracket from the main chassis assembly and the perform the following servicing.
(Refer to 2.2. CHASSIS ASSEMBLY REMOVAL)

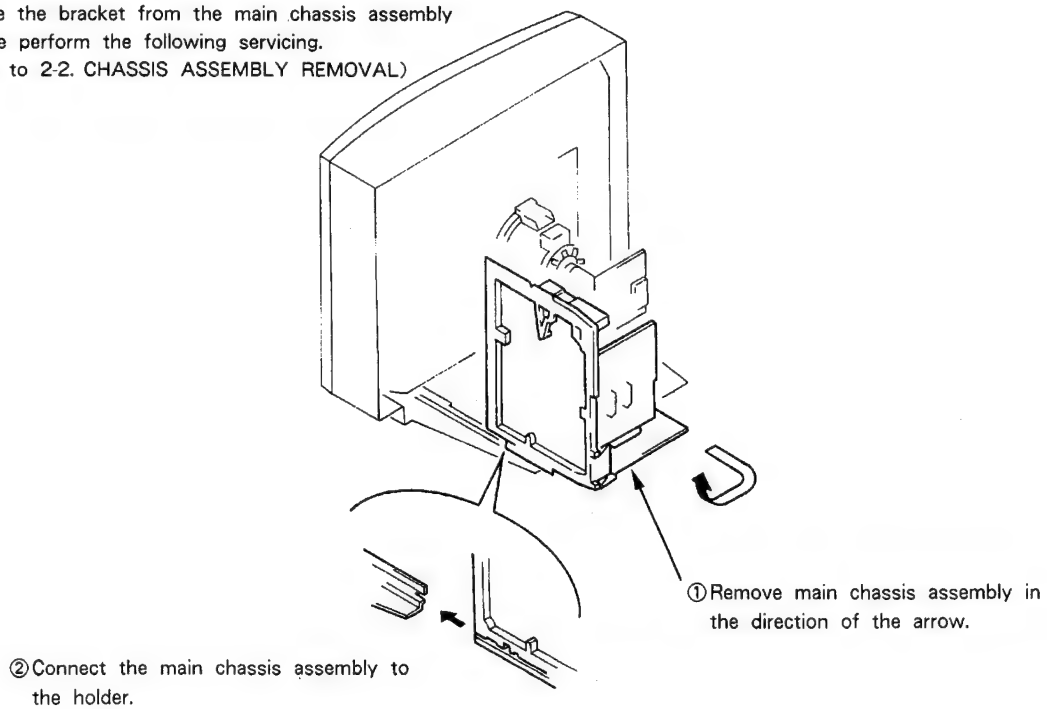


2-6. PICTURE TUBE REMOVAL

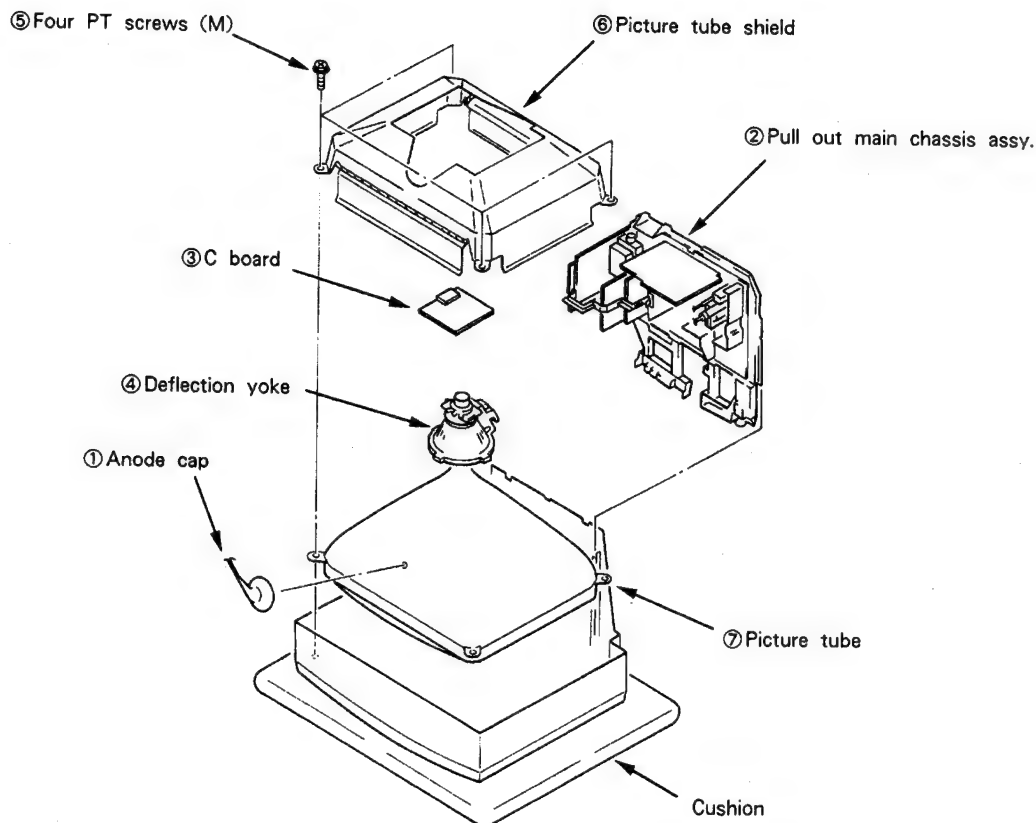


• REMOVAL OF ANODE-CAP

Note: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield, or carbon painted on the CRT, after removing the anode.


• REMOVING PROCEDURES

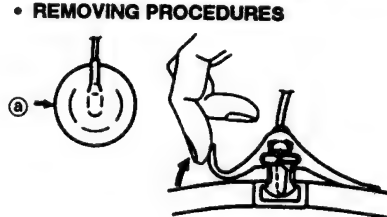

① Turn up one side of the rubber cap in the direction indicated by the arrow a.

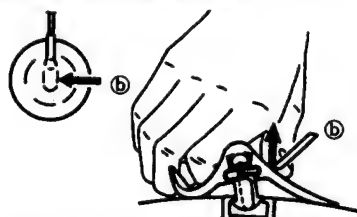


② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow b.

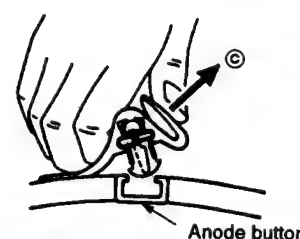

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow c.

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A metal fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

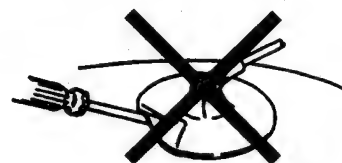

SECTION 3

SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted. The controls and switch below should be set as follows unless otherwise noted :

● CONTRAST control..... 80%(or Normal by commander)
 ☆ BRIGHTNESS control..... 50%

Perform the adjustments in order as follows:

Preparation:

- Set the side of the unit with the PICTURE TUBE so that it faces east or west in order to reduce the influence of external magnetic force.
- Turn the power switch for the unit ON and erase the magnetic force using a degausser..

3-1. BEAM LANDING

Demagnetize with a degausser

1. Input a raster signal with the pattern generator.
 CONTRAST } normal
 BRIGHTNESS }
2. Turn the raster signal of the pattern generator to red.
3. Move the deflection yoke backward, and adjust with the purity control so that red is in the center and blue and green are at the sides evenly.
 (Fig.3-1 - 3-3)
4. Move the deflection yoke forward, and adjust so that the entire screen becomes red. (Fig.3-1)
5. Switch over the raster signal to blue and blue and confirm the condition.
6. When the position of the deflection yoke is determined, tighten it with a deflection yoke mounting screw.
7. When landing at the corner is not right, adjust by using the disk magnets. (Fig.3-4)

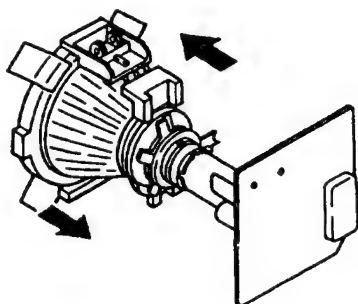


Fig. 3-1

1. Beam Landing
2. Convergence
3. Focus
4. Screen (G 2) and White Balance

Note: Test Equipment Required.

1. Color bar/Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital multimeter
5. Oscilloscope

Fig. 3-2

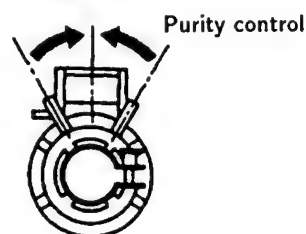


Fig. 3-3

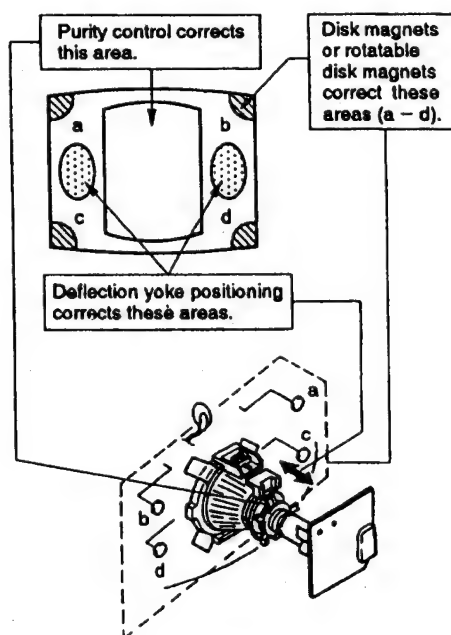
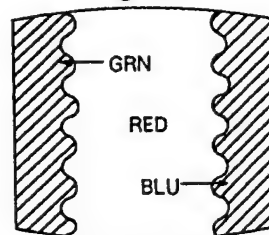



Fig. 3-4

3-2. CONVERGENCE


Preparation:

- Before starting, perform FOCUS, H.SIZE, and V. SIZE adjustments.
- Set BRIGHTNESS control to minimum.
- Feed in the dot pattern.


(1) Horizontal and Vertical Static Convergence

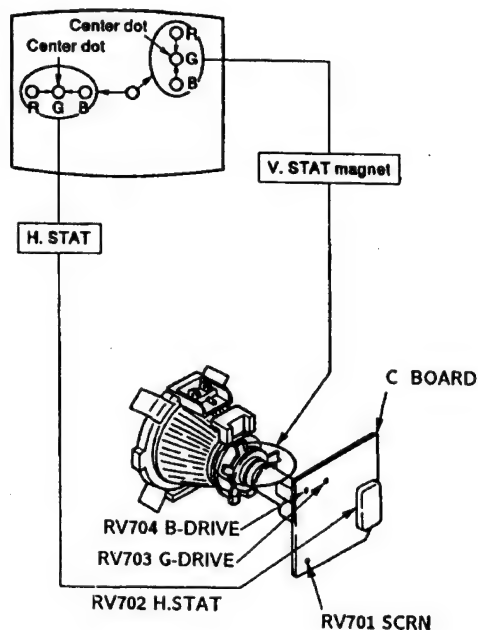


1. Adjust H.STAT VR to converge red, green and blue dots the in center of the screen.(Horizontal movement)
2. Adjust V. STAT magnet to converge red, green and blue dots in the center of the screen. (Vertical movement)
3. If the red, green and blue dots do not converge on the center of screen with H.STAT VR, perform horizontal convergence adjustment using H.STAT VR and V.STAT magnet as shown below. (In this case, H.STAT VR and V.STAT magnet effect each other.)
- Tilt the V.STAT magnet and adjust static convergence to open or close the V.STAT magnet.

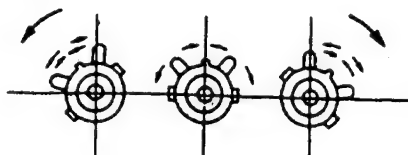


4. When the V.STAT magnet is moved in the direction of arrow ㊸ and ㊹, red, green and blue dots move as shown below.

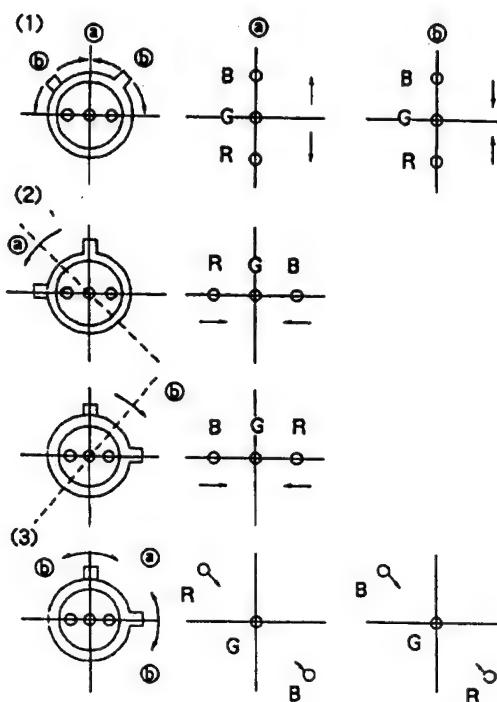

● Operation of BMC (Hexapole) Magnet

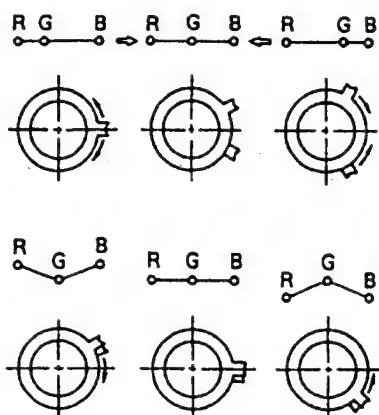


- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking. Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

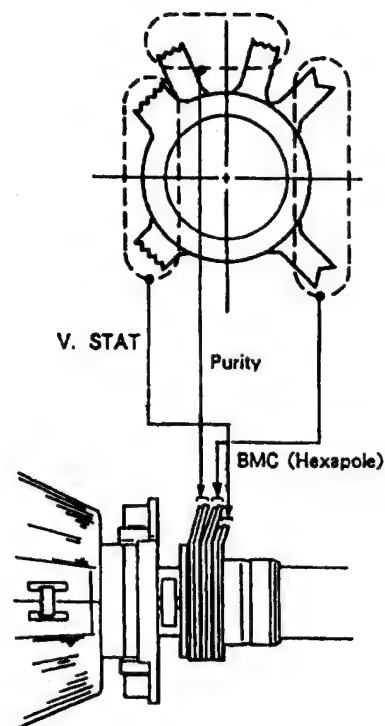



(2) Dynamic convergence adjustment

Preparations :

1. Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
1. Slightly loosen the deflection yoke screws.
2. Remove the deflection yoke spacer.
3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the defelection yoke spacer.

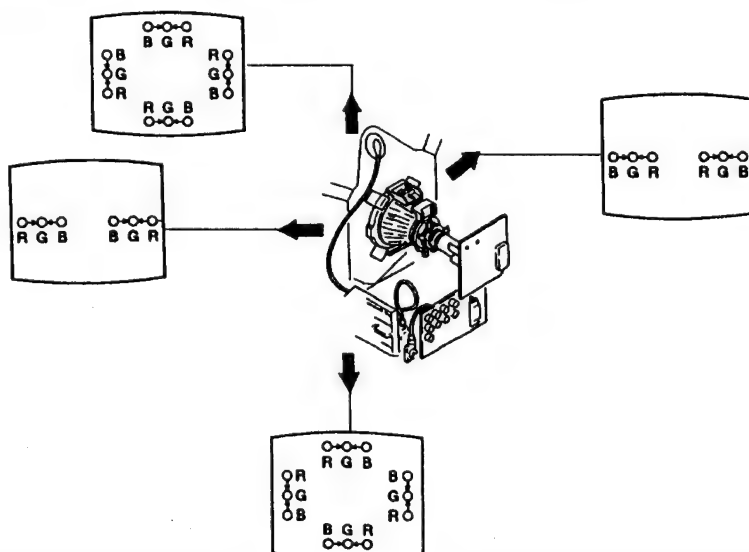


(3) Screen-corner Convergence

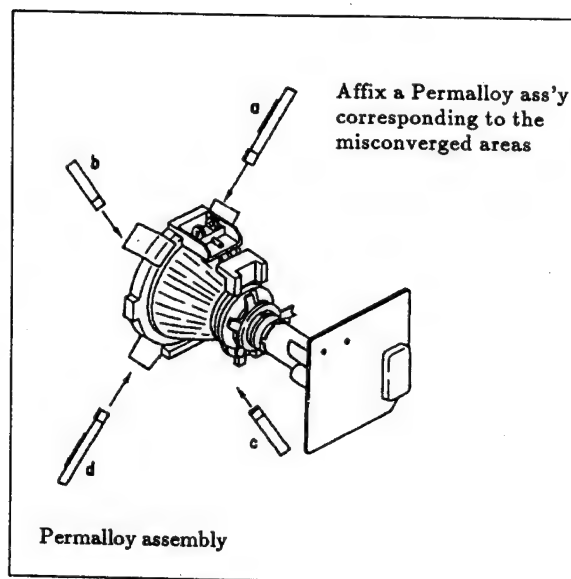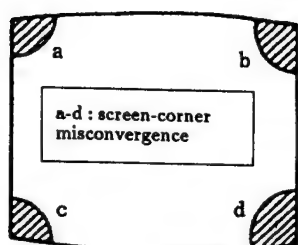


3-3. FOCUS

Adjust FOCUS so that the whole screen is in best focus.

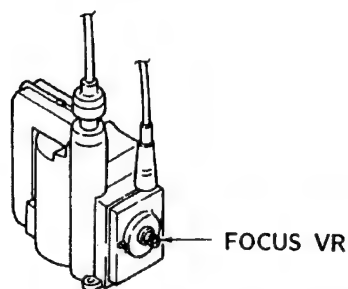

3-4. SCREEN (G 2) and WHITE BALANCE

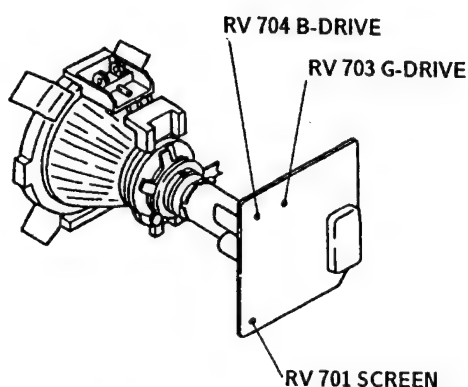

Screen (G 2) Setting

1. Input dot signal from the pattern generator.
2. Set the picture BRIGHTNESS control to minimum level.
3. Apply 170 V DC to the cathodes of R,G and B from an external power source.
4. While watching the picture, adjust the G 2 volume (RV701) immediately before fly-back line disappears.


White Balance Adjustment

1. Input all-white signal from the pattern generator.
2. Adjust the BRIGHTNESS and COLOR controls to the standard level.
3. Adjust the following using RV 704 (B DRIVE) and RV 703 (G DRIVE)

In the following adjustments, the CONTRAST, COLOR and BRIGHTNESS controls are set to normal unless otherwise specified.

SECTION 4 CIRCUIT ADJUSTMENTS

4-1. A BOARD ADJUSTMENTS

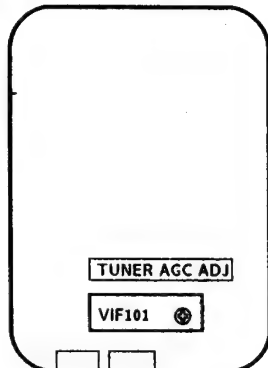


A BOARD (COMPONENT SIDE)

TUNER AGC ADJUSTMENT (VIF101, AGC VR)

1. Align with an appropriate signal between stations.
2. Adjust AGC VR so that snow noise and cross modulation just disappear from the picture.

IFG5.5S SIF

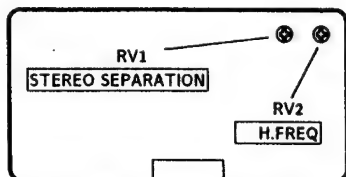

IFG5.5S SIF -component side-


STEREO SEPARATION ADJUSTMENT (RV1)

1. Input stereo signals. (L-CH 400Hz, R-CH 1KHz)
2. Check the stereo indicator.
3. Connect on oscilloscope to pin ⑧ (CH1) of CN1 through band pass filter of 1KHz
4. Adjust RV1 so that 1KHz voltage goes down to the minmum.

H FREQ (RV2)

1. Input a PAL COLOR BAR signal, then connect a jumper between pin ⑫ IC4 and GND.
2. Connect a frequency counter to pin ④ IFG5.5S (HP) of CN1 through a probe of 10 : 1.
3. Adjust RV2 (H.FREQ) $15.625 \pm 50\text{Hz}$.
4. After adjustment, remove the jumper.

4-2. B BOARD ADJUSTMENT

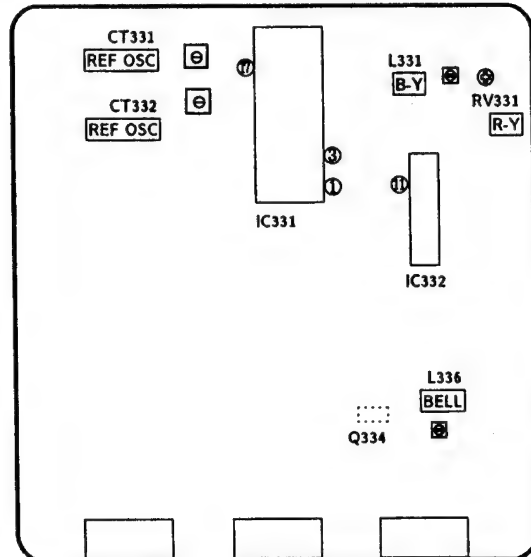

B BOARD (COMPONENT SIDE)

REFERENCE OSCILLATOR ADJUSTMENT (CT332 8.8MHz)


1. Input a PAL color bar signal.
2. Ground pin ⑪ of the IC331.
3. Adjust CT332 to obtain synchronization.

REFERENCE OSCILLATOR ADJUSTMENT (CT331 7.16MHz)

1. Input an NTSC color bar signal.
2. Ground pin ⑪ of IC331.
3. Adjust the CT331 to obtain synchronization.
4. Remove the jumper grounding pin ⑪ of IC331.


BELL FILTER ADJUSTMENT (L336)

1. Input a SECAM color bar signal.
2. Connect the oscilloscope to the emitter of Q334.
3. Adjust L336 so that the waveform is flat.

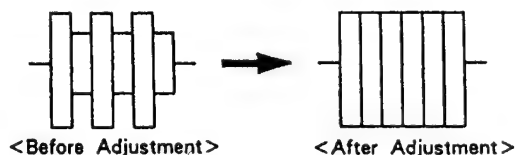


DISCRIMINATION ADJUSTMENTS (RV331 and L331)

1. Input a SECAM color bar signal.
2. Connect the oscilloscope to pin ① of IC331.
3. Adjust RV331 until the white and black sections of the waveform at pin ① are at the 0 level.
Connect the oscilloscope to pin ③ of IC331.
4. Adjust L331 until the white and black sections of the waveform at pin ③ are at the 0 level.

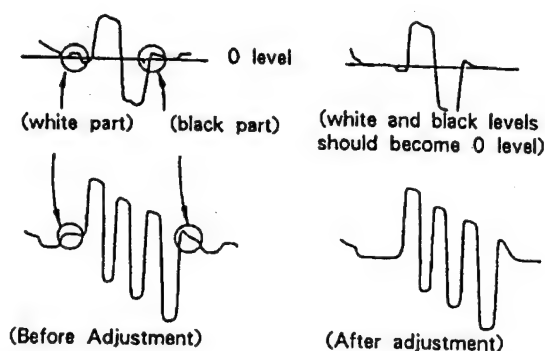


H.PHASE ADJUSTMENT (RV502)

1. Input a PAL color bar signal.
2. Set the picture and brightness controls to their normal levels.
3. Set RV1508 (H.CENT) to its mechanical center.
4. Connect the oscilloscope to pin ⑪ (SCP) of IC 501.
5. Rotate RV502 to adjust to $5.1 \pm 0.1 \mu s$.

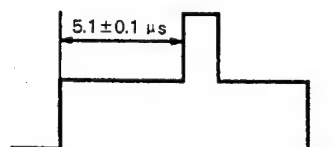

4-3. D BOARD ADJUSTMENTS

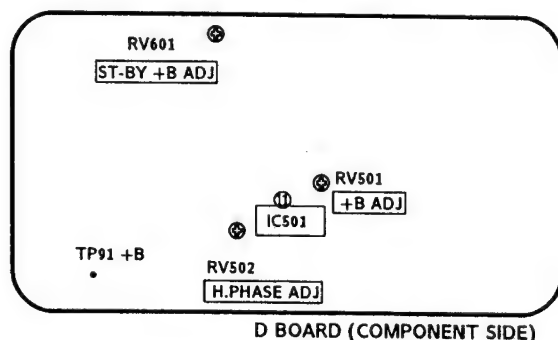


+B ADJUSTMENT (RV501)

1. Connect the digital multimeter to TP91.
2. Adjust RV501 to obtain $135 \pm 0.2V$.


ST-BY +B ADJUSTMENT (RV601)

1. Put the system into \odot standby mode (remote commander).
2. Connect the digital multimeter to TP91.
3. Adjust RV601 to obtain $135 \pm 3V$.
4. Take the system out of \odot standby mode (remote commander).

4-4. J1 BOARD ADJUSTMENTS

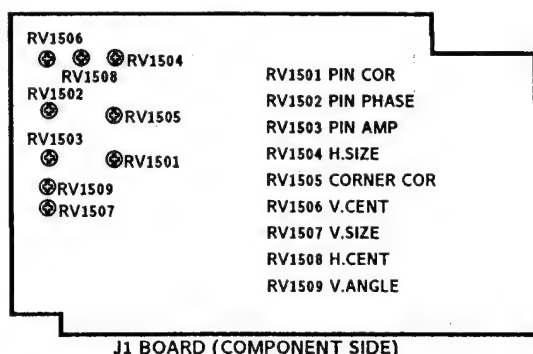


RV1508
H. CENT (HORIZONTAL CENTER)




RV1504
H. SIZE (HORIZONTAL SIZE)



RV1506
V. CENT (VERTICAL CENTER)



RV1507
V. SIZE (VERTICAL SIZE)




RV1509
V. ANGLE (VERTICAL ANGLE)



RV1503
PIN AMP (PINCUSHION AMPLIFIER)



RV1502
PIN PHASE (PINCUSHION PHASE)



RV1501
PIN. COR (PINCUSHION CORRECT)



RV1505
CORNER COR (CORNER CORRECT)



4-5. SECONDARY ADJUSTMENTS

SUB BRIGHTNESS ADJUSTMENT



1. Set the system to receive a test pattern.
2. Press → • ← on the remote commander to put the system into normal mode.
3. Switch off the power.
4. While depressing the adjusting buttons + and - simultaneously, turn on the power. (SUB mode is obtained)
5. Minimize the ① contrast setting.
6. Adjust the ⚙ brightness control so that the gray scale 0 IRE section is cut off completely and the 20 IRE section is barely glowing.
7. Depress the ◇ (store) button of the remote commander.
(SUB mode is released)

If there is no test color pattern


1. Set the system to receive a color pattern.
2. Press → • ← on the remote commander to put the system into normal mode.
Set the ② color to its normal state.
- 3-5. Steps are the same as above.
6. Since 20 IRE is nearly blue, adjust the ⚙ brightness control so that the blue barely glows.
7. Same as step 7 above.
8. Press → • ← on the remote commander to put the system into normal mode.

SUB COLOR ADJUSTMENT

1. Set the system to receive color bars.
2. Press → • ← on the remote commander to put the system into normal mode.
3. Cut off the power.
4. While depressing the adjustment buttons + and - simultaneously, turn on the power. (SUB mode is obtained).
5. Adjust the color control so that the B out waveform (pin ⑤ of C board connector CNC72) is as shown in the figure below.
6. Depress the ◇ (store) button of the remote commander. (SUB mode is released)

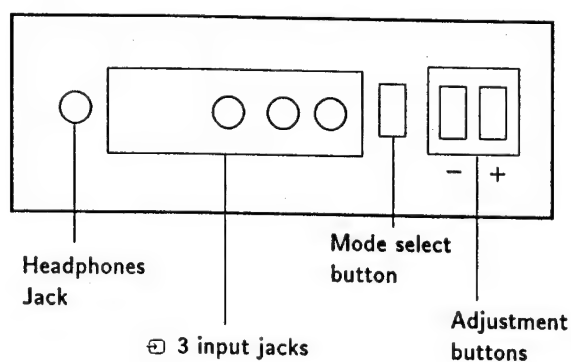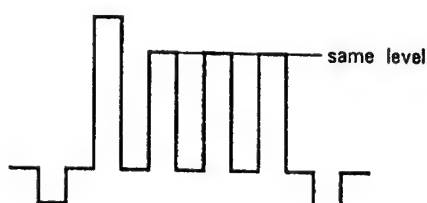

5-2. CIRCUIT BOARDS LOCATION

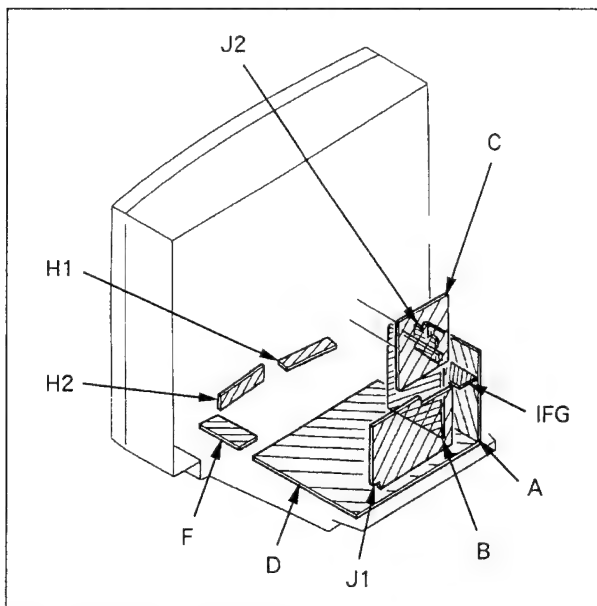

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
CAPACITOR	: RW	NONFLAMMABLE WIREWOUND
	: *	ADJUSTMENT RESISTOR
	: LF-8L	MICRO INDUCTOR
	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
COIL	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE






5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS


Note :


- All capacitors are in μF unless otherwise noted.
pF : $\mu\mu\text{F}$ 50WV or less are not indicated except for electrolytics.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm

Rating electrical power: 1/4W

- Chip resistor is in 1/10W.
- All resistors are in ohms. $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
-  : nonflammable resistor.
-  : fusible resistor.
- Δ : internal component.
-  : panel designation and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in V.
- Readings are taken with a $10M\Omega$ digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
-  : B+ line.
-  : signal path. (RF)


Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une trame et par une marque  sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié.


5-4. SEMICONDUCTORS

CXA1114P
TDA4580-V6
TDA4650-V3
TDA6200
TEA2028B

SN74LS02




TDA8732

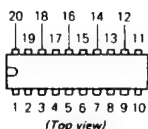



2SB734-34
2SD774-34



EGP20G
ERC06-15S
RGP02-17
RU-3AM
WG713A



U05G



TDA2050



BF871




2SC2785-HFE



ERD29-08J




1SS226



HD14053BFP
MC14052BCP
MC14053BCP
PCF8574
TC4051BPHB
TC4052BPHB
TDA8442-N3
TEA2260

TDA2595/V9




DTA114EK
DTA144EK
DTC124EK
DTC144EK
2SA1162G
2SC1623-L5L6
2SC2712-YG
DTC114EK
2SB1295-UL6
DTC115EK
2SC2412K


2SD1584-LB
2SD1941-06





MA152WK
DAN202K



LD-201VR

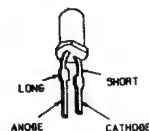


RC4558P
SDA2546
TBA129
TEA2014A
TEA2031A
μPC4558C
NE5532P





2SD2096-EF




DAP202K



RD3.6M-B2
RD5.6M-B2
RD6.8M-B2
MA3056M-TX

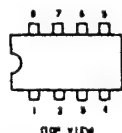

TDA6600-2




DTA144ES
DTC144ES



2SD789-34




HZS11NB3
HZS5.6NB3
MTZJ-13B
MTZJ-15A
MTZJ-3.9B
MTZJ-33A
MTZJ-36D
MTZJ-10C
RD11ESB3
RD5.6ESB2
RD6.2ESB2
RD6.8ESB2
RD7.5ESB2
RD9.1ESB3
UZ-4.7BSC
1SS119



SDA20560-A008



TDA8170

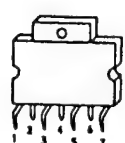


2SA1091-0




CTU-12S



SAA5246P/E




TEA7605
TYA7812CT



2SA1220A-P
2SC2688-LK




D4SB60L-F




6-1. CHASSIS


● : BVTP3×12 7-685-648-79


■ : BVTP4×16 7-685-663-79

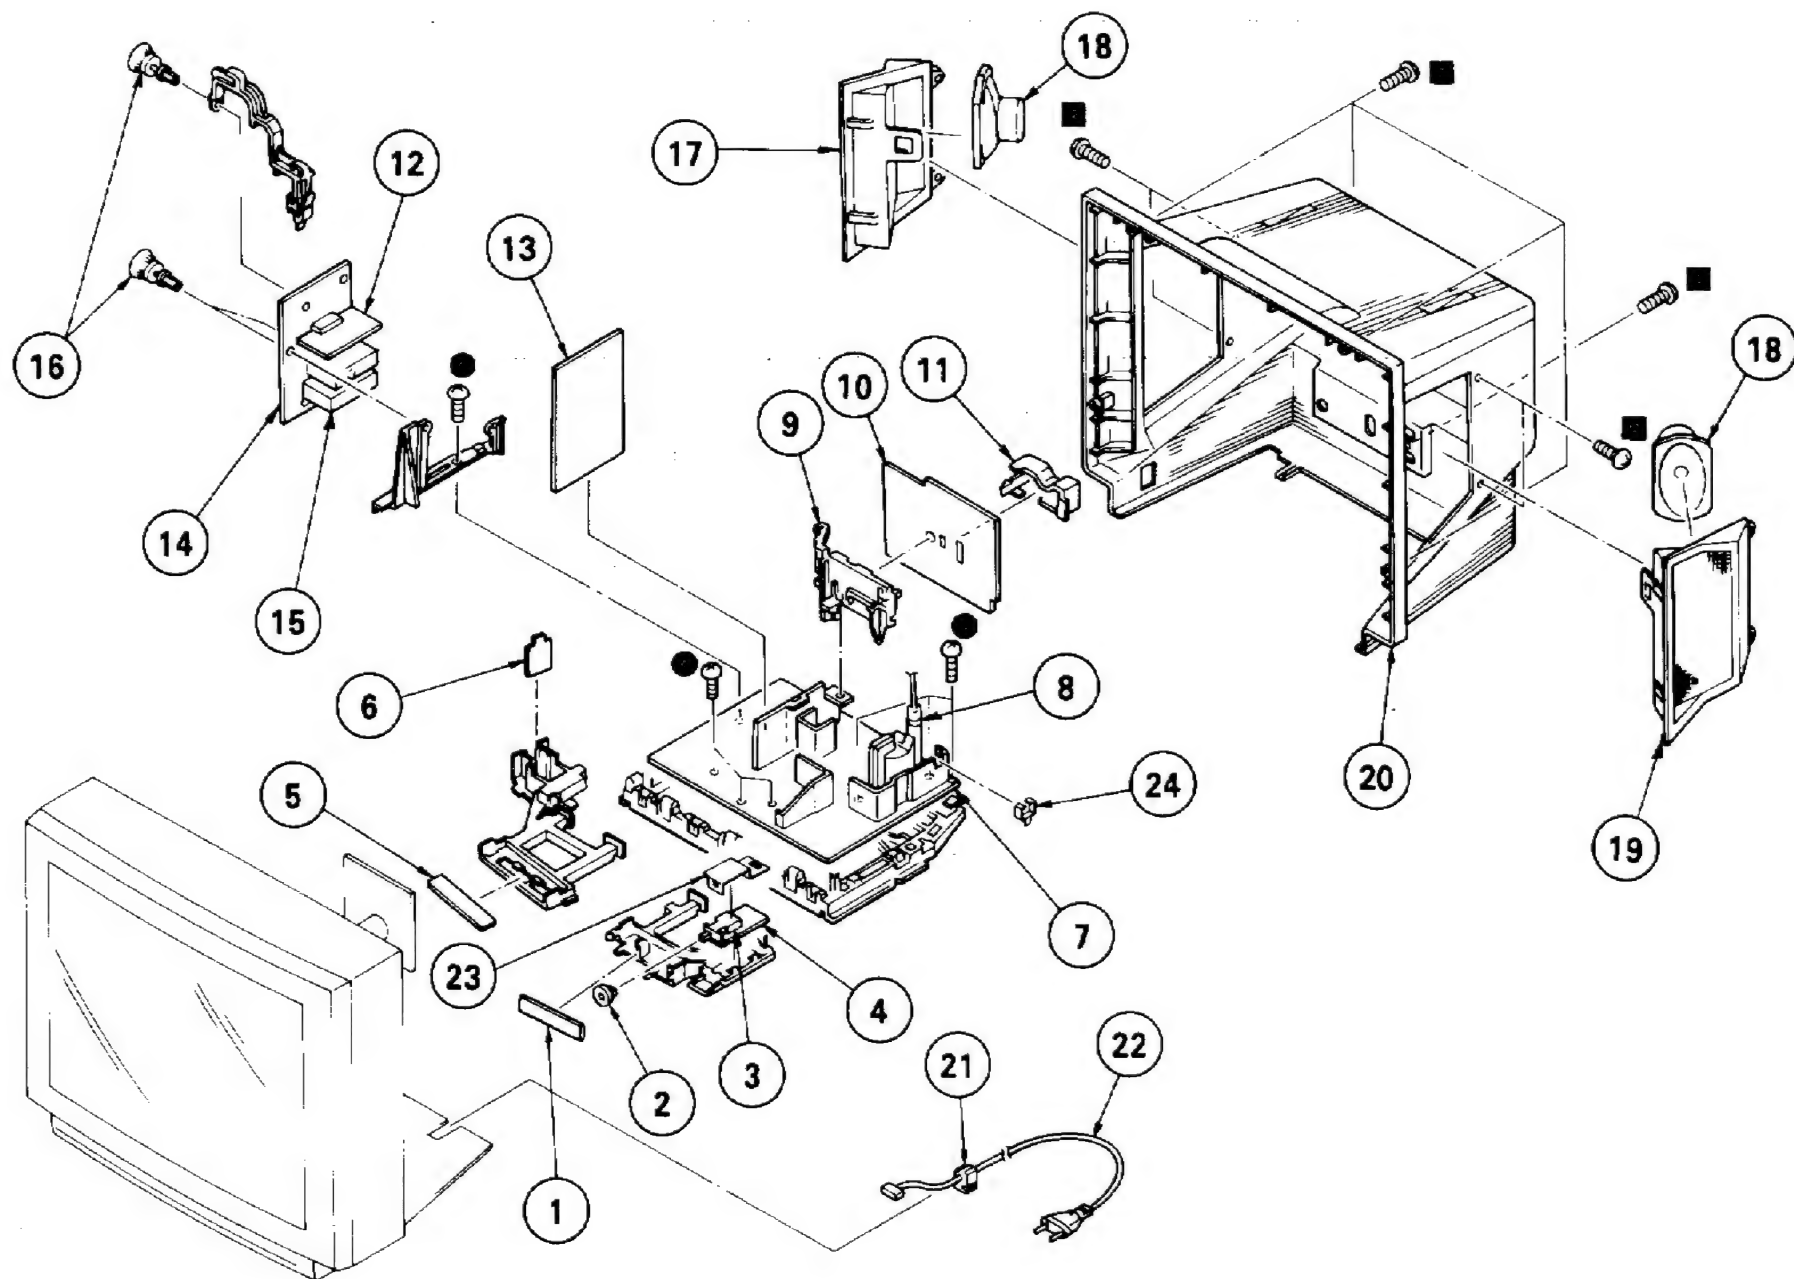

6-2. PICTURE TUBE

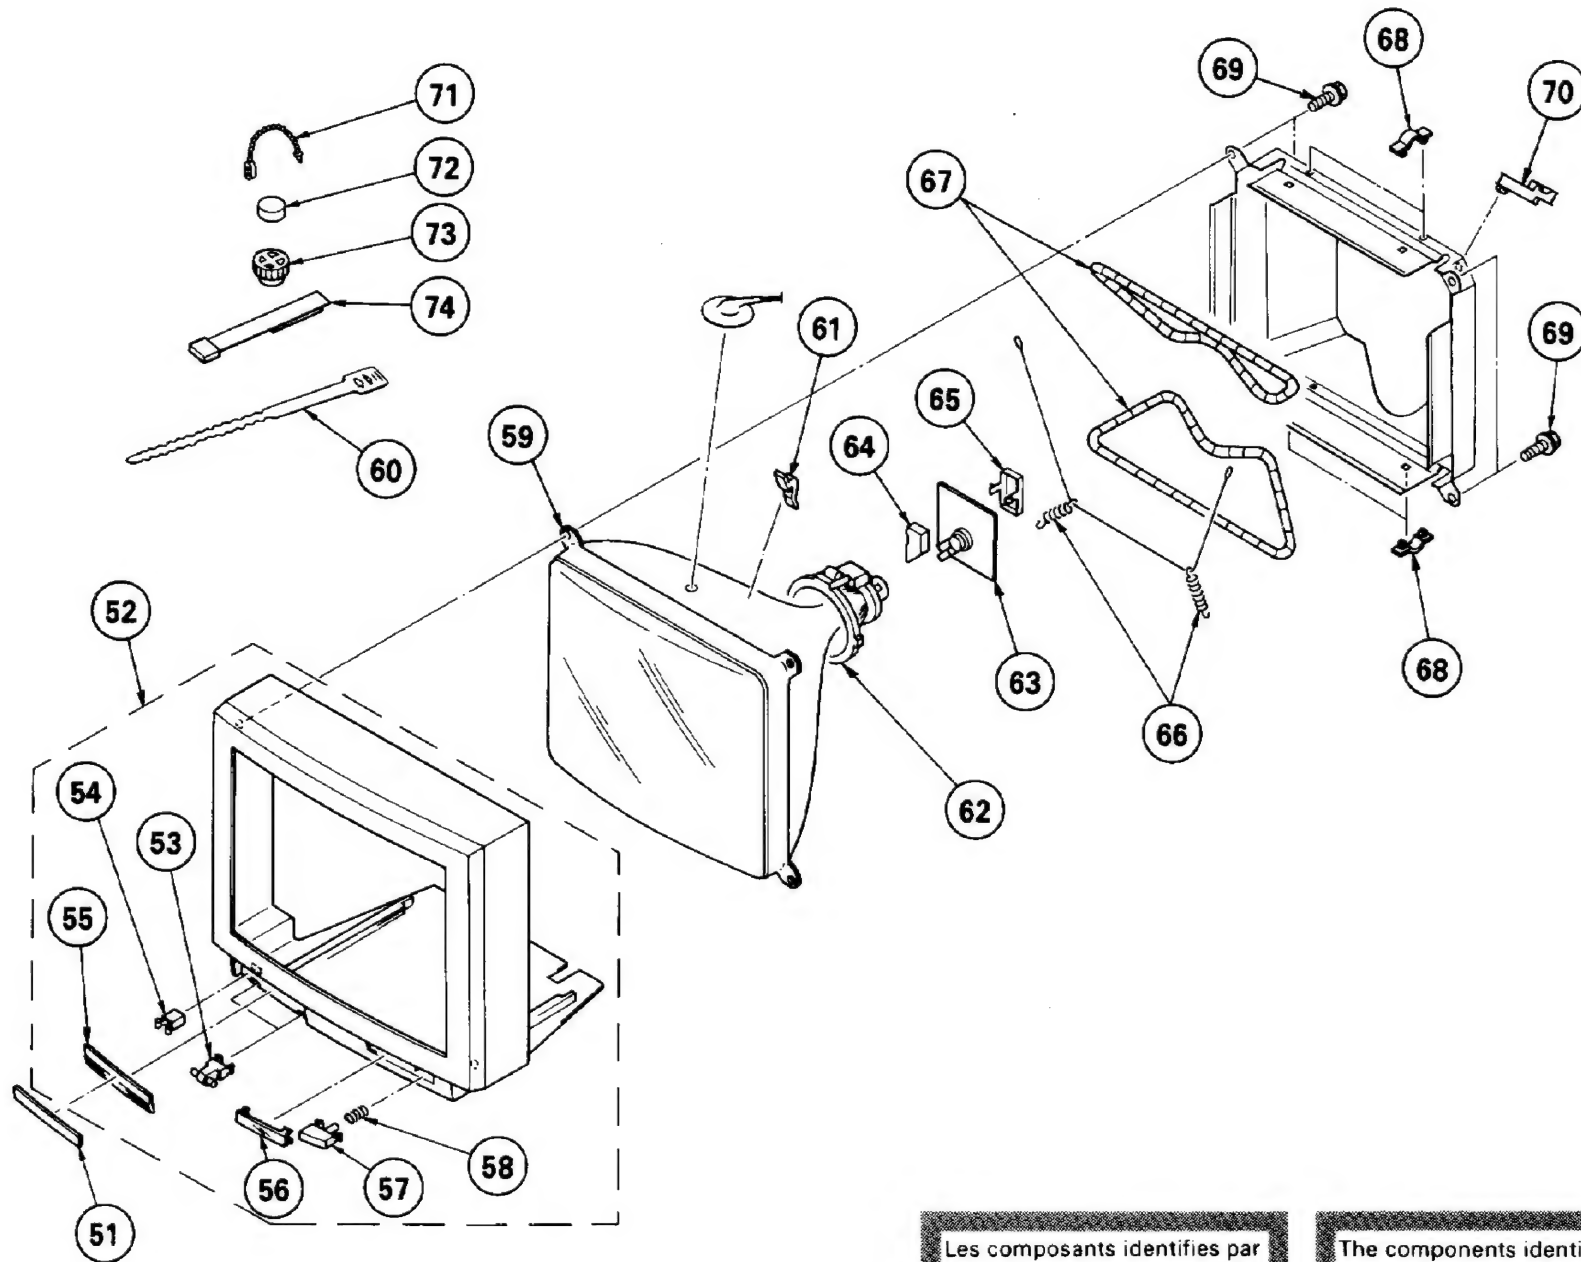

Les composants identifiés par une trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

KV-X2931D

RM-689

SERVICE MANUAL

AEP Model
Chassis No. SCC-D51L-A



AE-1B CHASSIS

Note: The service manual for RM-689 has been issued separately.

MODELS OF THE SAME SERIES

KV-X2931D	
KV-X2531D	
KV-X2131D	

SPECIFICATIONS

Television system	B/G/H	Sound output	15 W +15 W (music power)
Color system	PAL, SECAM, NTSC3.58, NTSC4.43	Power consumption	109 Wh
Channel coverage	VHF : E2-E12 UHF : E21-E69 CABLE : S1-S20, S21-S41	Dimensions	Approx. 656x554x512 mm (w/h/d)
Picture tube	Trinitron tube Approx. 72.4 cm (29 inches) (Approx. 68 cm picture measured diagonally 110°-degree deflection)	Weight	Approx. 60kg
Inputs	<ul style="list-style-type: none"> Ⓐ 1 21-pin connector : CENELEC standard including RGB input. Ⓑ 2 21-pin connector : including S video input Ⓒ 3 Video, Audio : phno jack. 	Supplied accessories	RM-689 Remote Commander (1) IEC designation R6 batteries (2)
Outputs	21-pin connector : CENELEC standard Headphones jack : stereo minijack External speaker terminals : 2-pin DIN Audio output jacks : phono jack (output dependent upon TV settings)		



Design and specifications are subject to change without notice.



TRINITRON® COLOR TV

SONY®

21 pin connector (G-1, G-2)

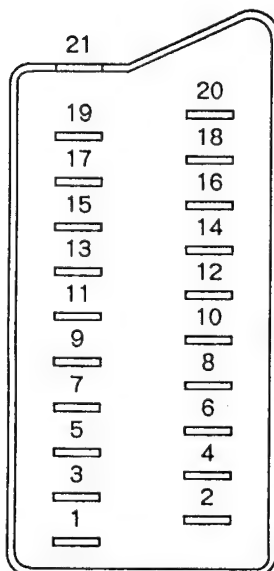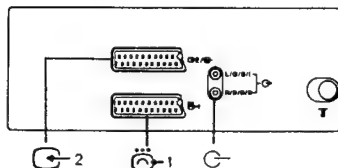

Pin No	1	2	Signal	Signal level
1	○	○	Audio output B (right)	Standard level: 0.5Vrms Output impedance: Less than 1kohm*
2	○	○	Audio input B (right)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
3	○	○	Audio output A (left)	Standard level: 0.5Vrms Output impedance: Less than 1kohm*
4	○	○	Ground (audio)	
5	○	○	Ground (blue)	
6	○	○	Audio input A (left)	Standard level: 0.5Vrms Input impedance: More than 10kohms*
7	○	●	Blue input	0.7V±3dB, 75ohms, positive
8	○	○	Function select (AV control)	High state (9.5–12 V): Part mode Low state (0–2 V): TV mode Input impedance: More than 10kohms Input capacitance: Less than 2 nF
9	○	○	Ground (green)	
10	○	○	Open	
11	○	●	Green	Green signal: 0.7V±3dB, 75ohms, positive
12	○	○	Open	
13	○	○	Ground (red)	
14	○	○	Ground (blanking)	
15	○	–	Red input	0.7V±3dB, 75ohms, positive
	–	○	(S signal) croma input	0.3V±3dB, 75ohms, positive
16	○	●	Blanking input (Ys signal)	High state (1–3 V) Low state (0–0.4 V) Input impedance: 75ohms
17	○	○	Ground (video output)	
18	○	○	Ground (video input)	
19	○	○	Video output	1V±3dB, 75ohms, positive Sync: 0.3V (–3, +10dB)
20	○	–	Video input	1 V±3dB, 75ohms, positive Sync: 0.3V (–3, +10dB)
	–	○	Video input/Y (S signal)	1 V±3dB, 75ohms, positive Sync: 0.3V (–3, +10dB)
21	○	○	Common ground (plug, shield)	

○ connected

● unconnected (open)

* at 20 Hz–20 kHz

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!


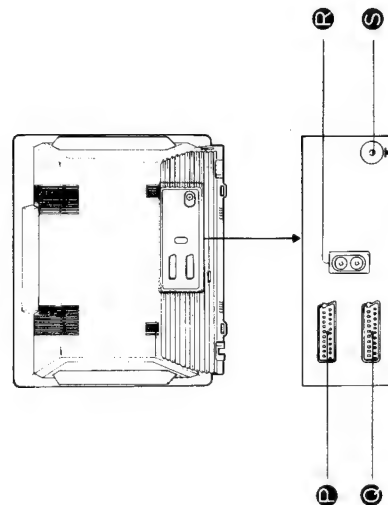
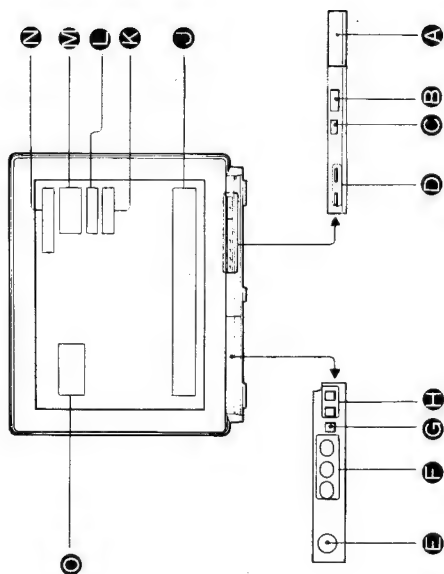
COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL		
1-1.	Function of Controls.....	4
1-2.	To Preset Channels.....	6
1-3.	Viewing Teletext.....	7
1-4.	Operating Other Equipment.....	8
1-5.	Connecting Other Equipment.....	8
2. DISASSEMBLY		
2-1.	Rear Cover Removal.....	9
2-2.	Chassis Assembly Removal.....	9
2-3.	A and J1 Boards Removal.....	9
2-4.	B and V Boards Removal.....	10
2-5.	Service Position	10
2-6.	Picture Tube Removal.....	11
3. SET-UP ADJUSTMENTS		
3-1.	Beam Landing.....	12
3-2.	Convergence.....	13
3-3.	Focus	15
3-4.	White Balance.....	15
4. CIRCUIT ADJUSTMENTS		
4-1.	A Board Adjustment.....	16
4-2.	B Board Adjustments.....	16
4-3.	D Board Adjustments.....	17
4-4.	J1 Board Adjustments.....	17
4-5.	V Board Adjustments.....	18
4-6.	Secondary Adjustment.....	18
5. DIAGRAMS		
5-1.	Block Diagram	21
5-2.	Circuit Boards Location	25
5-3.	Schematic Diagrams and Printed Wiring Boards	26
5-4.	Semiconductors.....	52
6. EXPLODED VIEWS		
6-1.	Chassis	53
6-2.	Picture Tube.....	54
7. ELECTRICAL PARTS LIST		55

SECTION 1 GENERAL

1-1. FUNCTION OF CONTROLS



ON THE SET

A Power Switch

Use it to switch the set on and off. When you switch the set on, the programme number of the station tuned in will be indicated in the on-screen display (M) for some seconds. In case of short breaks of operation, you can switch the set on and off using the Remote Commander (See «CONTROLS ON THE REMOTE COMMANDER»).

B Remote control detector

(See «CONTROLS ON THE REMOTE COMMANDER»).

C Standby/Response indicator

This indicator lights up when the TV set is in standby mode and it flashes each time the set receives signals from the Remote Commander.

D Stereo A/B indicators

During bilingual programmes one of the two indicators lights up, depending upon the selected channel A or B. When stereo programmes are broadcast both indicators light up. (See «CONTROLS ON THE REMOTE COMMANDER»).

Jacks and control panel (front of set)

The jacks and the control panel are situated behind a cover. Please press the arrow marking on the cover to open it.

E Headphones jack (stereo minijack)

Connect only stereo headphones.

F Input jacks

Video input jack (phono jack) (G-3 (yellow))
Audio input jacks (phono jacks) (G- (red and white)).

G Mode select button

Use this button to select either the channel select mode, volume adjustment (J) or the (G- input mode).

H Adjustment buttons +/-

Select at first the item to be adjusted using the Mode select button (G (P: channel select mode), J (volume) or (G- (input mode)), then adjust the item by pressing the + or - button.

You can also use these buttons to reset the picture and sound adjustments to the factory-set levels. For this purpose press both buttons simultaneously.

On-screen display

When you repeatedly press button (N) on the Remote Commander, the following information will be indicated on the screen in turn:

M Picture and sound adjustment items:

contrast, (O) colour, (P) brightness, (Q) bass, (R) treble or balance and their respective levels, as well as (S) mute, (T) reset, (U) space sound, (V) loudness and NICAM indications, when the respective buttons are pressed.

When you press button (N) on the Remote Commander, the following information will be indicated on the screen:

K TV-System: I (normal UK broadcast system)

L Channel number

M Programme number or input mode:

G-1, G-2, G-3;

N Indication of the station name

O AV output indication; 1, 2, 3 or TV (see «CONTROLS ON THE REMOTE COMMANDER»).

Connectors on the rear

P Euro-AV-connector 21-pin (G-2/G-3)

For connecting a VTR, 8 mm video camera recorder, a video disc player or in general devices with an S-Video-output.


Q Euro-AV-connector 21-pin (G-1)

For connecting a VTR, a computer etc. with RGB output.

R Audio-output-jacks (phono jacks) (G-)

For connecting audio equipment, e.g. an amplifier, so that the sound will be output at the audio equipment. In this case the volume is adjustable on the TV set.

S Aerial terminal T

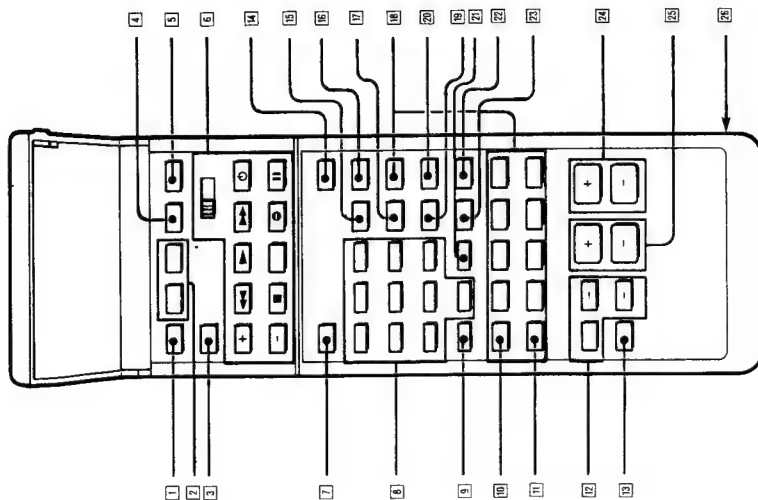

ON THE REMOTE COMMANDER

On the set there is a Remote Control detector (B) which receives the signals of the Remote Commander.

1 → **Presets-button** Used for selecting the Preset mode. See "TO PRESET CHANNELS".

2 → **Tuning +/- buttons**

a) Preset mode: Used for tuning in stations in the Automatic Station Search. See "TO PRESET CHANNELS".
b) TV-mode: Used for fine-tuning a station. See "ADDITIONAL FUNCTIONS".

3 **C... button (Clear)**

Used for clearing programme positions, so that the position will be skipped when the PROG +/- buttons are pressed. See "TO PRESET CHANNELS".

4 **Store button:** Used for storing channels. See "TO PRESET CHANNELS".

5 **TV-system-select-button**
This button has no function.

6 **Video selector and video operation buttons**
Used for operating Sony video equipment. For details see "OPERATING OTHER EQUIPMENT".

7 **Mute button**

By pressing this button the sound of the set will be switched off and by pressing it once more the sound will be restored.

8 **Number buttons**

a) Used to select programme positions or to input channel numbers (in the preset mode).
b) If the set is in the standby mode, press one of the number buttons to switch it on.
c) After pressing the output select button (9) the buttons 1-2 can be used to select the different output connectors.

9 **+/- Button**

In case of two digit numbers, press first this button and then the two respective number buttons (3).

10 **Button for On-screen display**

By pressing this button, information about the station tuned-in will be indicated on the screen. The indications will disappear after some seconds with the exception of the programme number and label, which will stay on the screen until the button is pressed once again.

11 **Time button**

In TV-mode: If teletext service is broadcast on the selected channel, press this button to display the current time on the screen and once again to make it disappear.

12 **+/- Buttons for picture and sound adjustments**

a) **TV-mode:**

The picture and sound adjustments are stored as standard values. You have, however, the possibility to change them to your individual liking. Press the button repeatedly until the required item is indicated in the on-screen display: contrast, colour, brightness, hue (only for NTSC colour system), bass, treble or balance. You can adjust the settings by pressing the + or - button.

b) **Preset-mode:** Use these buttons to name a station. See "TO PRESET CHANNELS".

13 **Reset-button**

By pressing this button the picture and sound adjustments are reset to the factory-set levels.

14 **Standby-button**

Press this button to switch the set into standby-mode. You can switch it on again by pressing the TV-button (5) or one of the number buttons (8). To return to the teletext mode, press (9) button. There will be a slight delay before the picture is restored.

Note

Use the Standby-button (14) only when switching the set off for a short period of time. If the set will not be used for a longer span of time, switch it off by using the Power switch (A).

15 **Input-Select-Button**

Press this button to select the audio- or video-signals input at the various input connectors. With each pressing of the button a different connector is selected. The following indications will appear sequentially:
1 → (RGB) → 2 → 2 → 3

16 **TV-Button**

When pressing this button the set returns from standby, video input- or teletext mode to the TV-mode.

17 **Output-Select-Button**

Press this button to select the audio- or video signals to be output at the (S)/E- connector.
With each pressing of the button a different output source will be selected. The following indications appear sequentially:
1 → 2 → 3 → TV

18 **Teletext operation buttons**

These buttons are used for teletext operation. See "VIEWING TELETEXT".

19 **Loudness button**

By pressing this button the high and low tones will be emphasized. Press the button again to restore the normal sound. The indications on the screen will be (ON) or (OFF).

20 **A/B button**

To select the audio channel of bilingual programmes. Usually the dubbed version is broadcast on channel A and the original sound is broadcast on channel B. This in the video input mode (Euro-AV-connectors) this possibility of selecting channels also exists for stereo VTR connection.

21 **C (Channel select) button**

Use this button for direct channel tuning in the TV-mode. See "ADDITIONAL FUNCTIONS".

22 **This button has no function on this set.**

23 **Space sound button**

Press this button to obtain special acoustic effects. Press it again to restore the normal sound. The indications on the screen will be (ON) or (OFF).

24 **PROG +/- buttons**

TV-mode: Use these buttons to scan the available programmes up- or downwards.
Preset mode: Use these buttons to scan the available channels up or downwards.

25 **+/- buttons for adjusting the volume**

26 **Battery compartment (on the rear)**

1-2. TO PRESET CHANNELS

Use the buttons on the Remote Commander for presetting. In total there are 60 programme positions at your disposal for storing channels.


There are two different ways of tuning in channels:

1. Direct Channel Tuning

If you know the channel number of a station you can input it directly.


2. Automatic Station Search

The set searches automatically for stations.

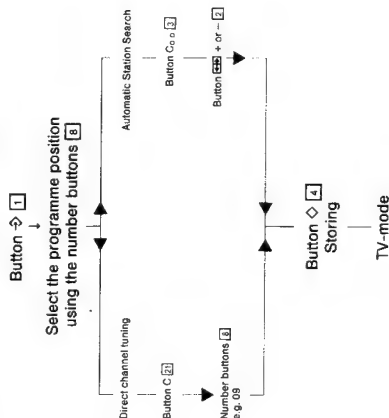


1. Direct Channel Tuning


1. Press the Preset button \diamond [1]. You are now in the preset mode of the set. The programme number in the on-screen display \mathcal{N} starts blinking.

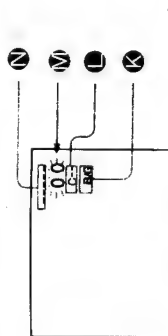


2. With the buttons PROG +/- [24] or the number buttons [0-9] you can select the programme position. In case of two-digit numbers, press first the button +/- [24] and then the two number buttons.

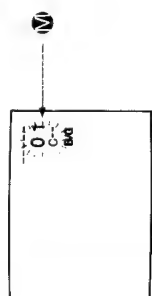

3. Press button C 27 [27]. The indication «C» and the channel number start blinking in the display \mathcal{L} . Select the channel number with two digits (e.g. 22) using the number buttons [0-9].

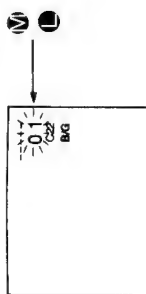

4. Press the button \diamond [1] in order to store the channel and to return to the TV-mode.

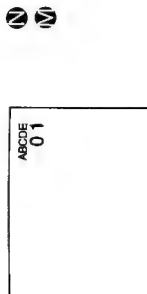

If you want to store further channels, repeat the steps 1 to 4.

2. Automatic Station Search

1. Press button \diamond [1]. You are now in the preset mode of the set. The programme number in the on-screen display \mathcal{N} starts blinking.

2. With the PROG buttons +/- [24] or the number buttons [0-9] you can select the programme position. In case of two-digit numbers, first press button +/- [24] and then the two number buttons.

3. If there is already a stored station on the selected programme position, press button C 3 [3].

4. Press one of the tuning buttons \mathcal{N} +/- [2] to start the station search. The search will be interrupted as soon as a station is tuned in. Press the tuning buttons repeatedly until you find the desired station.

5. If you have found the desired station, press button \diamond [1]. Now the selected station is stored and you are back in the TV-mode.

6. If you want to store further stations, repeat the steps 1-5.


ADDITIONAL FUNCTIONS

Direct Channel Tuning in the TV-mode

You have the possibility to tune in channels directly when the set is in the TV-mode without storing these channels. Example: If you tune in channel number 32 and then switch the set off or change the programme position, this channel will be cancelled.

1. Press the button C 27 [27]. In the display \mathcal{L} the indication «C» will appear.


2. Select the channel number with two digits using the number buttons [0-9] (e.g. for channel 4 press first 0, then 4). The indication on the screen will disappear within some seconds.

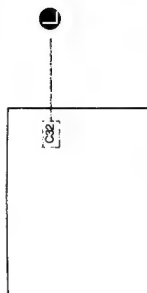

Manual Fine Tuning

If the reception of a channel is not satisfactory, you have the possibility to deactivate the Automatic Fine Tuning, which is usually in operation during presetting in order to tune in the best possible picture.

Press one of the tuning buttons \mathcal{N} +/- [2] to fine-tune a channel. The Automatic Fine Tuning will be restored when the respective programme position is pressed once again.

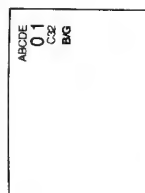

Notes

- If you press the preset button \diamond [1] instead of button \diamond [1] the set will return to the TV-mode without storing the channels.
- If you press a wrong programme or a channel number, an «x» will be displayed on the screen.
- When pressing two number buttons, the second number button should be pressed within 5 seconds after the first one, otherwise the operation will be cancelled.

1-3. VIEWING TELETEXT

The set is capable of receiving NICAM, which is a newly developed digital stereo broadcast system. NICAM programmes are broadcast in three ways: stereo, bilingual or monoaural sound besides the regular (FM mono) sound, and you can select the sound you want to hear by pressing the A/B button [A/B]. Each time the button is pressed, the sound changes sequentially, as indicated with arrows in the following chart.

NICAM sound being broadcast	The sound you hear (Select with the A/B button [A/B])
Stereo	Stereo → Regular → Stereo (etc.)
Bilingual	A → B → Regular → A (etc.)
Monoaural	A → Regular → A (etc.)

Whenever a NICAM broadcast is received, the [NICAM] indication appears on the screen and disappears after a few seconds. When the NICAM programme ends, the [NICAM] indication appears for a few seconds.

The sound being broadcast	The selected sound	[NICAM] indicators		NICAM indication on the screen
		A	B	
NICAM + Regular	Stereo	x	x	x
	A	x	o	
	B	o	x	
Regular	Regular	o	o	o
	Regular	o	o	

x means that the indicator [NICAM] lights up or the indication appears.
o means that the indicator does not light up or the indication is not displayed.

To view the teletext service, use the Remote Commander. The buttons for teletext operation are indicated in green.

Operation

- 1 Select the TV channel for the desired teletext service. If the signal is weak, teletext errors often occur.
- 2 Press [TEXT/MIX] (TEXT/MIX) to display the teletext service.
- 3 Key in the three digits of the desired page using the number buttons. If an error is made, complete the three-digit sequence by keying in any digit. Then, re-enter the correct page number.

The requested teletext page is displayed.

To request the index page

Press [INDEX] (INDEX). If the necessary signal is not being broadcast, page 100 is displayed.

To access the next or preceding page

Press [PAGE +] or [PAGE -].

To superimpose the teletext display on the picture (MIX)


Press [MIX] twice from the TV mode. Press [MIX] again to return to the TEXT display.

To suppress the teletext display so that the picture is restored

Press [TEXT CLEAR] (text clear). This button can be operated from both the text and mix displays.

To prevent a teletext page from being updated/changed

Press [HOLD] (HOLD). The HOLD symbol appears on the screen. To resume normal teletext reception, press [TEXT/MIX].



To resume normal teletext reception, press [TEXT/MIX].

To enlarge the teletext display

Press [ENLARGE] once to enlarge the upper half of the display, press again to enlarge the lower half of the display. And press again to return to the normal display.

To reveal concealed information such as answers to a quiz page to be displayed

Press [REVEAL] (REVEAL). Press again to conceal the answers.

To watch the TV programme while waiting for a requested page to be displayed

- 1 Request the new page.

To return to the TV mode, press TV [TV] on the Remote Commander.

The teletext service can be displayed directly from the standby mode by pressing [TEXT/MIX] (TEXT/MIX).

To receive the teletext service of a different TV channel

- 1 Press TV [TV] to return to the TV mode.
- 2 Select the desired TV channel.
- 3 Press [TEXT/MIX] (TEXT/MIX).

Note

Buttons not referred to in the text do not operate.

- 2 Press [TEXT] to watch the TV programme. The requested page number and other data appear at the top of the screen. When the requested page has been captured, the page number is displayed in the top left-hand corner of the screen.



To view this page, press [TEXT] (TEXT).

To have a requested page displayed at a pre-determined time

- 1 Request a time coded page (e.g. alarm page).
- 2 Press [TP ON] (TP ON). "T ****" will appear at the bottom of the screen.



- 3 Enter your request time with the number buttons, using four digits. For example, 07:30.



To watch the TV programme until the requested time, press [TEXT CL] (TEXT CL). At the requested time, the page number will be displayed at the bottom of the screen.

To view this page, press [TEXT] (TEXT).

To cancel the request, first ensure that the teletext page is displayed, then press [TP OFF] (TP OFF).

FASTEXT Operation

FASTEXT Teletext enables you to access pages quickly and conveniently with one key operation.

When a FASTEXT page is broadcast a colour coded menu will appear at the bottom of the screen. Each coloured prompt relates to the coloured keys on the Remote Commander. Pressing one of these will select the page described by the prompt.

Selection may also be made by entering the three digit page number in the normal way.

Correct FASTEXT operation relies on the necessary signals being transmitted by the Broadcasting Authorities. It is possible that some Broadcasters will not support this transmission.

If FASTEXT is not transmitted, the decoder will operate as outlined above.

1-4. OPERATING OTHER EQUIPMENT

To view the input picture

Press the **Input** button repeatedly until the desired input signal indication appears on the screen.

1: to view the audio and video signal input through the **1** connector on the rear.

2: to view the RGB signal (i.e. from a computer, etc.) input through the **2** connector.

3: to view the audio and video signal input through the **3** connector on the rear.

4: to view the S video signal (from a VTR equipped with an S video output) input through the **4** connector.

5: to view the audio and video signal input through the **5** connectors and the audio input jacks (yellow, white and red) on the front.

You can also select the desired input mode using the buttons on the front of the set. Select the **Input** mode with the mode select (**P** → **1** → **2**) button then press **+** or **-** button.

To return to the TV mode, press the TV-button **TV**.

To select the signal to be output from the 2/3 connector
Press the **2/3** button repeatedly until the desired output source is indicated on the screen:

1: The audio and video signal input through the **1** connectors is output from the **2/3** connector.

2: The audio and video signal input through the **2/3** connector is output from the **2/3** connector.

3: The audio and video signal input through the **3** connectors is output from the **2/3** connector.

TV: The audio and video signal input through the **TV** aerial terminal (i.e. usually the TV signal) is output from the **2/3** connector.

The indication will disappear after a few seconds.

Note

The TV-signal is always output at the EURO-AV connector **1**.

To operate Sony video equipment

The video operation buttons **1** on the Remote Commander can operate certain VTRs and video disc players manufactured by Sony.

1. Switch the video selector to the desired position.

VIDEO 1: to operate Sony Betamax VTR and SLV 202 VHS.

VIDEO 2: to operate Sony 8 mm VTR.

VIDEO 3: to operate Sony VHS VTR.

MDP: to operate Sony video disc player including a multi disc player.

2. Press the operation button(s) to start operation.
PROGR +/–: to select the desired programme on the VTR.

▶ : to start playback, or to release the pause mode

■ : to stop the tape or the disc

◀ : to rewind the tape from stop mode or to rapidly go back to the desired position on the disc or tape from playback mode

▶▶ : to fast forward wind from stop mode or rapidly advance the tape or disc to the desired position from playback mode

● : to start recording on the VTR


Be sure to press this button and the one on the right simultaneously

⏻ : to switch the video equipment on and off

■ : to stop the tape or the disc temporarily (pause)

Press again to release pause mode

1-5. CONNECTING OTHER EQUIPMENT

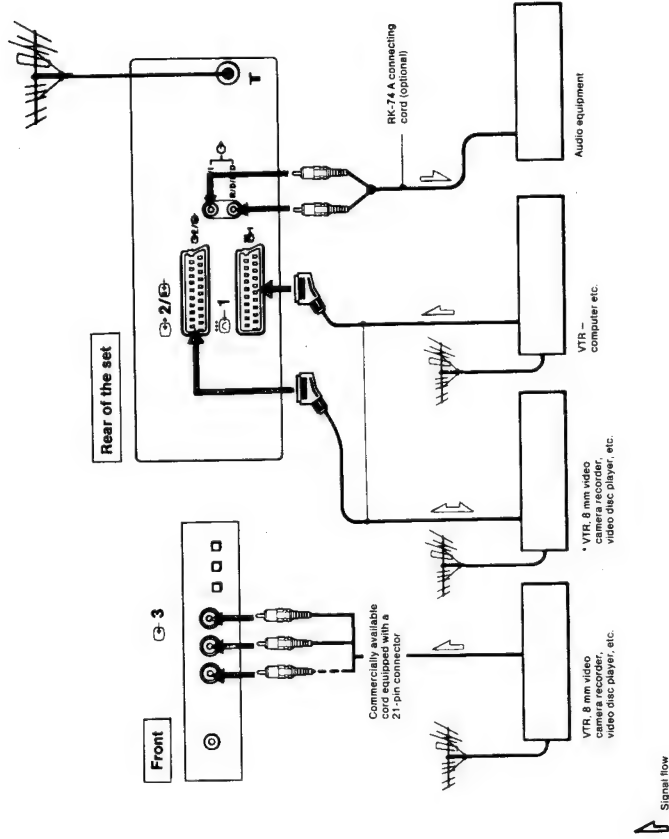

- Connect the S video output of the VTR, etc. here.

Notes


- It is also possible to connect a VTR using the **TV** terminal. In this case, connect the aerial to the aerial terminal of the VTR.
- Move the VTR away from the TV if the picture or the sound is distorted.
- Computers which have RGB output only can be connected to the **2/3** input connector.

S video input (Y/C input)
Video signals may be separated into Y (luminance or brightness) and C (chrominance) signals. Usually these two signals are combined in a VTR and output as one signal, and supplied to a TV. Separation of the Y and C signals prevents them from interfering with one another, thereby improving picture quality (especially in luminance). This set is equipped with a S video input through which these separated signals can be input directly. Connect the S video output jack on the VTR to the S video input on this set.


Note: Not all VTR's are equipped with S video output capability. (Refer to VTR operating manual.)

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

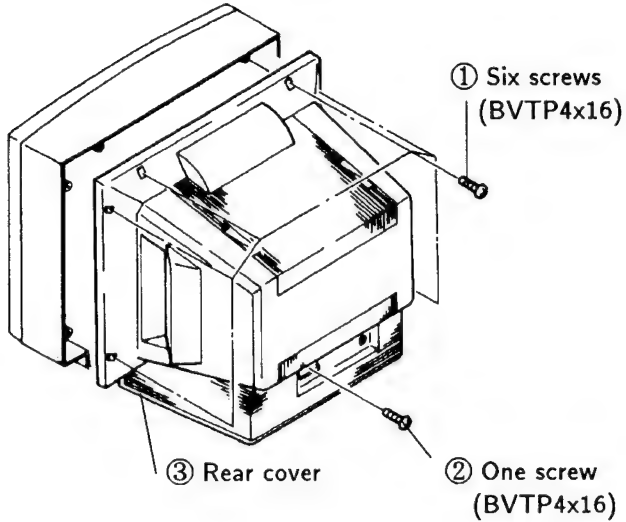


2-2. CHASSIS ASSEMBLY REMOVAL

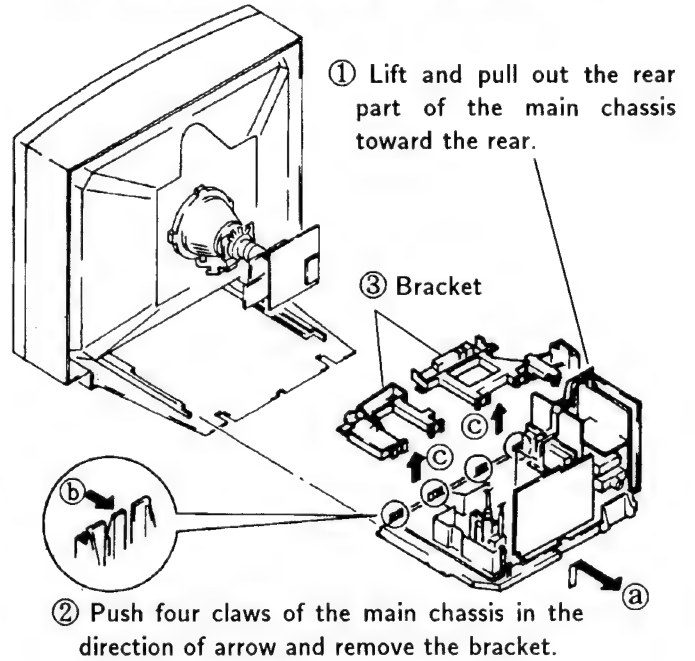

2-3. A AND J1 BOARD REMOVAL

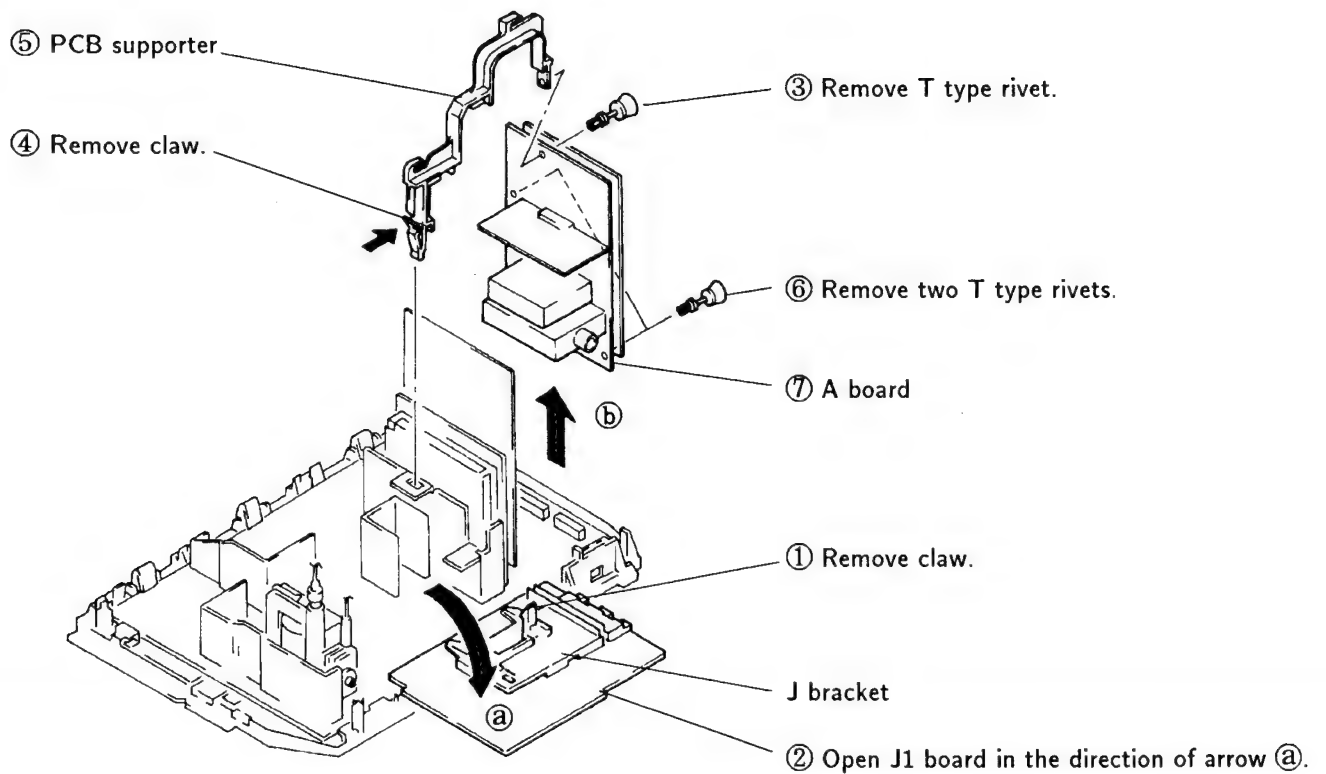


2-4. B AND V BOARDS REMOVAL

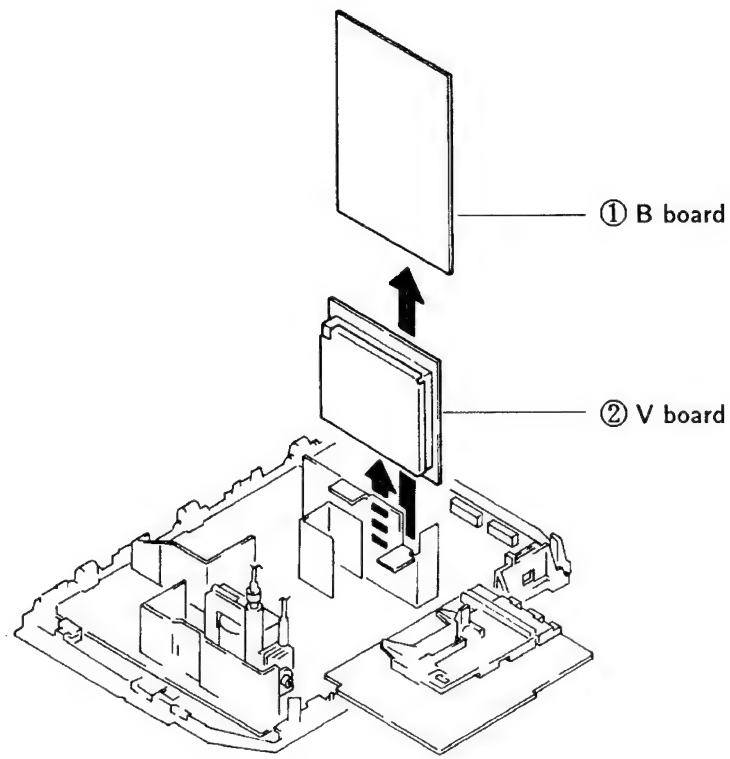


2-5. SERVICE POSITION

* Remove the connector bracket and then perform the following servicing.
(Refer to 2-2. CHASSIS ASSEMBLY REMOVAL.)

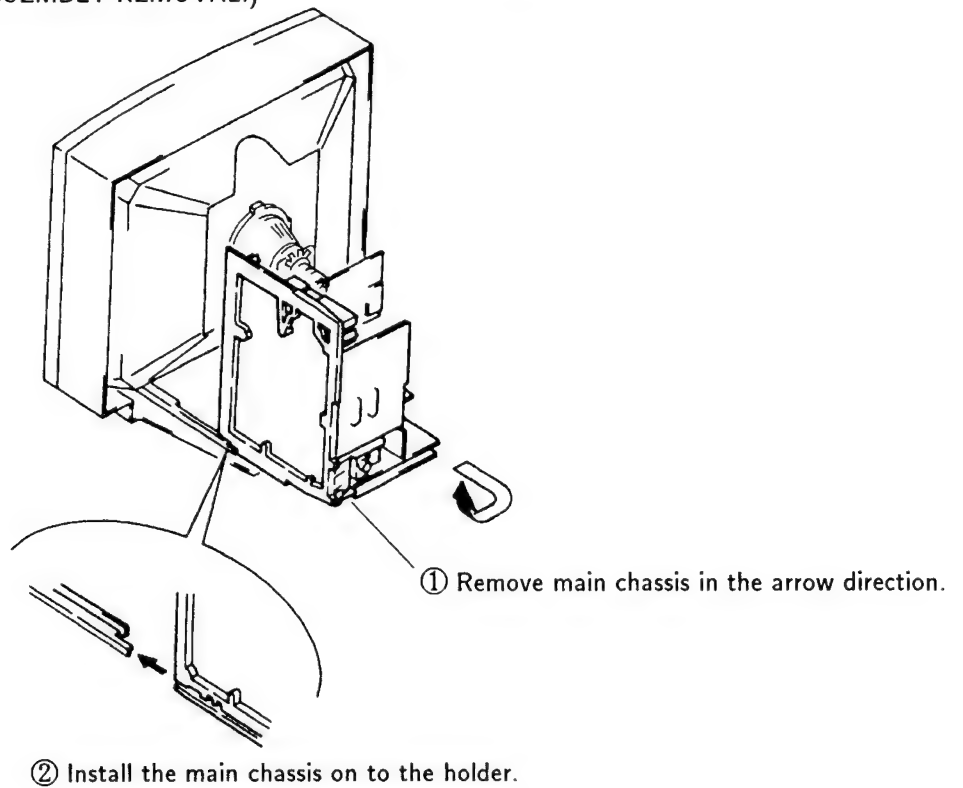


2-6. PICTURE TUBE REMOVAL

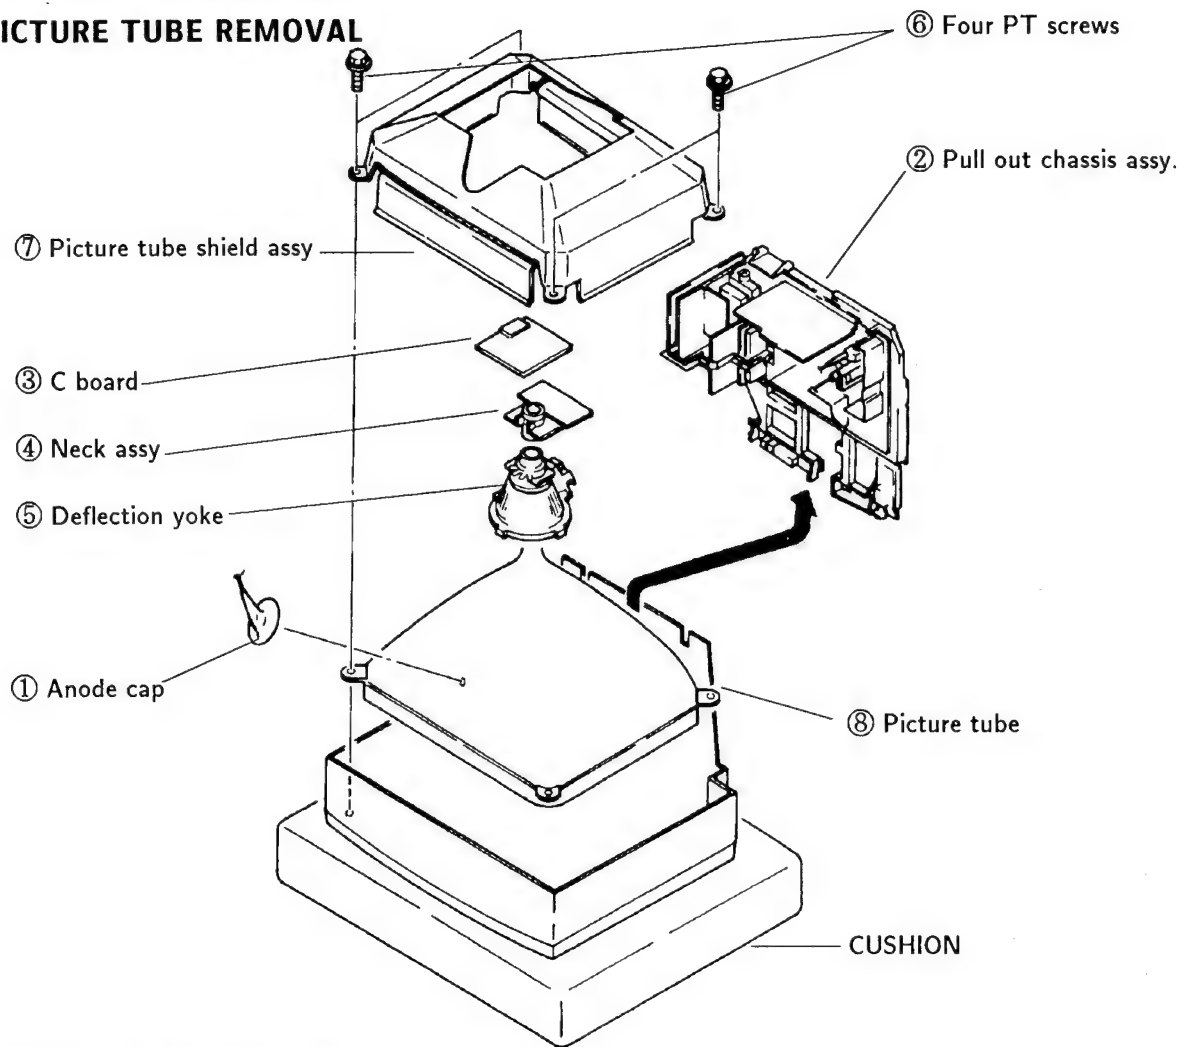


• REMOVAL OF ANODE-CAP

• REMOVING PROCEDURES

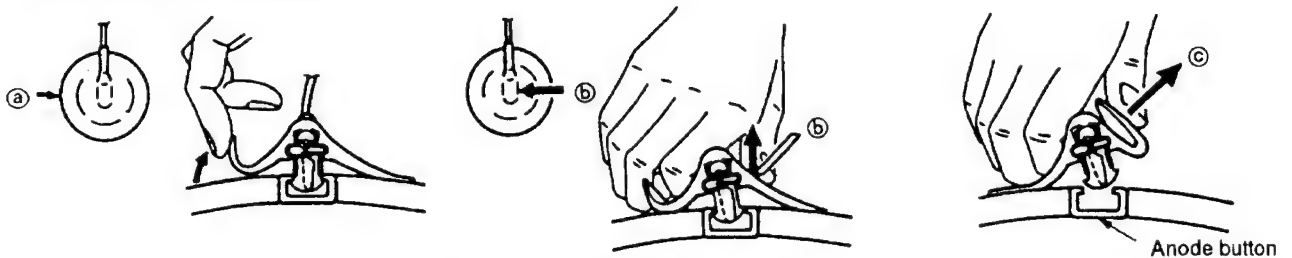

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

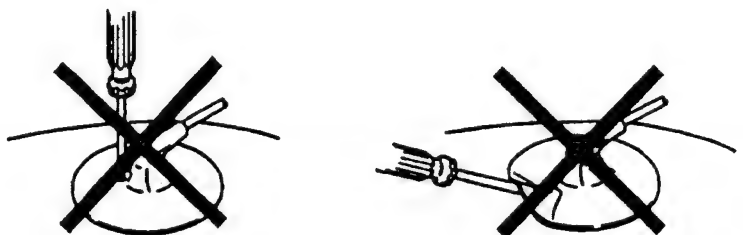

SET-UP ADJUSTMENTS

- Contrast80%
(or remote control normal)
⚙ Brightness50%

- Note:** Testing equipment required
1. Color bar/pattern generator
 2. Degausser
 3. DC power supply
 4. Digital multimeter
 5. Oscilloscope



1. Color bar/pattern generator
2. Degausser
3. DC power supply
4. Digital multimeter
5. Oscilloscope

Preparations :

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
Contrast } normal
Brightness }
2. Position neck ass'y as shown in Fig 3-2.
3. Set the pattern generator raster signal to red.
4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side.
(See Figures 3-1 through 3-3.)
5. Move the deflection yoke forward and adjust so that entire screen is red. (See Figure 3-1.)
6. Switch the raster signal to blue, then to green and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
(See Figure 3-4.)

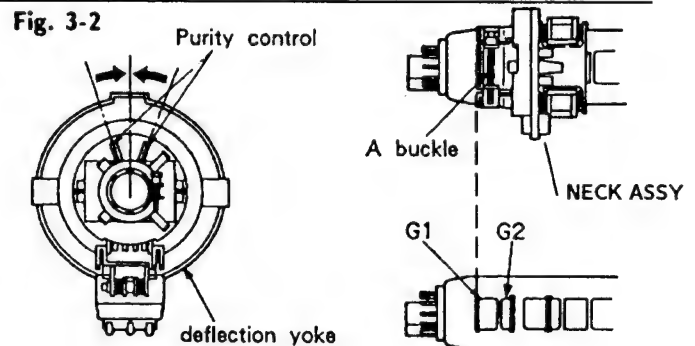


3-2. CONVERGENCE

Preparations :

- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) Horizontal and vertical static convergence




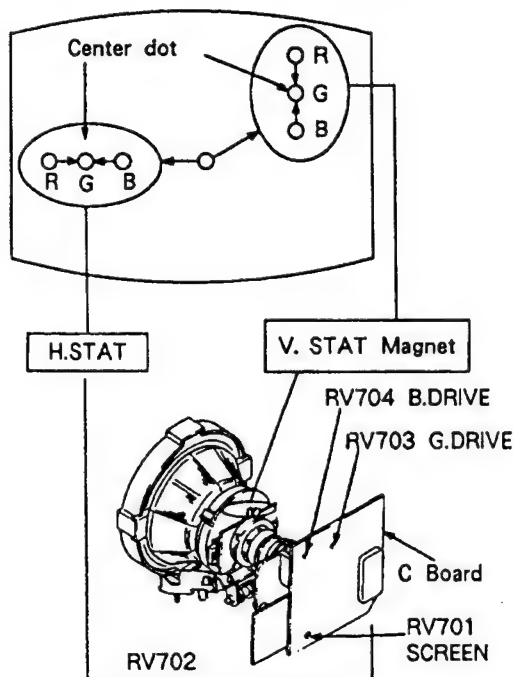


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor can not bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V. STAT magnet influence each other's settings.)


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.



4. If the V.STAT magnet is moved in the direction of the ① and ② arrows, the red, green, and blue points move as shown below.

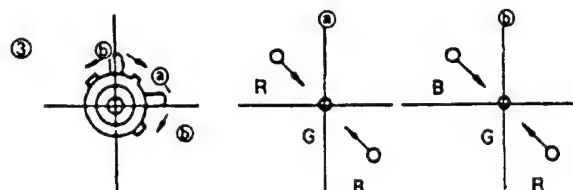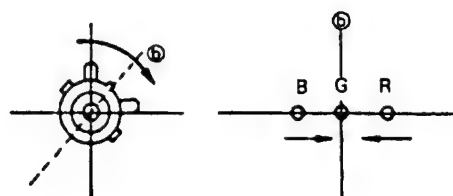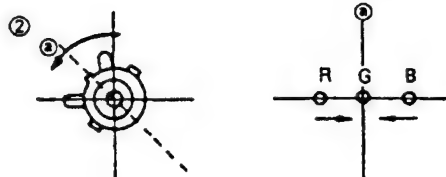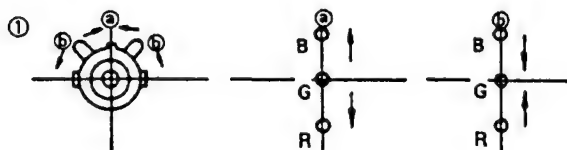


● Operation of BMC (Hexapole) Magnet

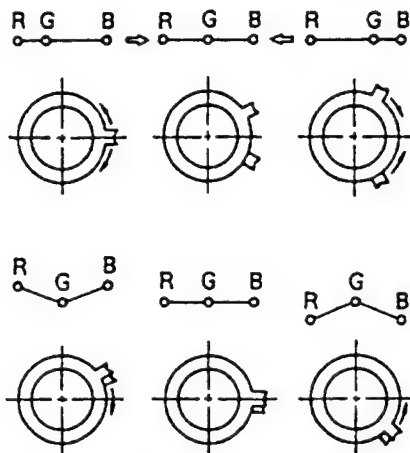

- The respective dot operations resulting from the operation of each magnet are not completely independent, so be sure to perform adjustment while tracking.

Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

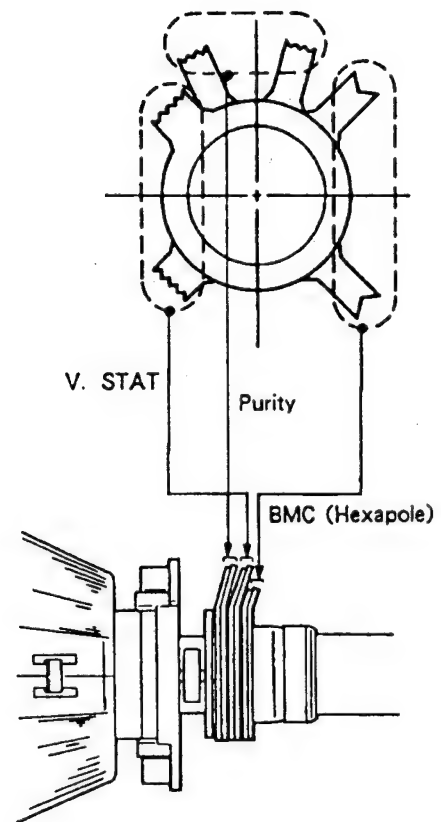


(2) Dynamic convergence adjustment

Preparations :


Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.

1. Slightly loosen the deflection yoke screws.
2. Remove the deflection yoke spacer.


3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the defelection yoke spacer.

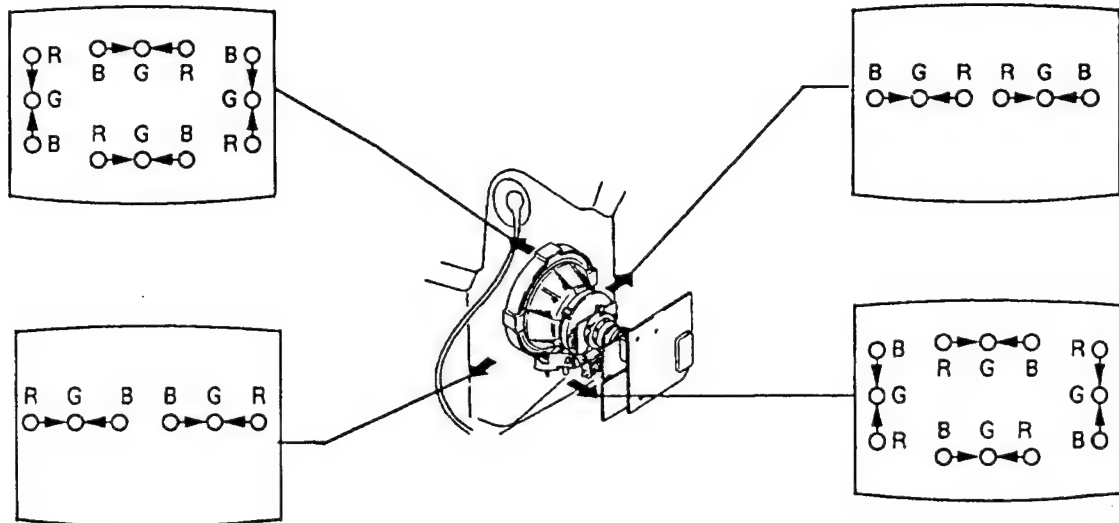

(3) Screen corner convergence

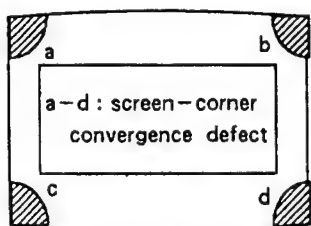


Install the permalloy assembly for the section with faulty.

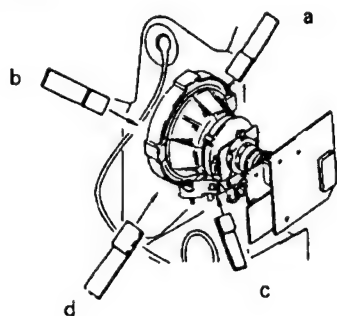

Permalloy

3-3. FOCUS

Adjust the focus to optimize the screen.

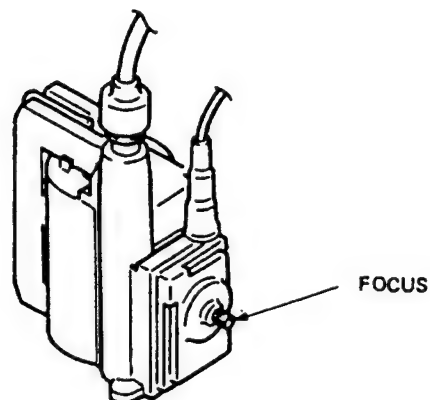

3-4. WHITE BALANCE

[Screen G2 setting]

1. Input the dot signal from the pattern generator.
2. Set the picture brightness control to its lowest level.
3. Apply 170V DC to the R, G, and B cathodes with an external power supply.
4. While watching the picture, adjust G2 control RV701 (Screen) to the point just before the return lines disappear.


[White balance adjustment]

1. Input an all-white signal from the pattern generator.
2. Set the picture brightness and color controls to their normal levels.
3. Use the RV704 (B Drive) and RV703 (G Drive) to adjust white balance.

In the adjustments below, have the picture color and brightness settings at their normal levels unless there is a specific instruction to the contrary.

SECTION 4 CIRCUIT ADJUSTMENTS


4-1. A BOARD ADJUSTMENT

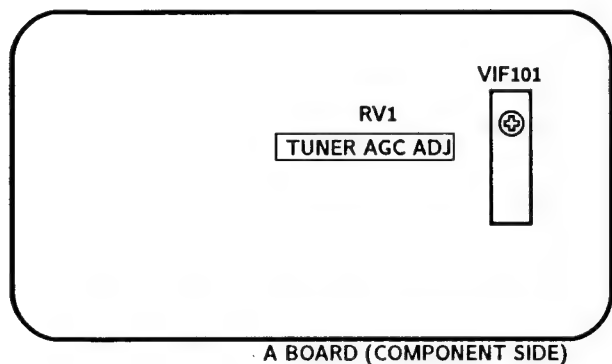

TUNER AGC ADJUSTMENT (VIF101, RV1)


1. Align with an appropriate signal between stations.
2. Adjust RV1 so that snow noise and cross modulation just disappear from the picture.

4-2. B BOARD ADJUSTMENTS

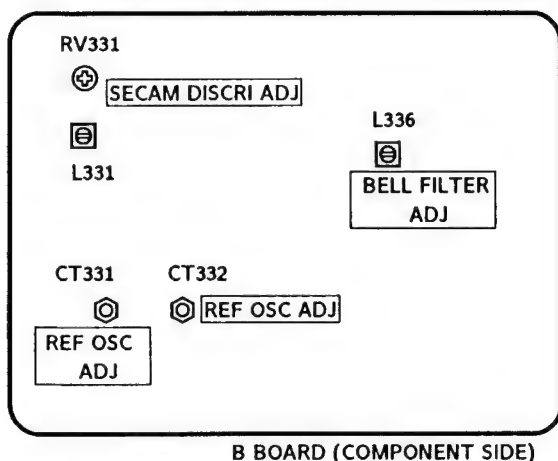


BELL FILTER ADJUSTMENT (L336)

1. Input a SECAM color bar signal.
2. Connect the oscilloscope to the emitter of Q335.
3. Adjust L336 so that the waveform is flat.

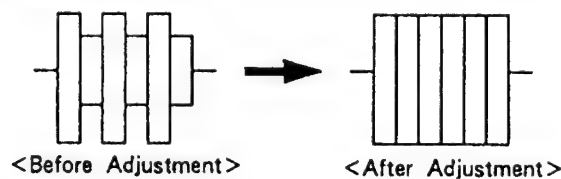

DISCRIMINATION ADJUSTMENT (RV331 and L331)

1. Input a SECAM color bar signal.
2. Connect the oscilloscope to pin ① of IC331.
3. Adjust RV331 so that the white and black sections of the waveform at pin ① come to the 0 level.
4. Connect the oscilloscope to pin ③ of IC331.
5. Adjust L331 so that the white and black sections of the waveform at pin ③ come to the 0 level.

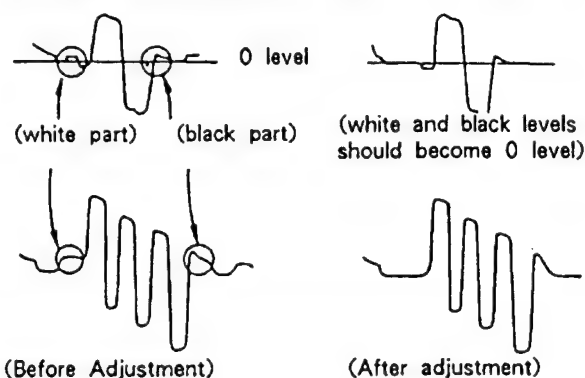


REFERENCE OSCILLATOR ADJUSTMENT (CT332 8.8MHz)

1. Input a PAL color bar signal.
2. Ground pin ⑪ of the IC331.
3. Adjust CT332 to obtain synchronization.

REFERENCE OSCILLATOR ADJUSTMENT (CT331 7.16MHz)

1. Input an NTSC color bar signal.
2. Ground pin ⑪ of IC331.
3. Adjust the CT331 to obtain synchronization.
4. Remove the jumper grounding pin ⑪ of IC331.

4-3. D BOARD ADJUSTMENTS

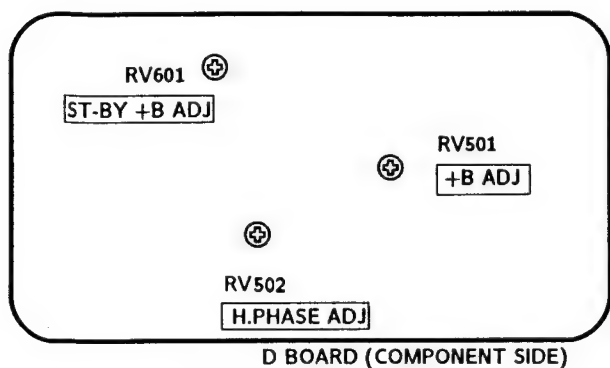

+B ADJUSTMENT (RV501)


1. Connect the digital multimeter to TP91.
2. Adjust RV501 to obtain $135 \pm 0.2V$.

ST-BY +B ADJUSTMENT (RV601)


1. Put the system into ⏻ standby mode (remote commander).
2. Connect the digital multimeter to TP91.
3. Adjust RV601 to obtain $135 \pm 3V$.
4. Take the system out of ⏻ standby mode (remote commander).

H.PHASE ADJUSTMENT (RV502)


1. Input a PAL color bar signal.
2. Set the picture and brightness controls to their normal levels.
3. Set RV1508 (H.CENT) to its mechanical center.
4. Connect the oscilloscope to pin ⑪ (SCP) of IC 501.
5. Rotate RV502 to adjust to $5.5 \pm 0.1\mu s$.

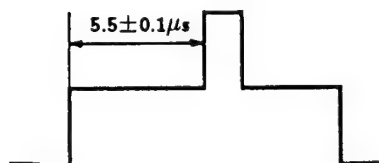

4-4. J1 BOARD ADJUSTMENTS

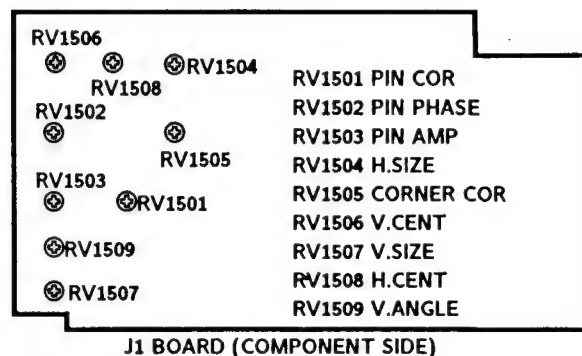

RV1508
H. CENT (HORIZONTAL CENTER)



RV1504
H. SIZE (HORIZONTAL SIZE)




RV1506
V. CENT (VERTICAL CENTER)



RV1507
V. SIZE (VERTICAL SIZE)




RV1509
V. ANGLE (VERTICAL ANGLE)



RV1503
PIN AMP (PINCUSHION AMPLIFIER)



RV1502
PIN PHASE (PINCUSHION PHASE)




RV1501
PIN. COR (PINCUSHION CORRECT)



RV1505
CORNER COR (CORNER CORRECT)



4-5. V BOARD ADJUSTMENTS

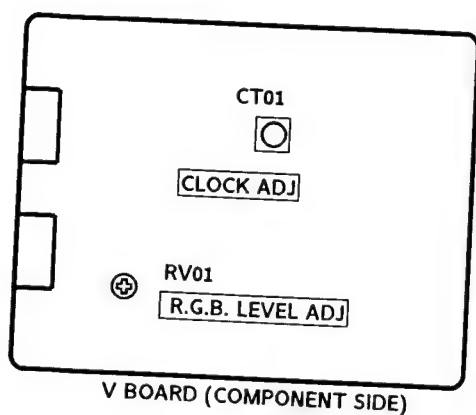

CLOCK ADJUSTMENT (CT01)

1. Remove the V-1 connector pin③.
2. Put the system into text mode.
3. Adjust CT01 so that the picture does not move.

RGB LEVEL ADJUSTMENT (RV01)

1. Maximize the picture setting.
2. Adjust RV01 so that the RGB output is 0.75V.

4-6. SECONDARY ADJUSTMENT

SUB BRIGHTNESS ADJUSTMENT



1. Set the system to receive a test pattern.
2. Press $\rightarrow \cdot \leftarrow$ on the remote commander to put the system into normal mode.
3. Switch off the power.
4. While depressing the adjusting buttons + and - simultaneously, turn on the power. (SUB mode is obtained)
5. Minimize the \bullet contrast setting.
6. Adjust the \odot brightness control so that the gray scale 0 IRE section is cut off completely and the 20 IRE section is barely glowing.
7. Depress the \diamond (store) button of the remote commander.
(SUB mode is released)

If there is no test color pattern

1. Set the system to receive a color pattern.
2. Press on the remote commander to put system into normal mode.
Set the \odot color to its normal state.
- 3-5. are the same as above.
6. Since 20 IRE is nearly blue, adjust the \odot brightness control so that the blue barely glows.
7. is the same as above.
8. Press $\rightarrow \cdot \leftarrow$ on the remote commander to put the system into normal mode.

SUB COLOR ADJUSTMENT


1. Set the system to receive color bars.
2. Press $\rightarrow \bullet \leftarrow$ on the remote commander to put the system into normal mode.
3. Cut off the power.
4. While depressing the adjustment buttons + and - simultaneously, turn on the power. (SUB mode is obtained)
5. Adjust the color control so that the B out waveform (pin ② of C board connector CNC72) is as shown in the figure below.
6. Depress the \diamond (store) button of the remote commander. (SUB mode is released)

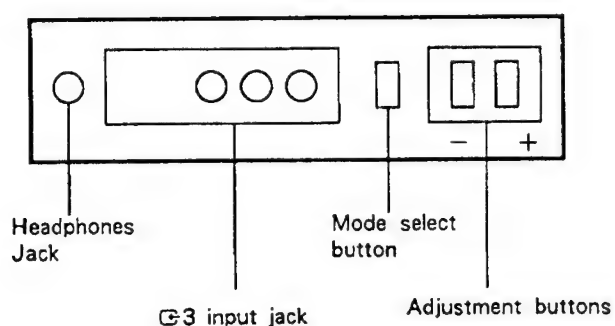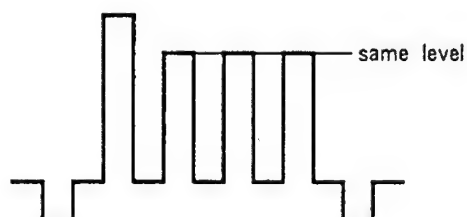


MEMO


1


5-1. BLOCK DIAGRAM

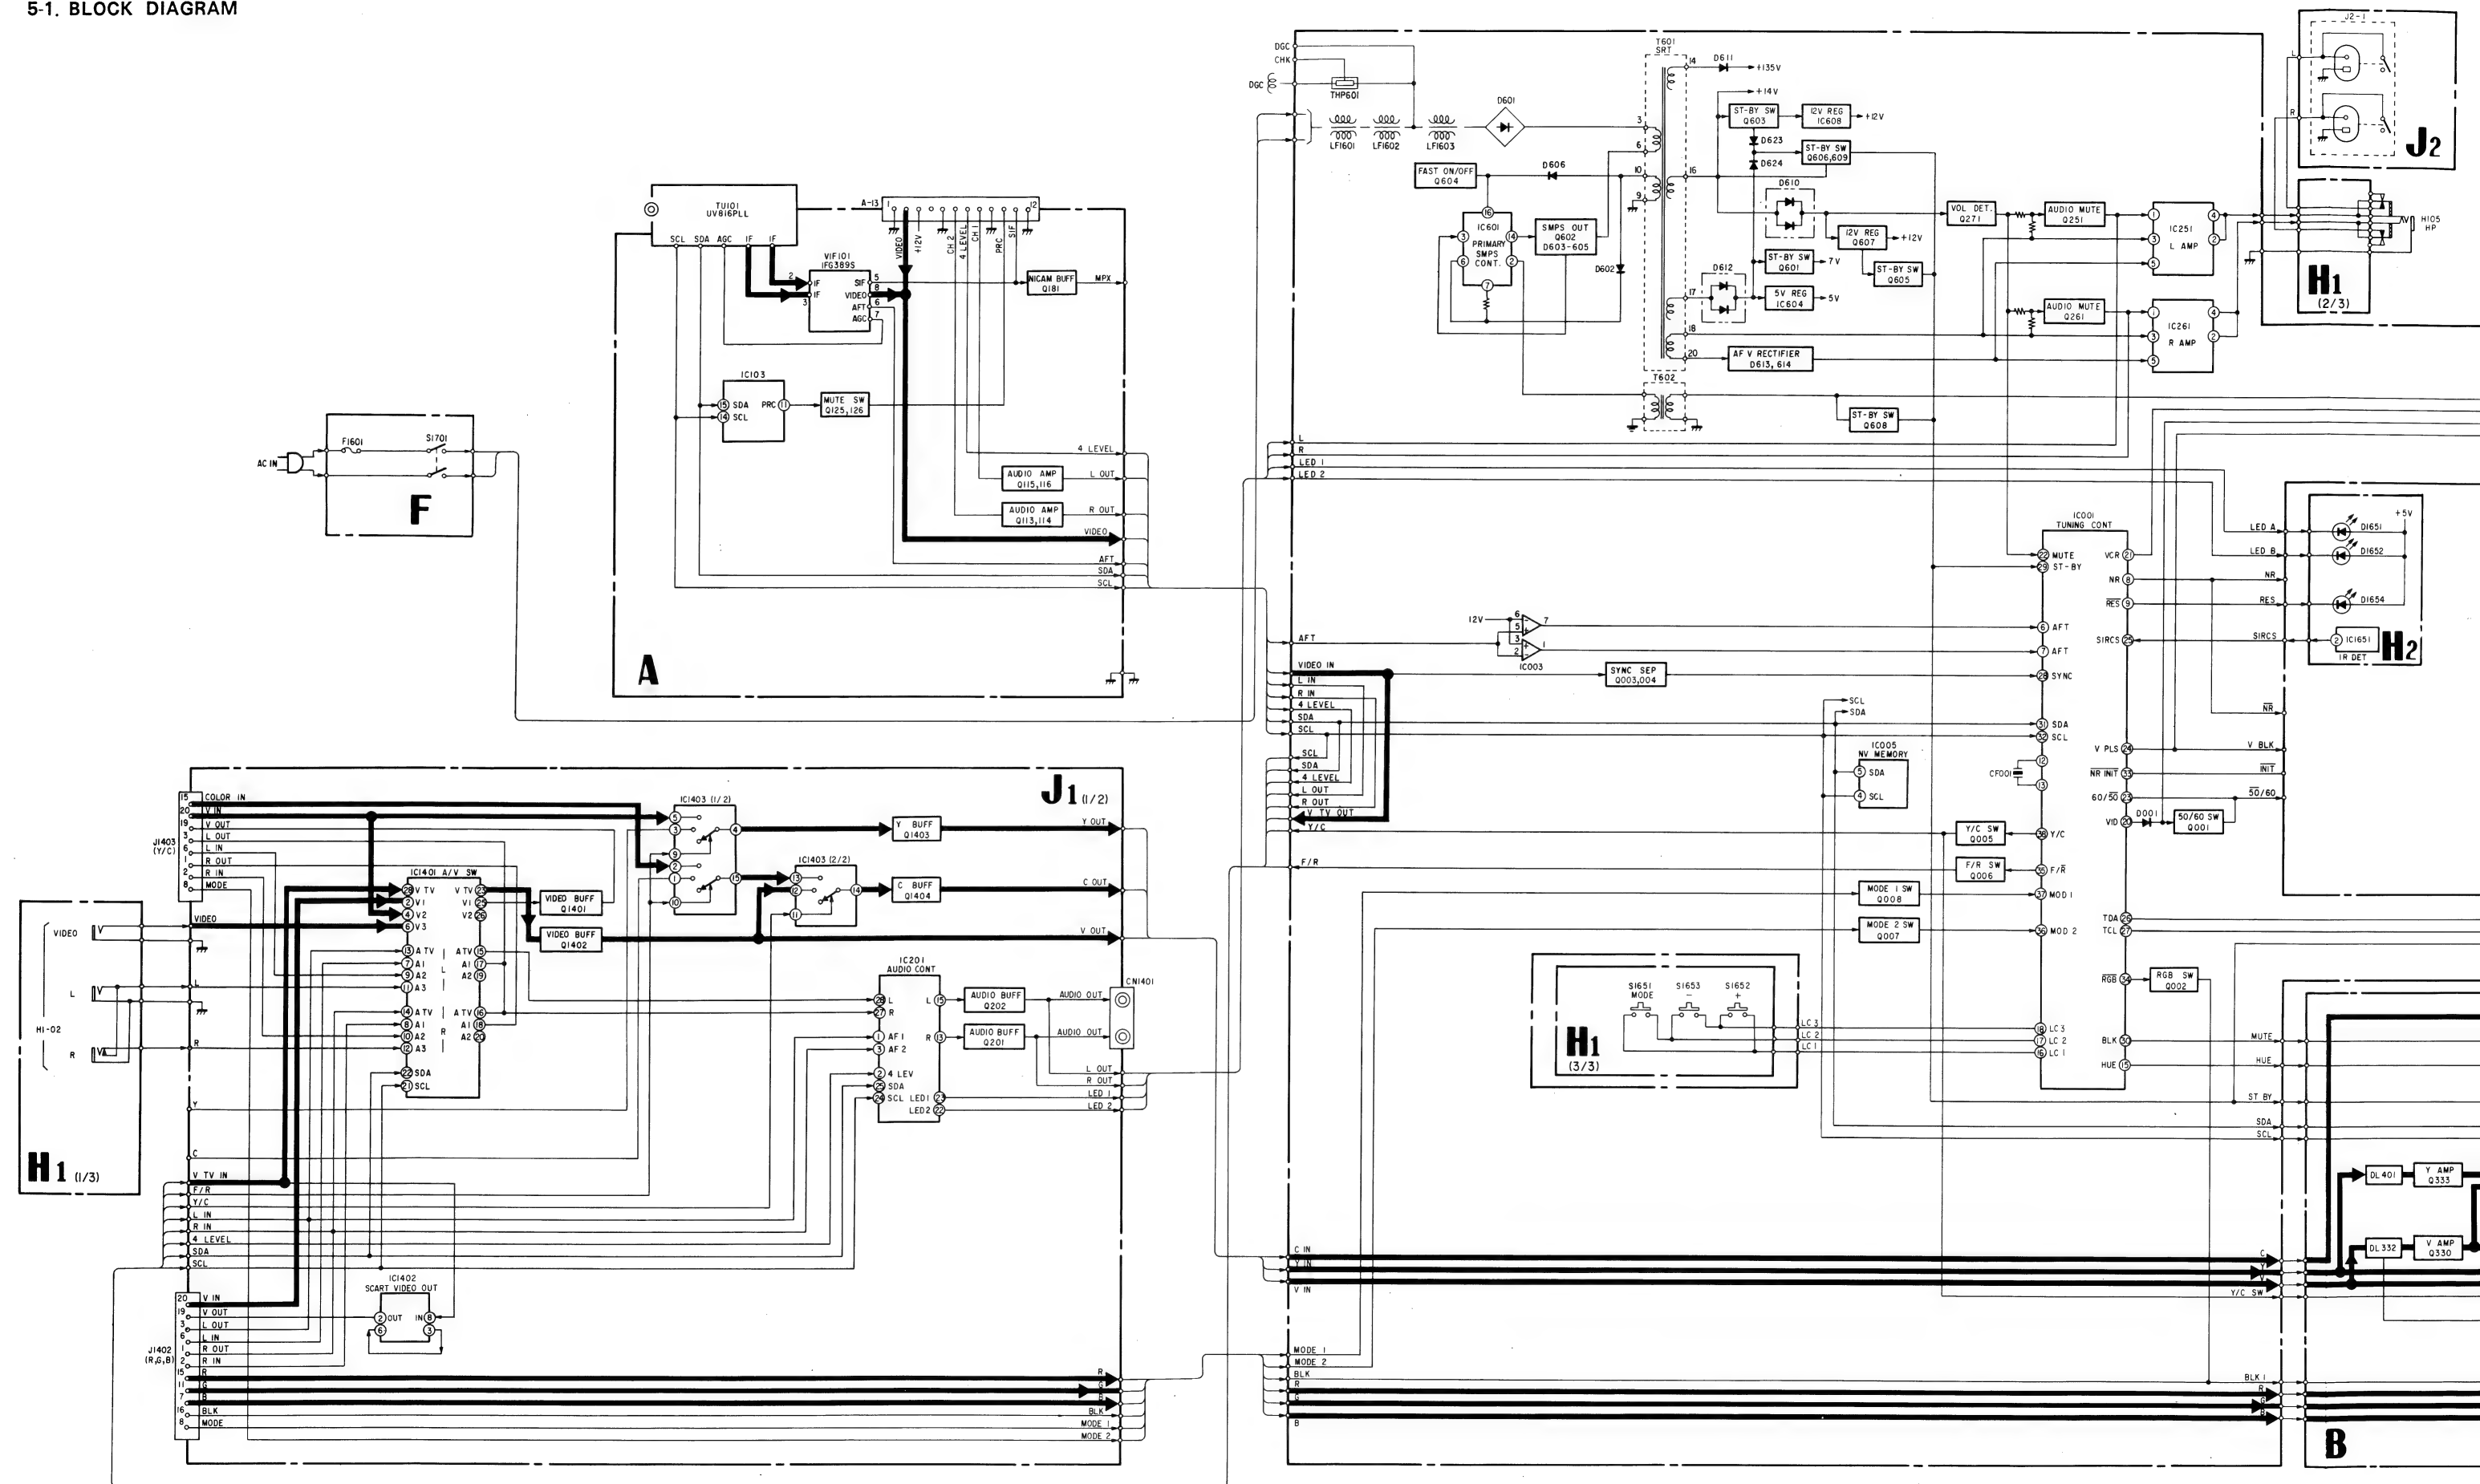

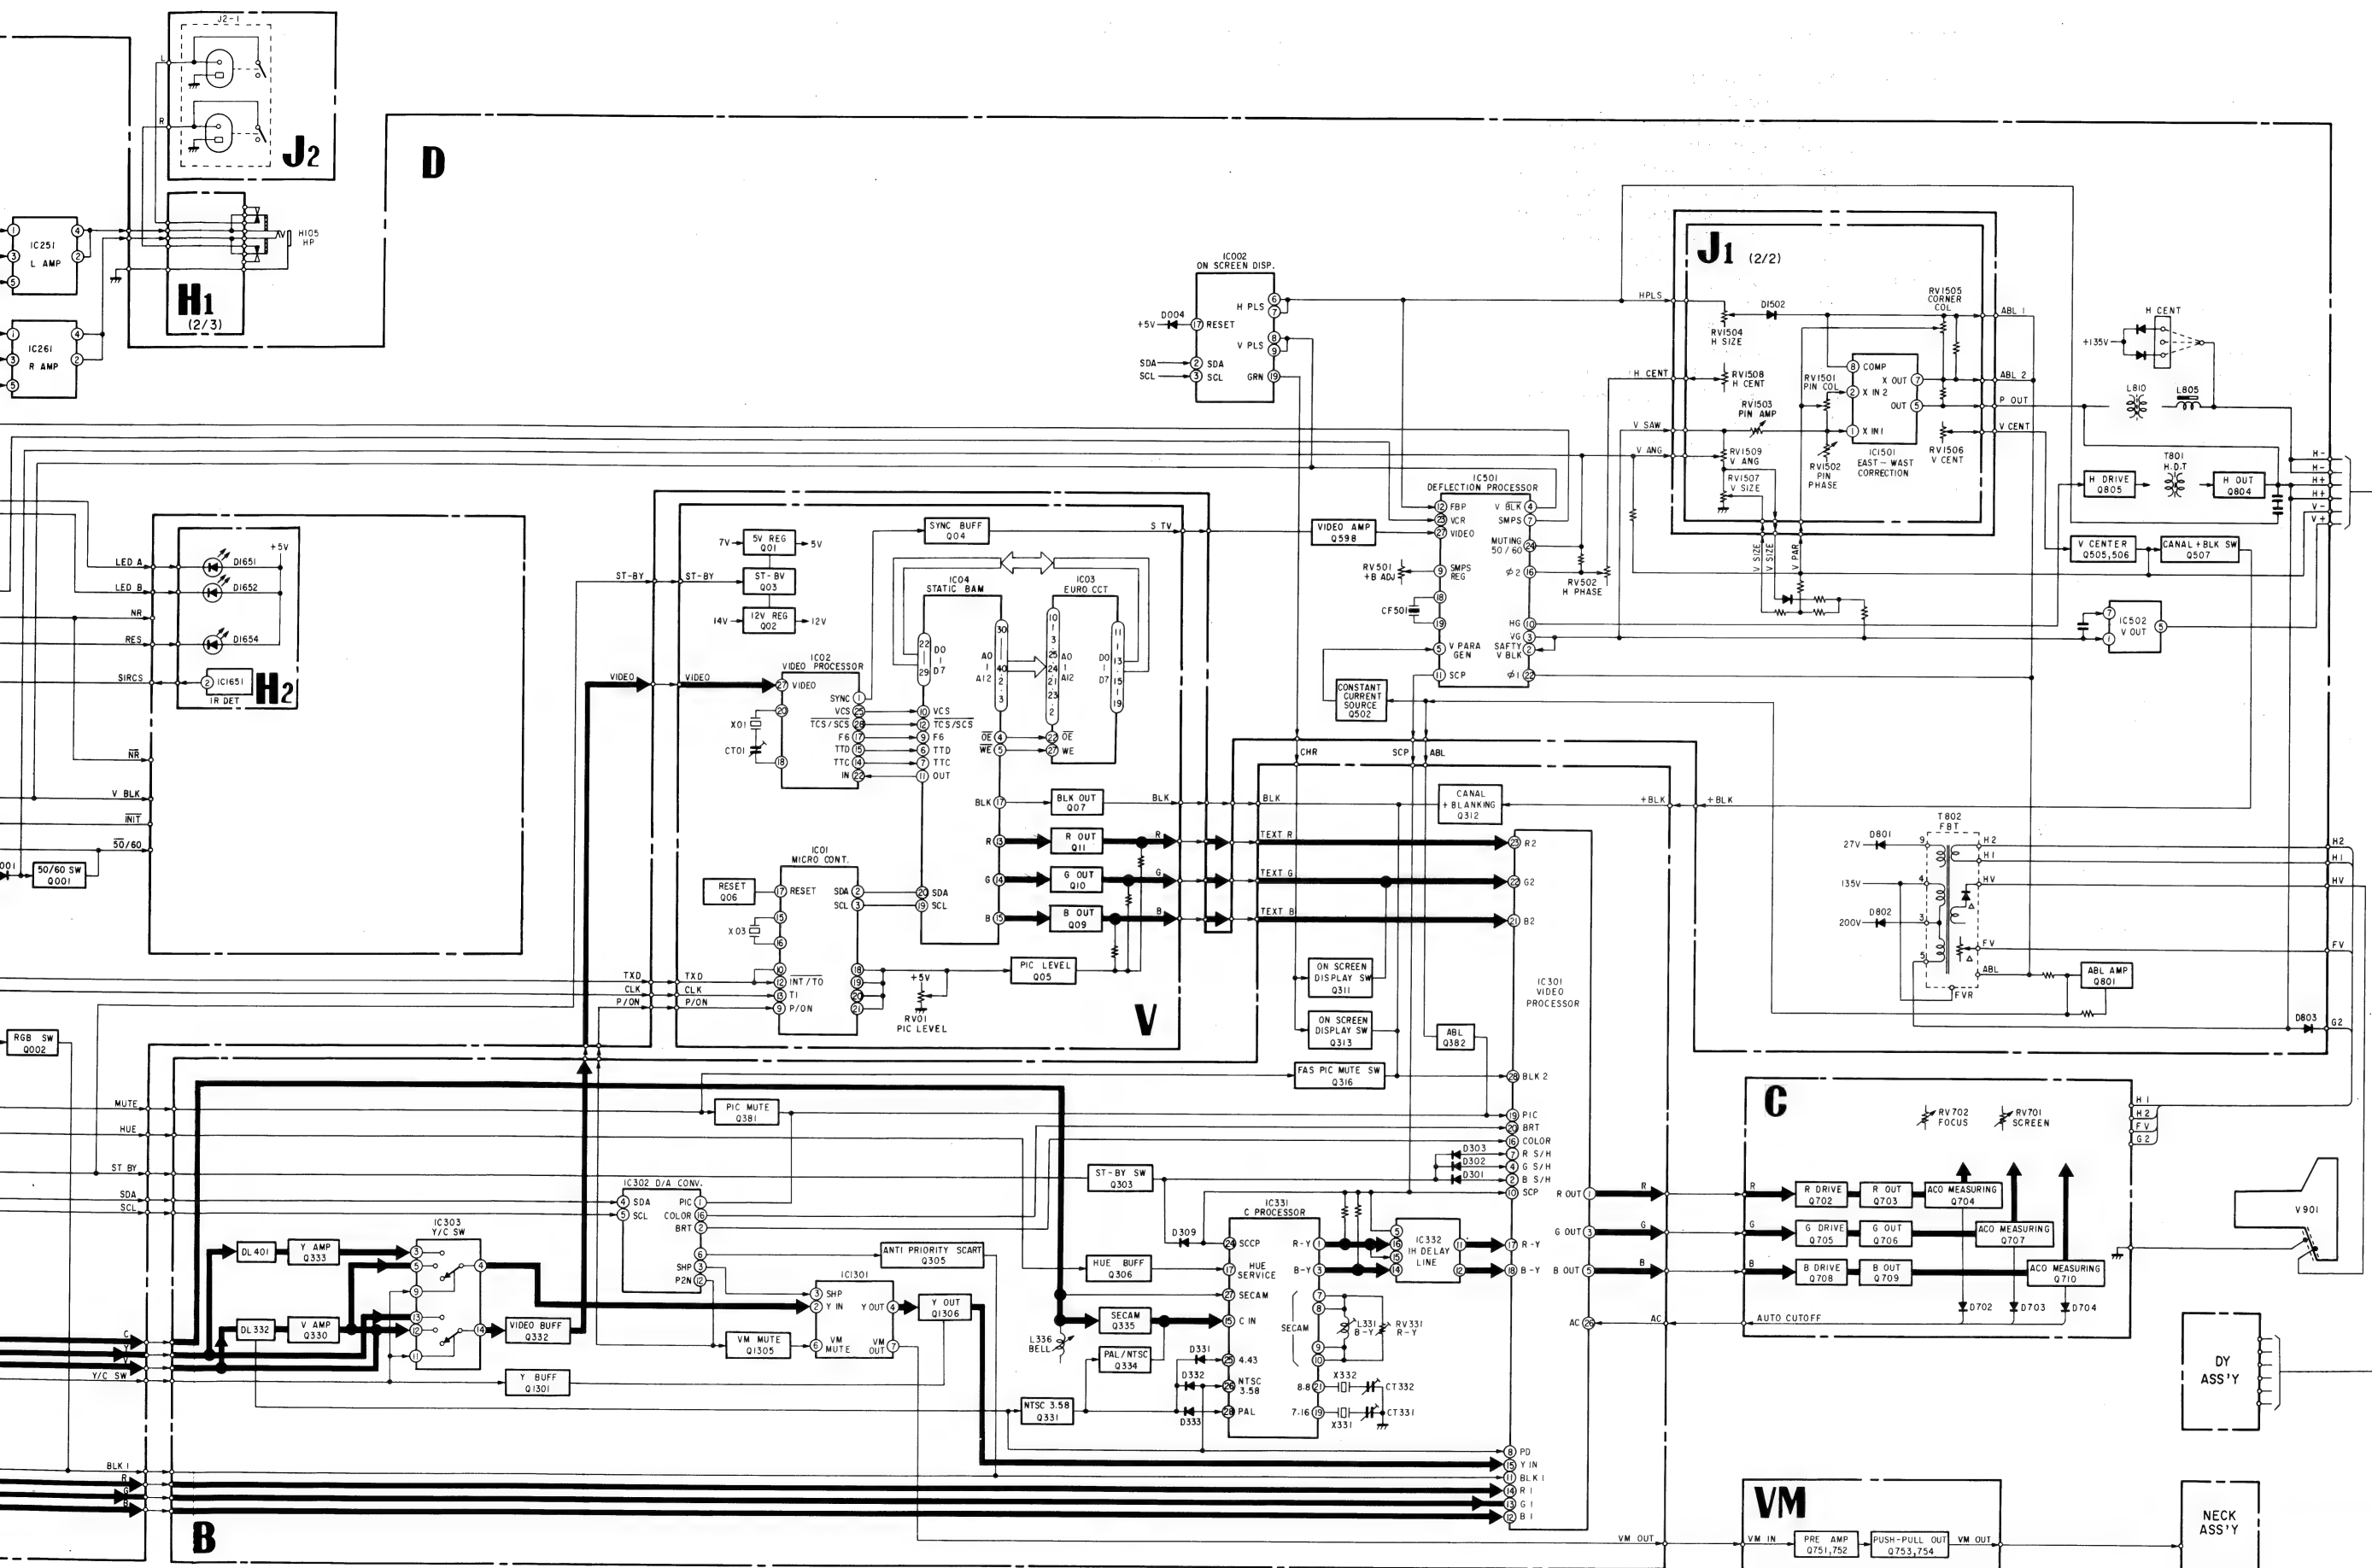

5-2. CIRCUIT BOARDS LOCATION

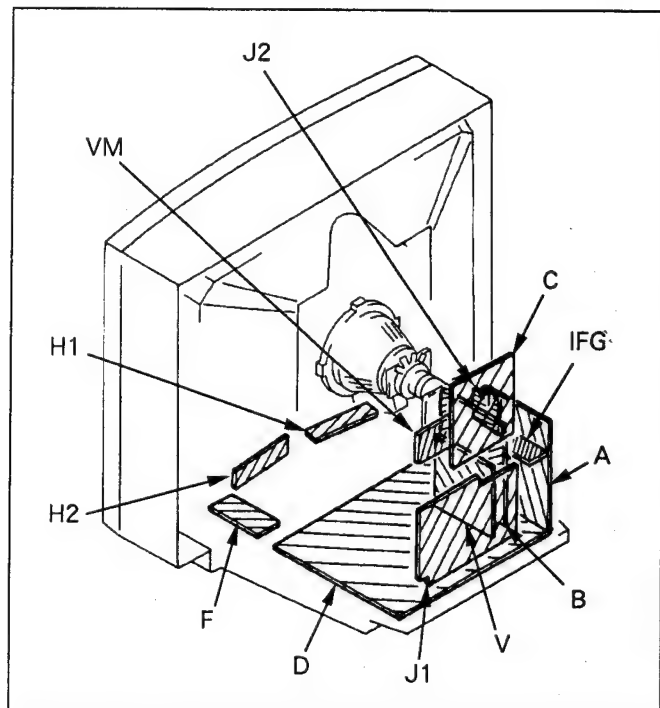






Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

Note :

- All capacitors are in μF unless otherwise noted.
pF : $\mu\mu\text{F}$ 50WV or less are not indicated except for electrolytics.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm

Rating electrical power : 1/4W

- Chip resistor is in 1/10W.
- All resistors are in ohms. $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
-  : nonflammable resistor.
-  : fusible resistor.
- Δ : internal component.
-  : panel designation and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in V.
- Readings are taken with a $10M\Omega$ digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
-  : B + line.
-  : signal path.

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: *	ADJUSTMENT RESISTOR
COIL	: LF-BL	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

H1 [CONTROL SW,
AV INPUT,
HEADPHONE] **H2** [SIRCS RECEIVER,
INDICATOR] **F** [AC IN,
POWER SW]


[SPEAKER
TERMINAL] **J2** [TUNER,
SIF, VIF] **A**

J1 [AU
Y/
EA]


5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

—Conductor Side—


—H1 Board—

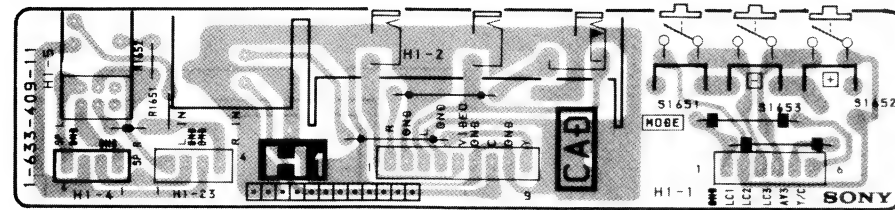


—H2 Board—

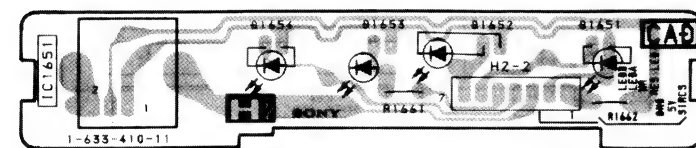


—F Board—

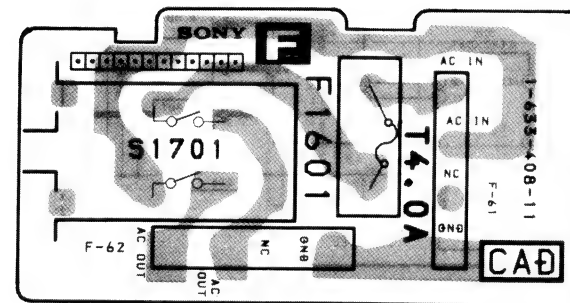


—A Board—

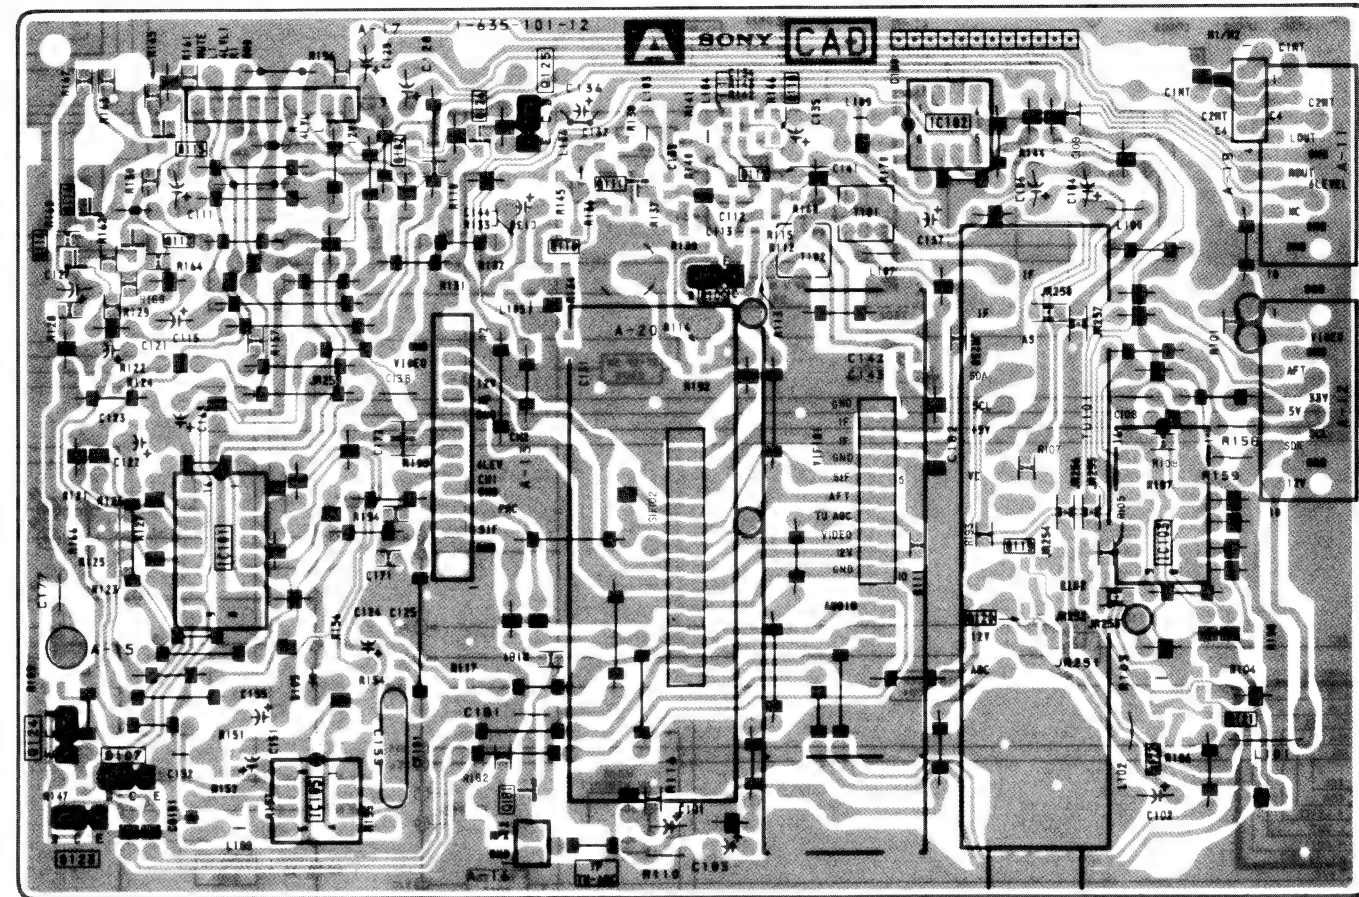

—J1 Board—

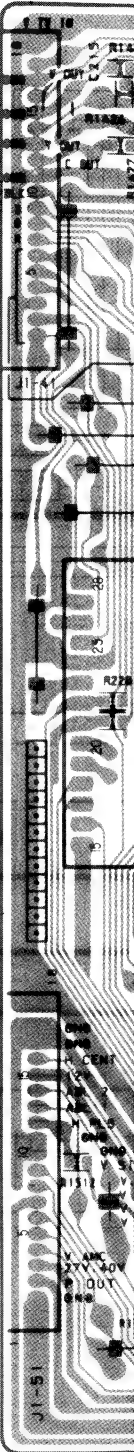


—J2 Board—

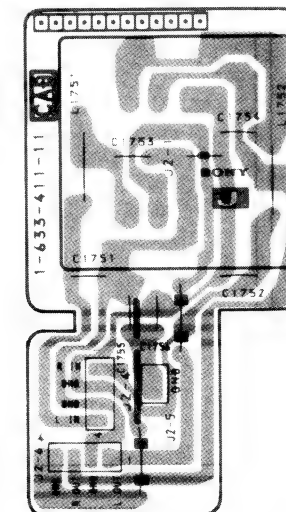


[SPEAKER
TERMINAL] **J2** [TUNER,
SIF, VIF] **A**

J1 [AUDIO CONTROL, AV INPUT,
Y/C INPUT, SCART VIDEO OUT,
EAST-WEST CORRECTION]


—A Board—

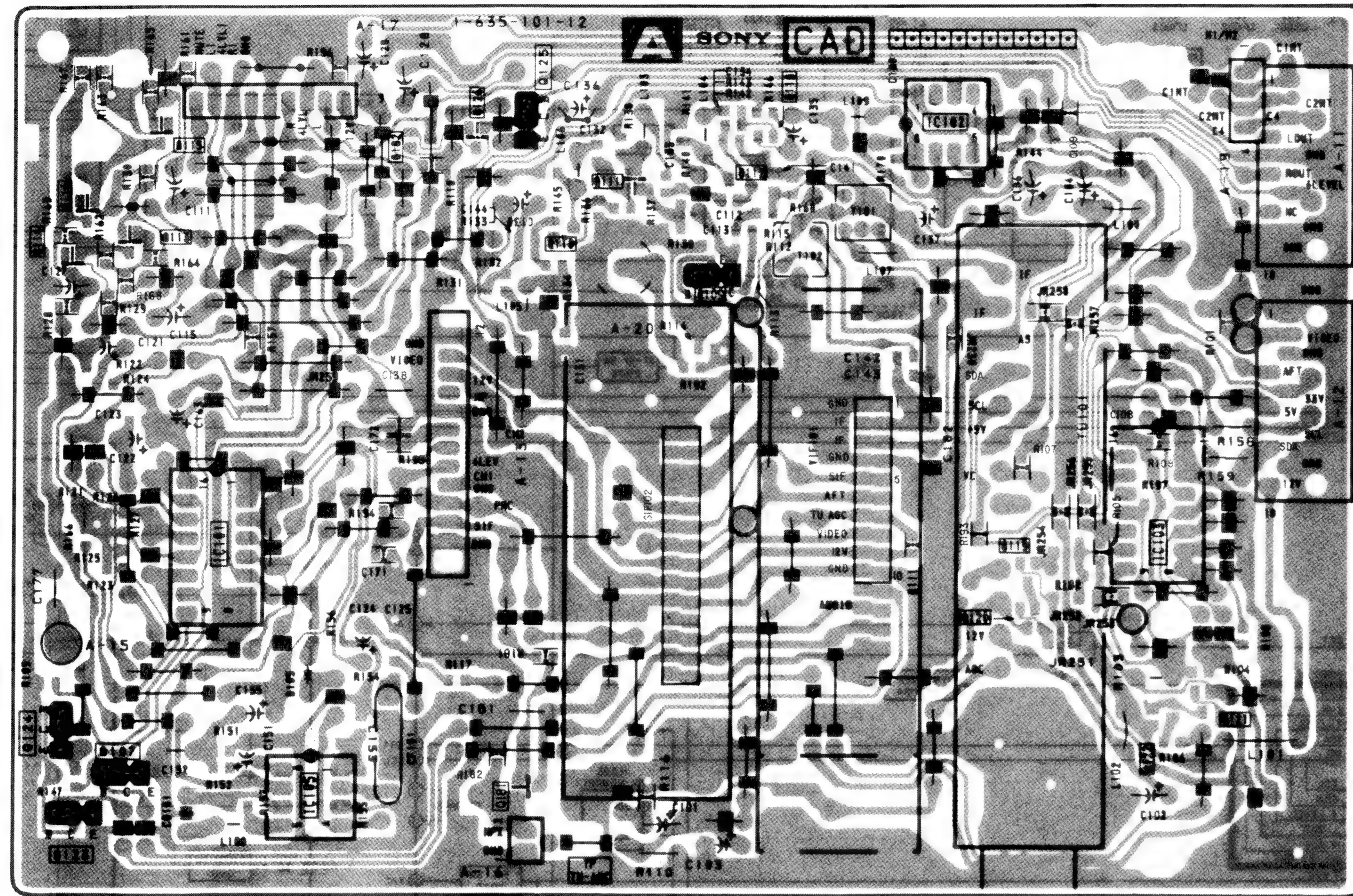

—J2 Board—

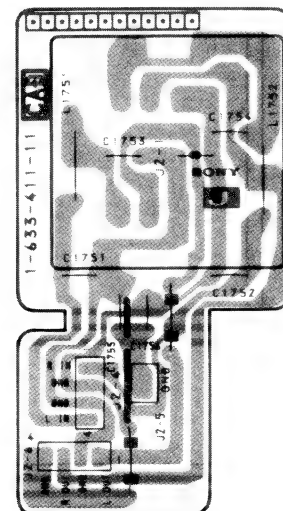


—J1 Board—

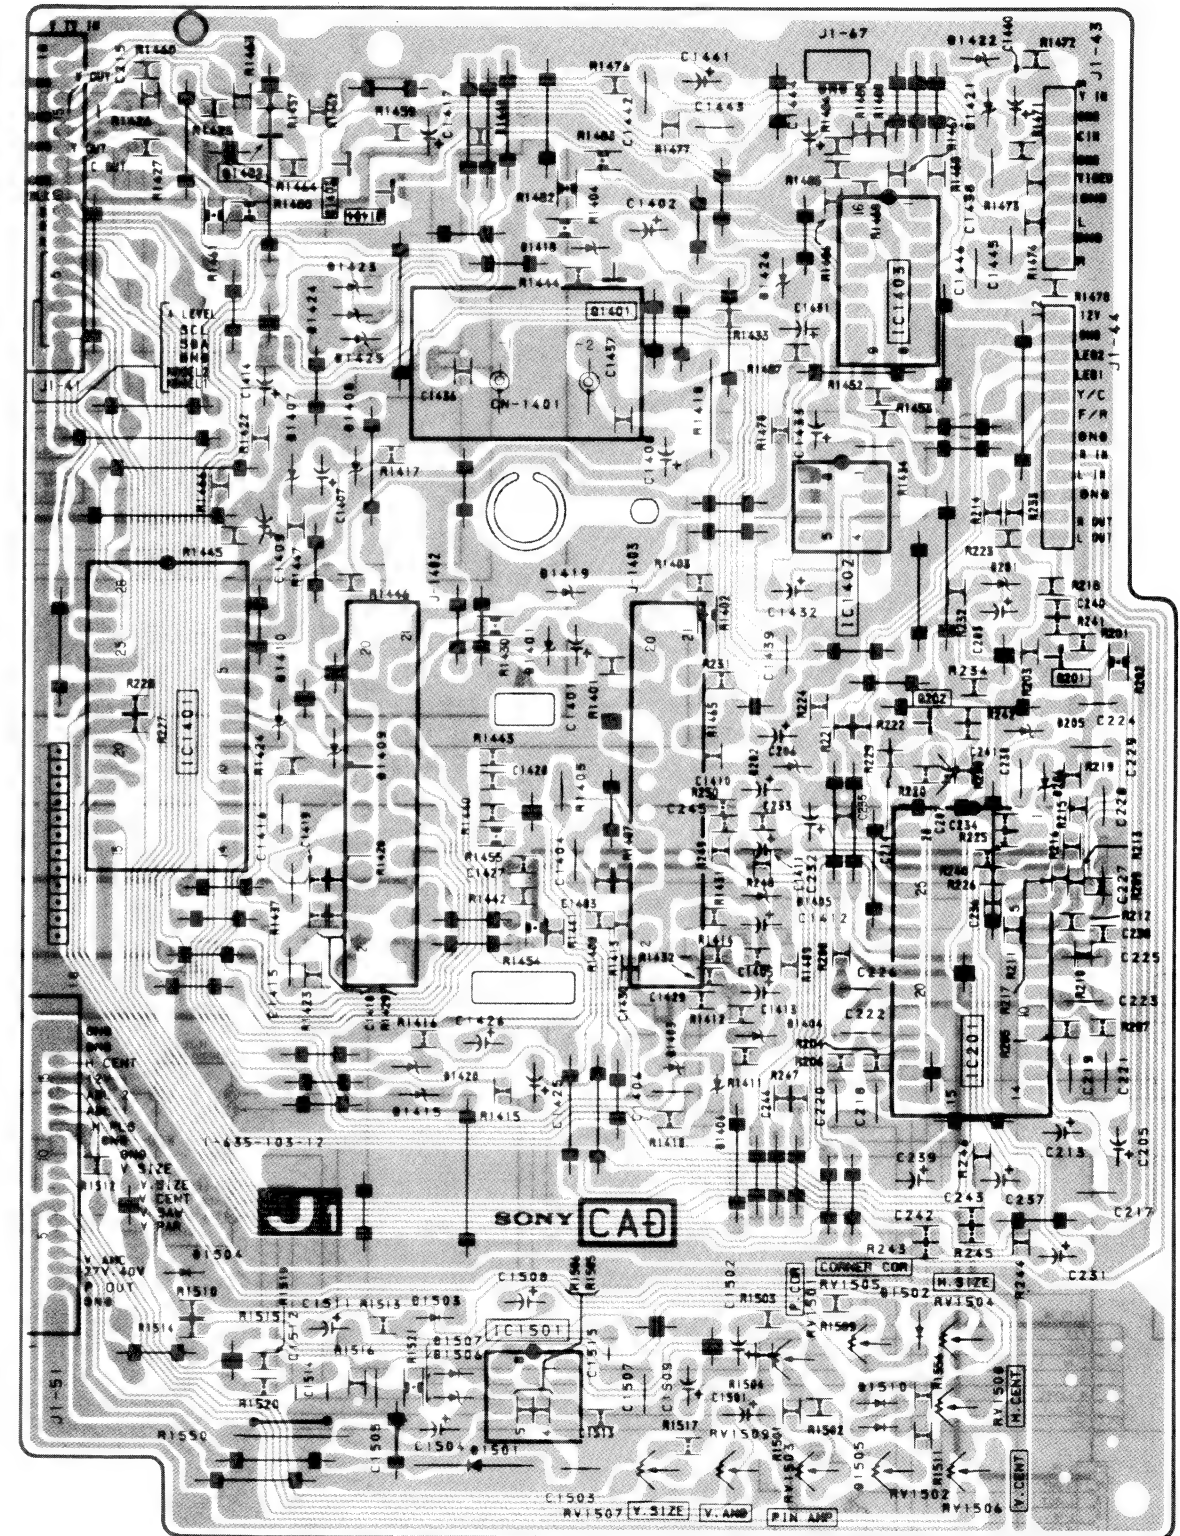


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O


J1 BOARD IC1402 TEA2014A

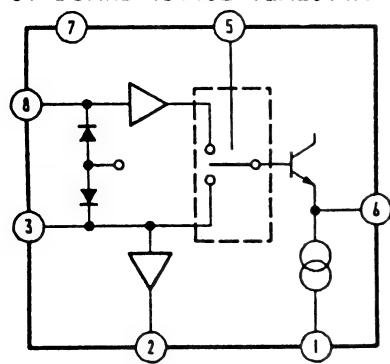


J1 BOARD IC201 TDA6200

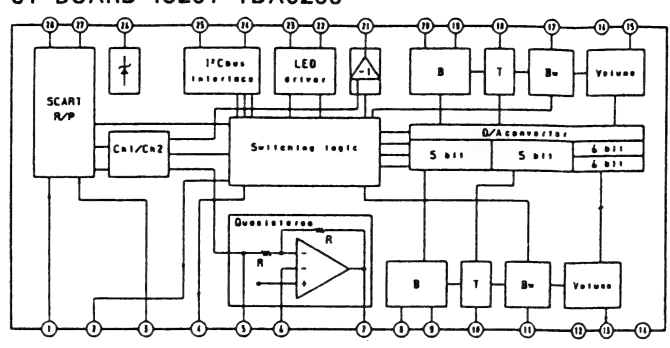

J1 BOARD IC1501 TEA2031

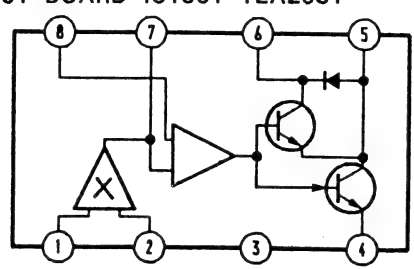







J1 BOARD IC1401 CXA1114P

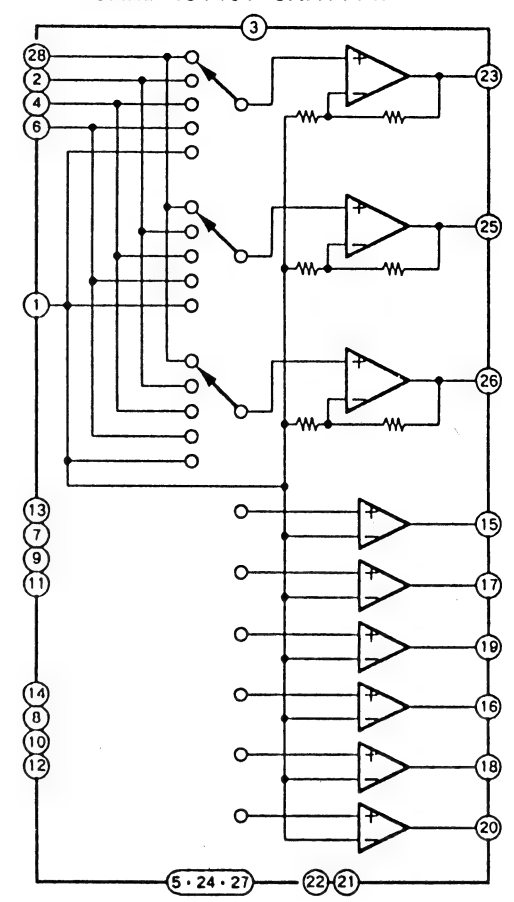

J1


AUDIO CONTROL.
AV INPUT,
Y/C INPUT,
SCART VIDEO OUT,
EAST-WEST CORRECTION

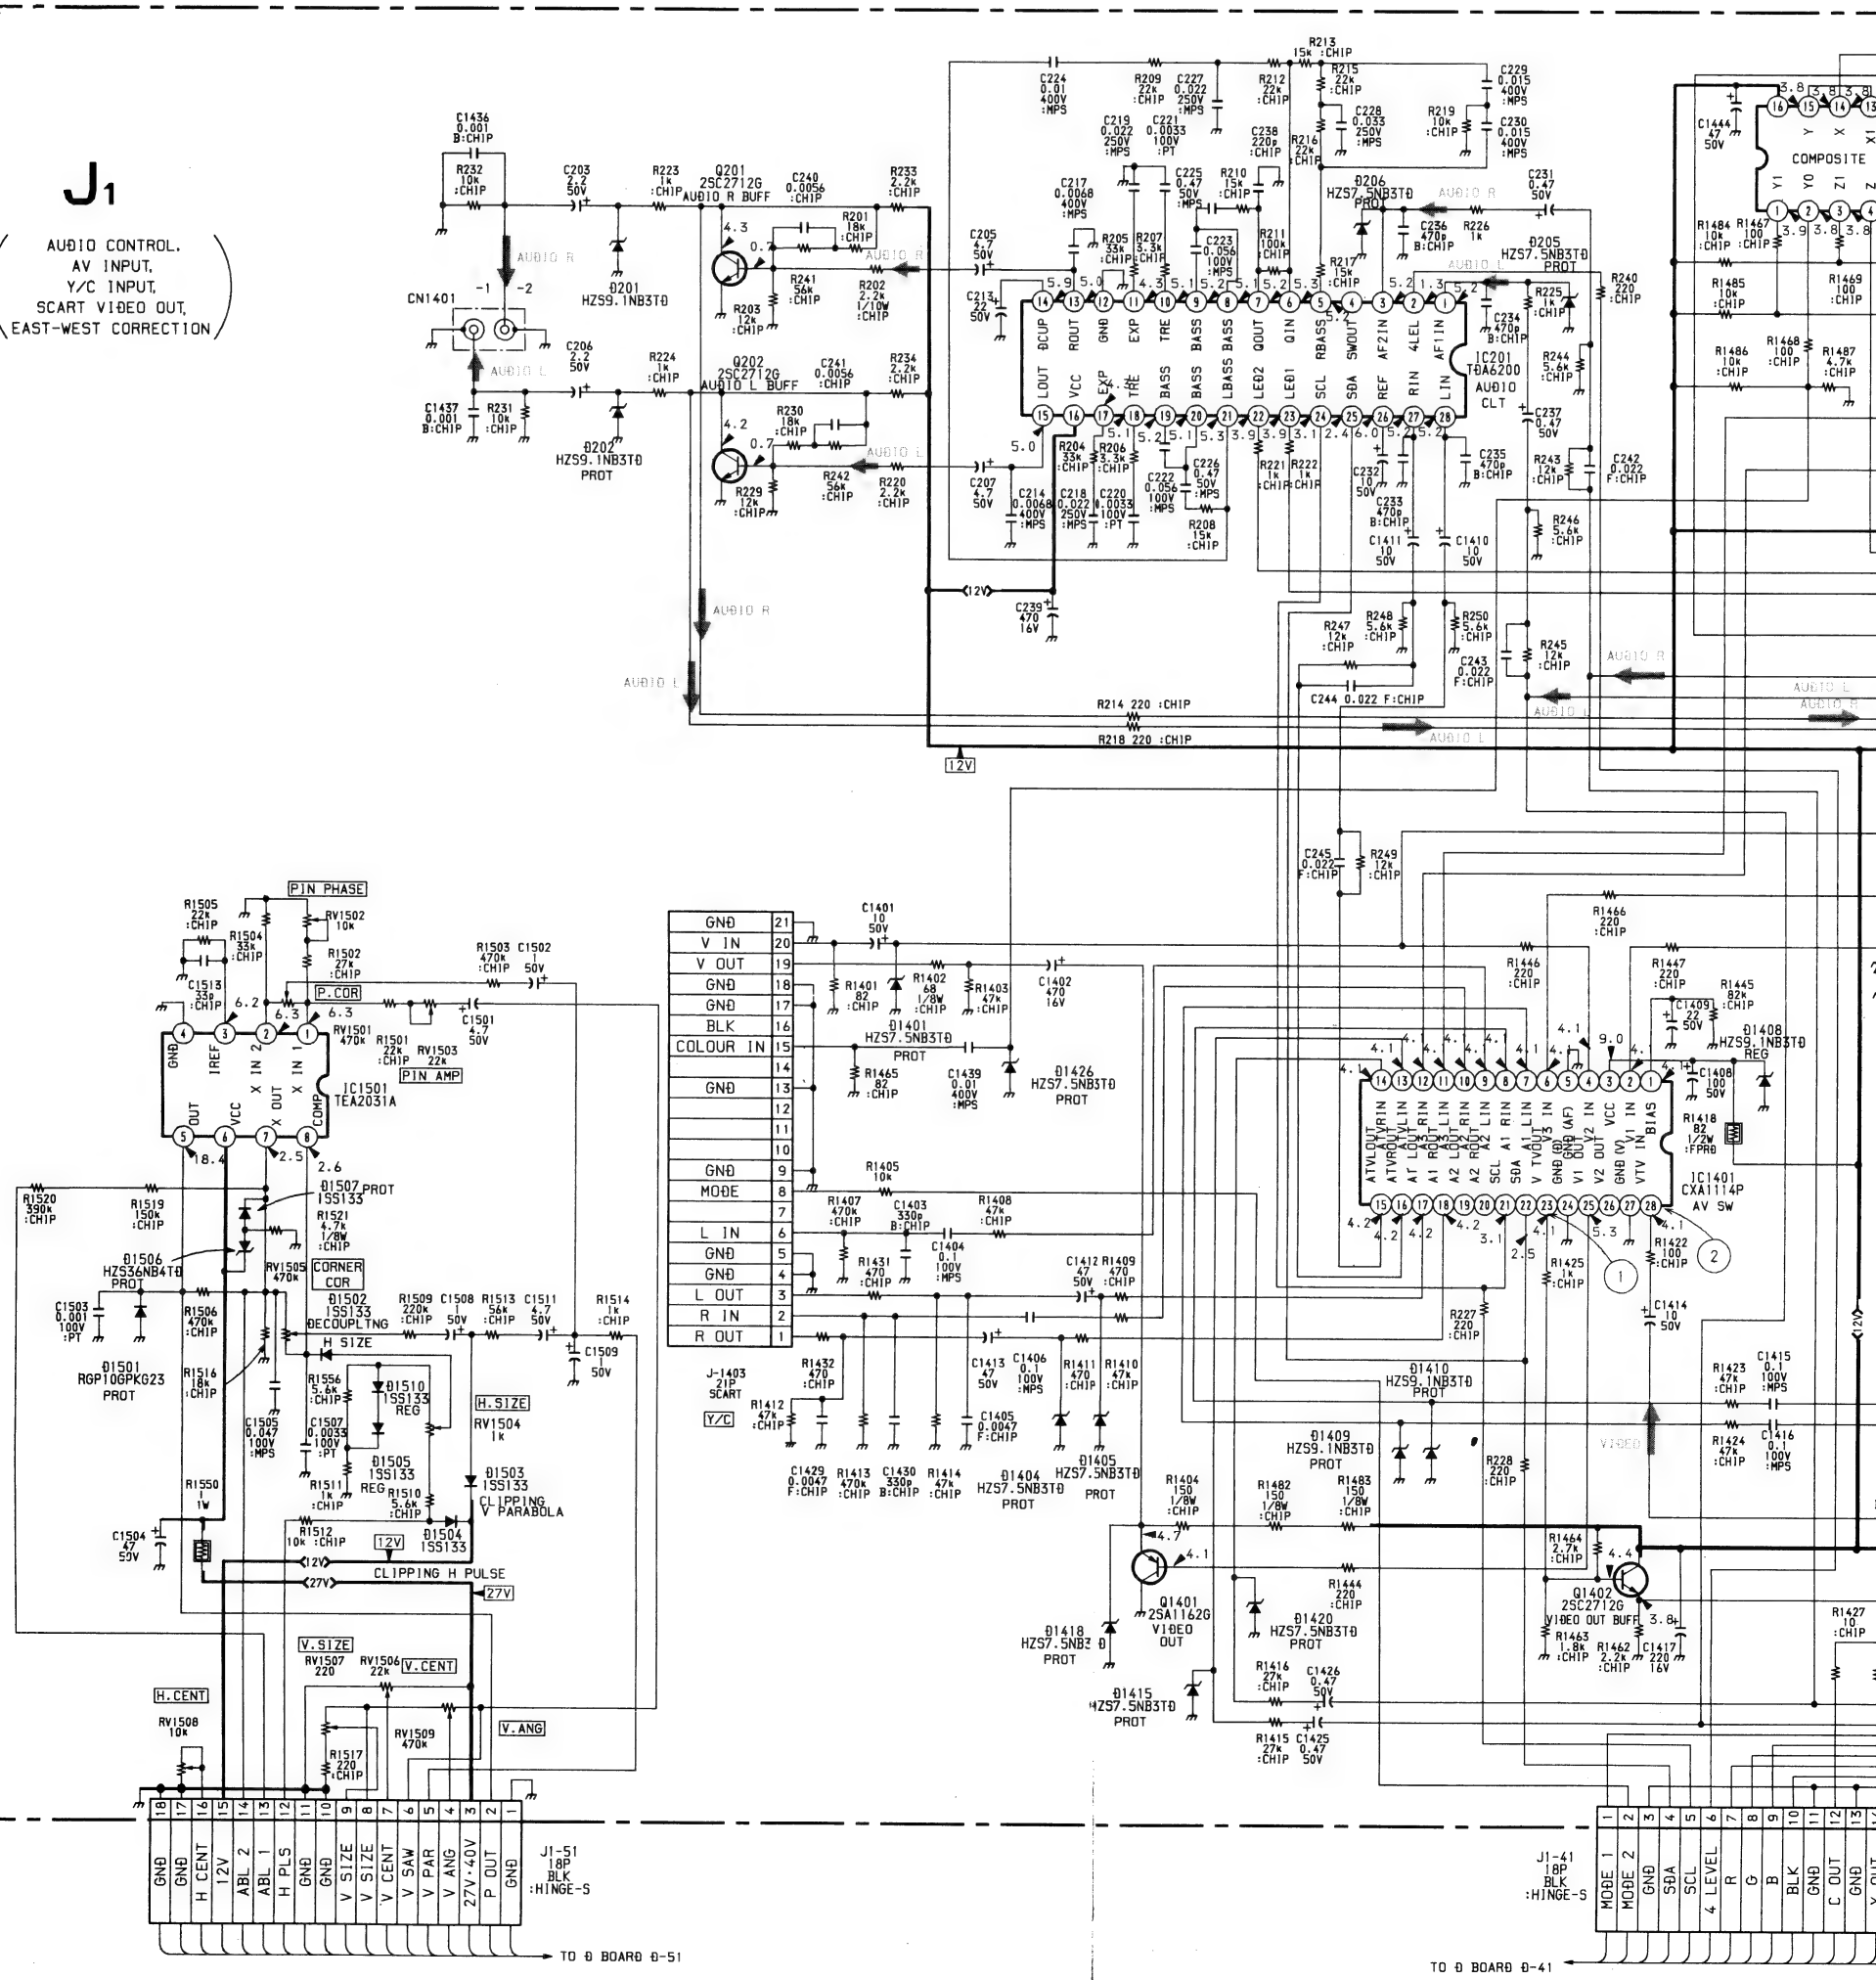

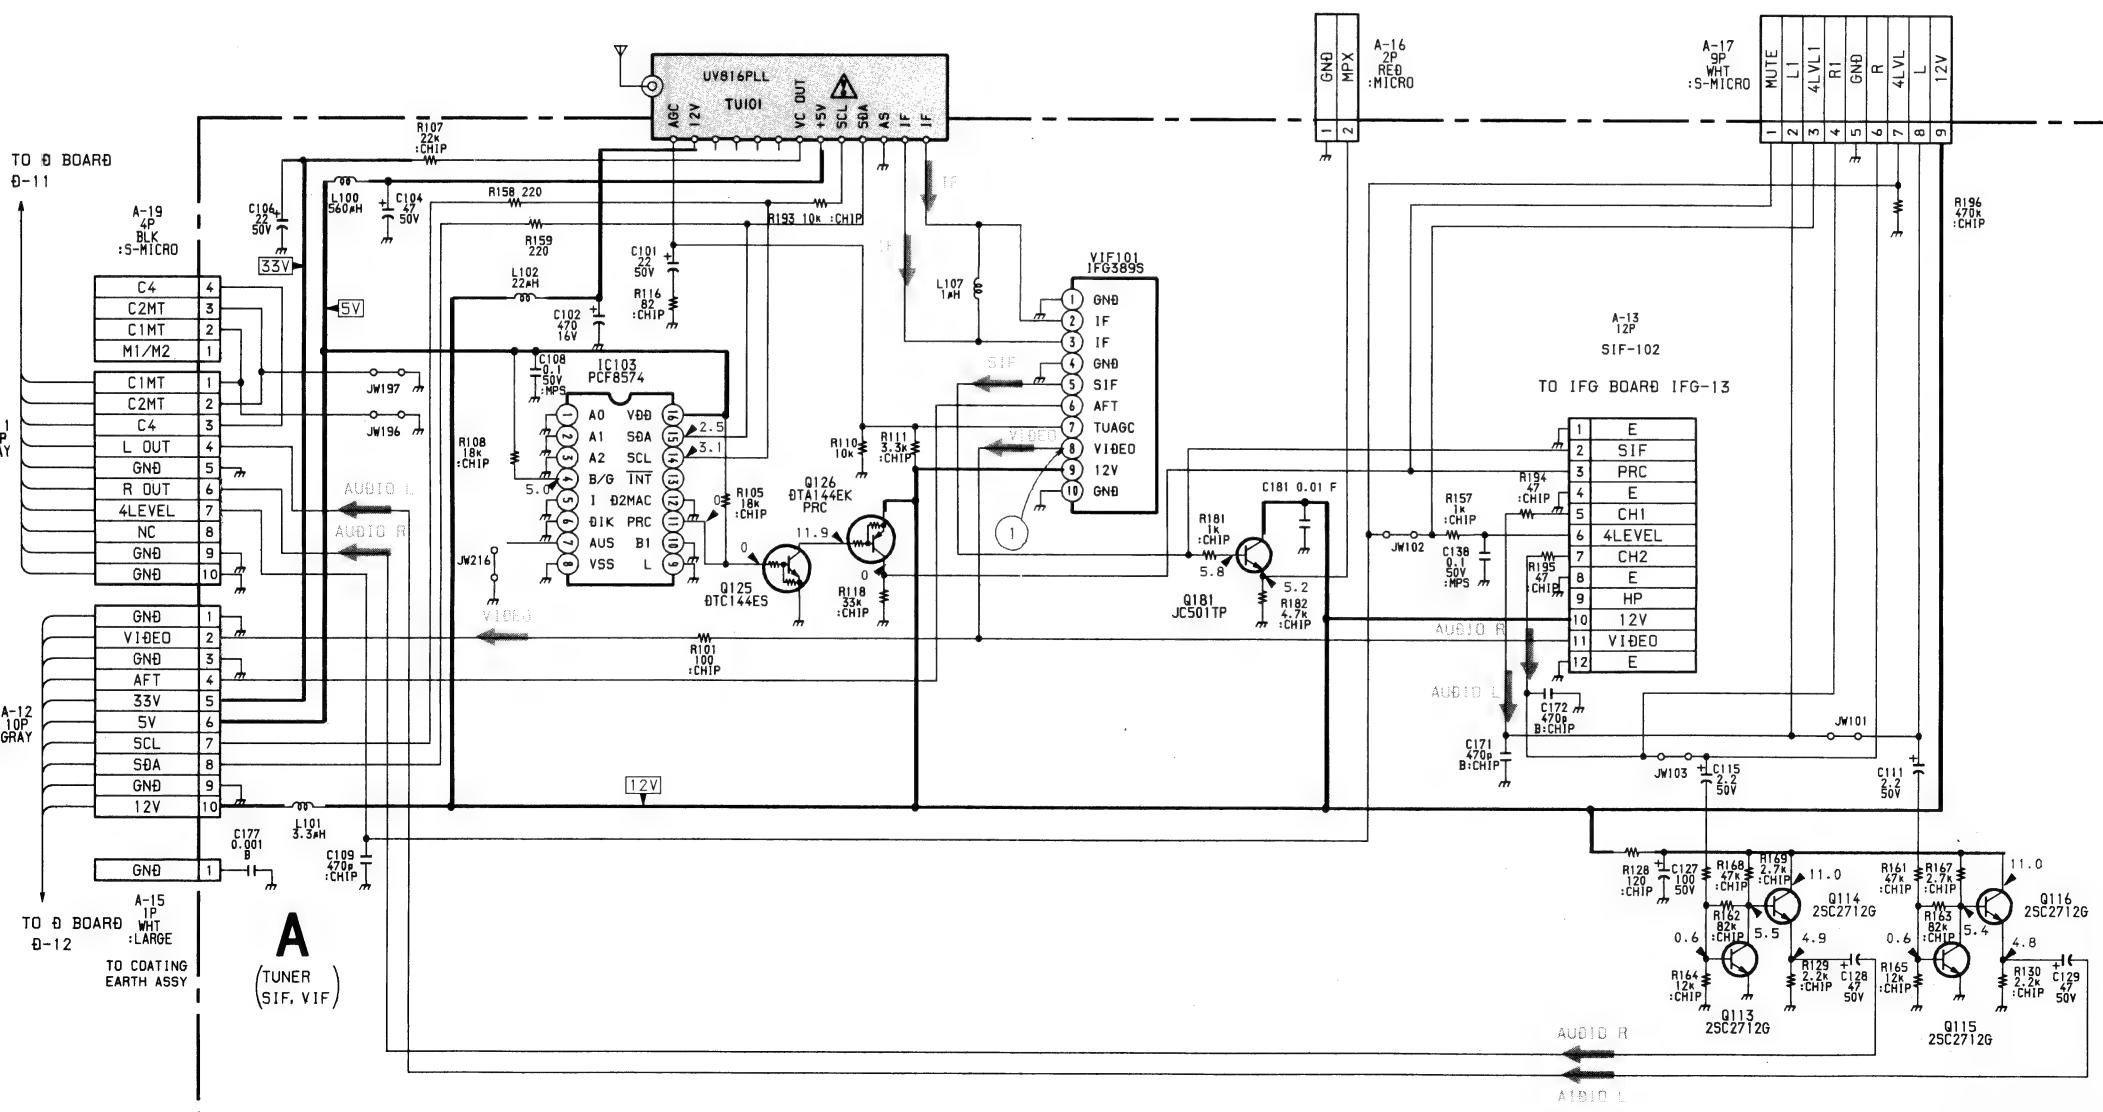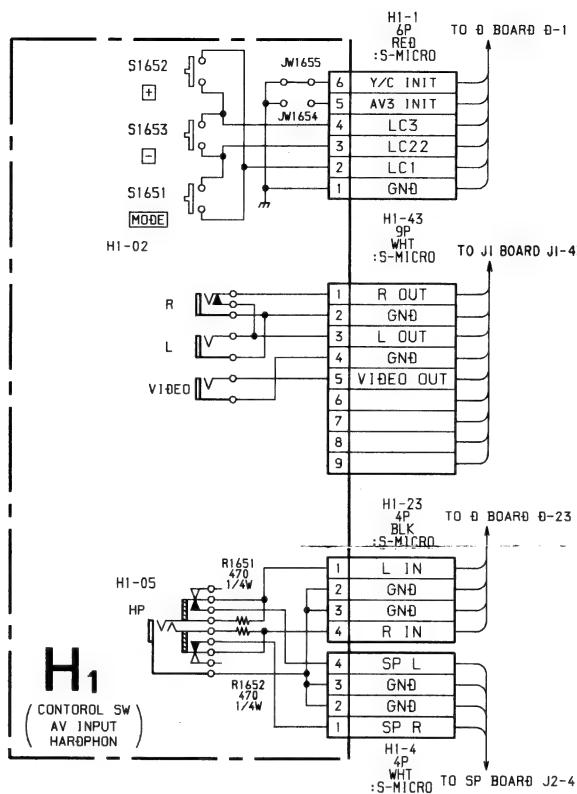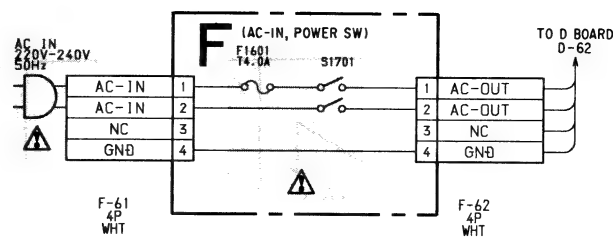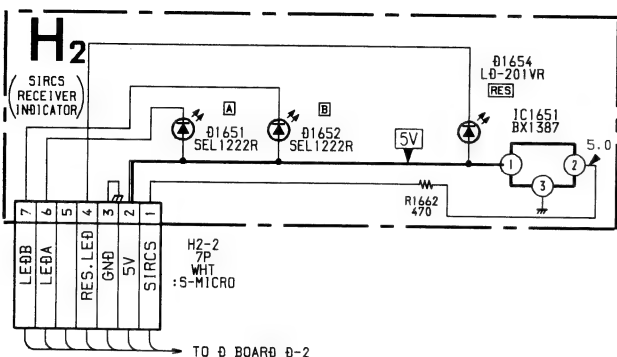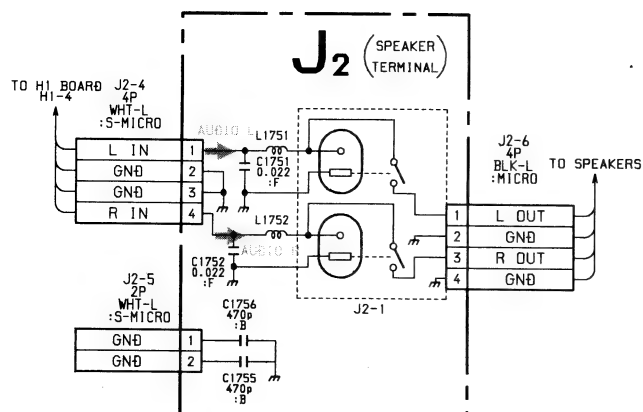

RD

• WAVEFORMS A BOARD

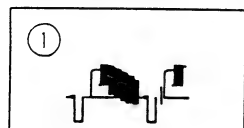


① 13V _{p-p} (H)	② 2.8V _{p-p} (V)	③ 4.5V _{p-p} (V)
④ 2.8V _{p-p} (V)	⑤ 4V _{p-p} (H)	⑥ 11V _{p-p} (H)
⑦ 14V _{p-p} (H)	⑧ 4V _{p-p} (H)	⑨ 0.1V _{p-p} (503kHz)
⑩ 1.3V _{p-p} (H)	⑪ 0.56V _{p-p} (V)	⑫ 2.0V _{p-p} (V)
⑬ 29V _{p-p} (V)	⑭ 50V _{p-p} (V)	⑮ 2.8V _{p-p} (H)
⑯ 230V _{p-p} (H)	⑰ 11.5V _{p-p} (H)	⑱ 800V _{p-p} (H)
⑲ 165V _{p-p} (H)	⑳ 7V _{p-p} (V)	㉑ 50V _{p-p} (V)
㉒ 1.2V _{p-p} (H)	㉓ 9.0V _{p-p} (H)	㉔ 3.2V _{p-p} (12MHz)
㉕ 4.0V _{p-p} (H)	㉖ 5.6V _{p-p} (H)	㉗ 4.8V _{p-p} (V)


The block diagram illustrates the internal architecture of a color television receiver. Key components and their interconnections include:

- Inputs:** H. SYNC, VCR INPUT, IDET., SUBST., AOC KEY PULSE, and VIDEO IDENTIFIC. (with a 2ms delay).
- Timing and Synchronization:** HORIZ. SYNCHRO AND FRAME SYNCHRO, SAFETY INPUT, and 50/60 Hz timing signals.
- Processing and Control:** VIDEO IDENTIFIC., 1 INHIBITION + TIME C SWITCHING, FRAME TIMING IDENTIFICATION LOGIC, HORIZONTAL LOGIC TIMING, and LINE.
- Signal Generation and Output:** VCO 500KHz, REFER. CURRENT VOLTAGE, H. SAW. TOOTH GENERATOR, H. OUTPUT, and S. SAW CASTLE.
- Power and Safety Circuits:** SWITCH ON/OFF + SAFETY CIRCUIT, SOFT STARTING CIRCUIT, SAFETY LOGIC, S.M.P.S. (Switching Mode Power Supply), and S.M.P.S. OUTPUT.
- Other Functional Blocks:** FRAME SAW-TOOTH OUTPUT, FRAME BLANK OUTPUT, FRAME SAFETY, and AL1.


The diagram uses a grid system with letters (A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z) and numbers (1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100) to identify specific points and components within the circuit.






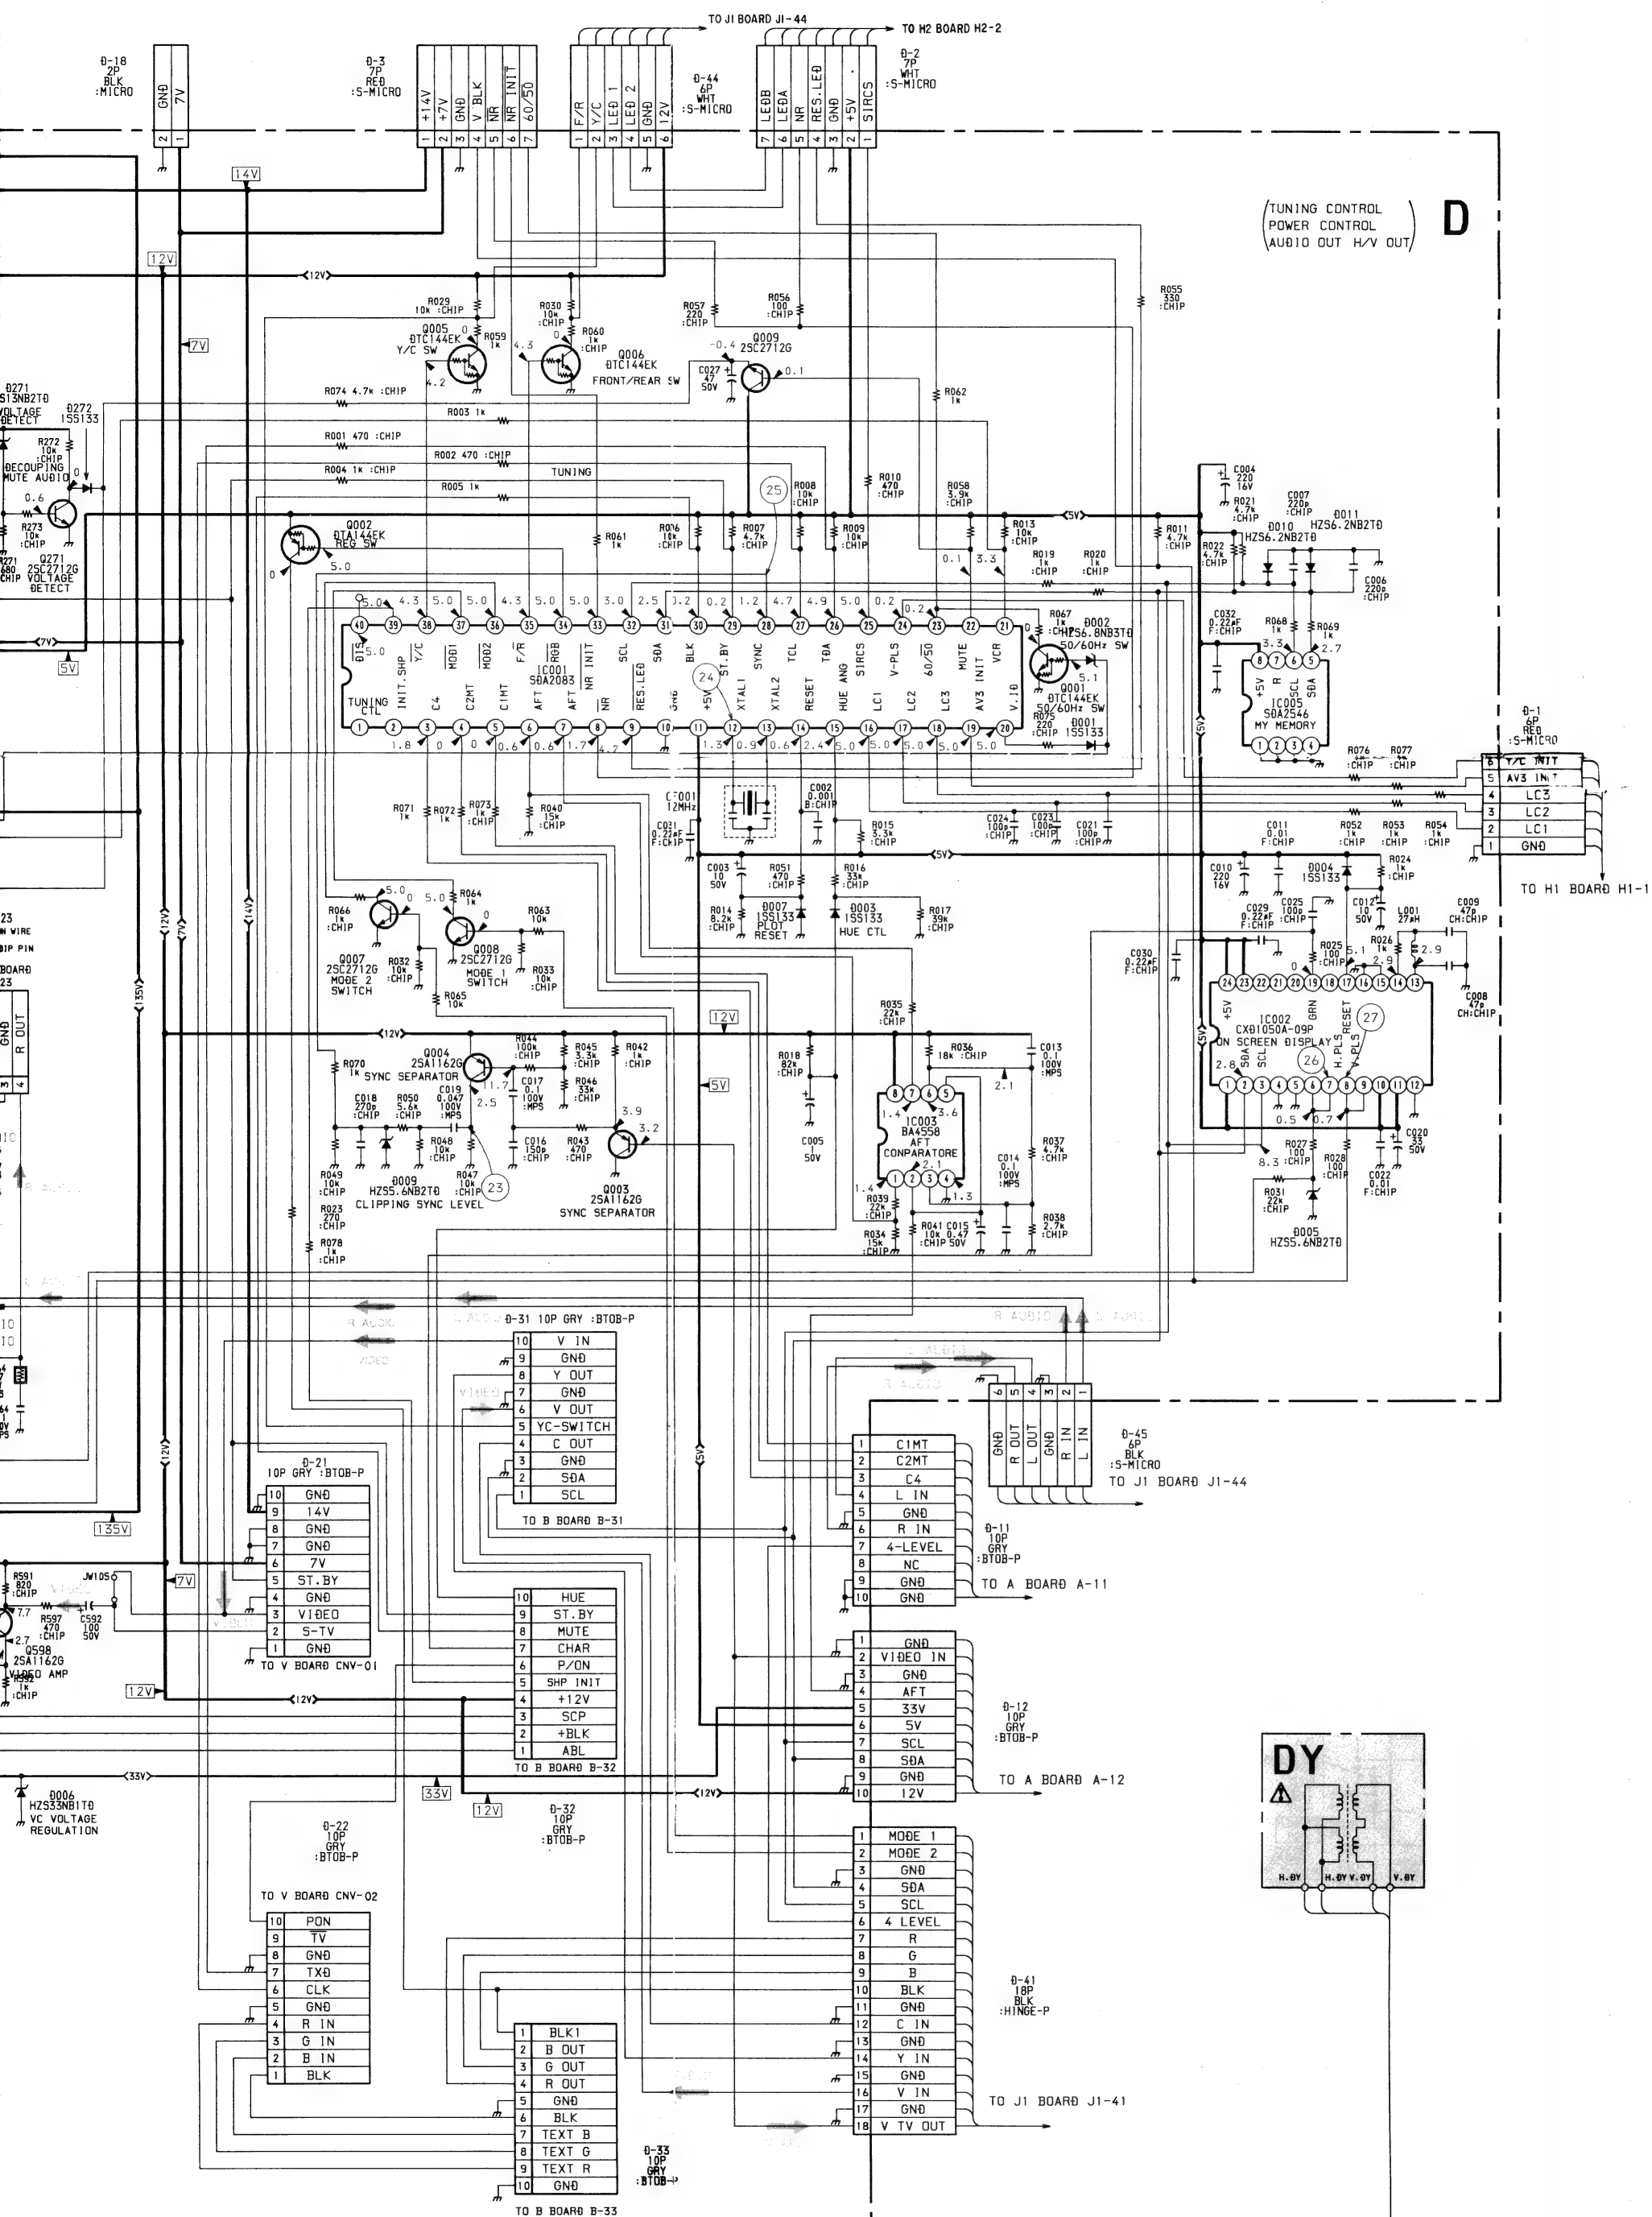

A
B
C
D
E
F
G
H
I
J

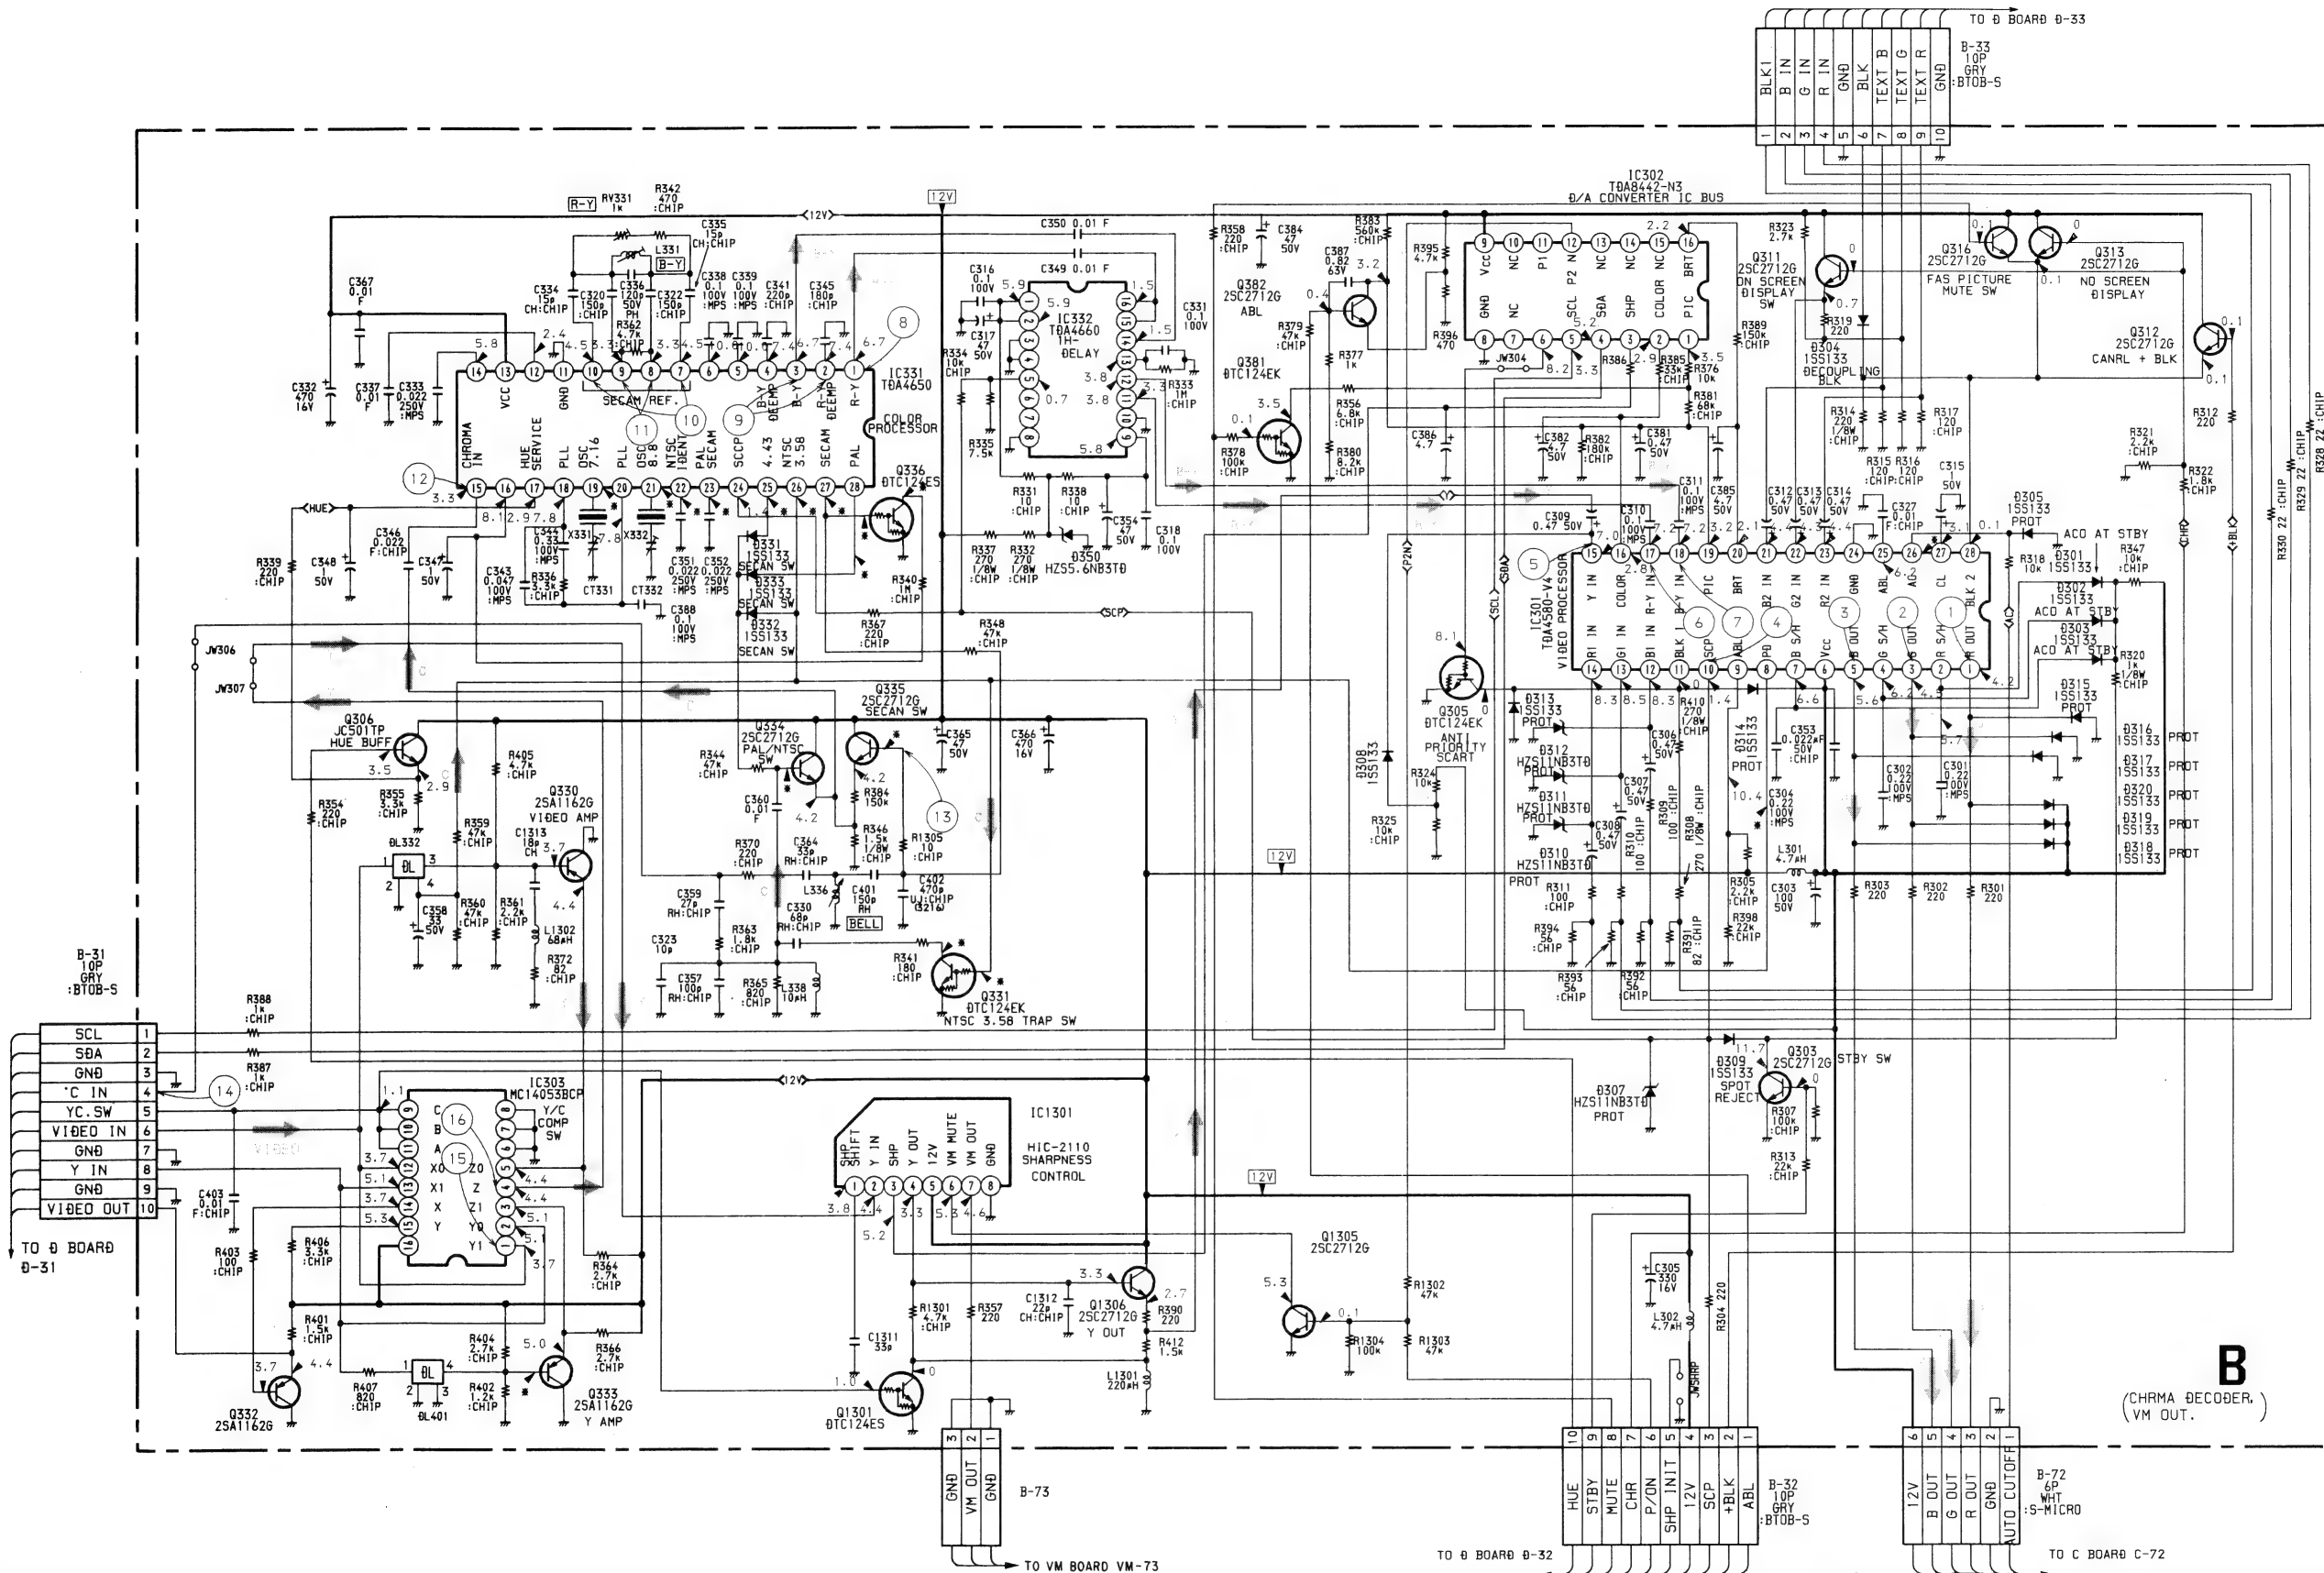

• WAVEFORMS B BOARD

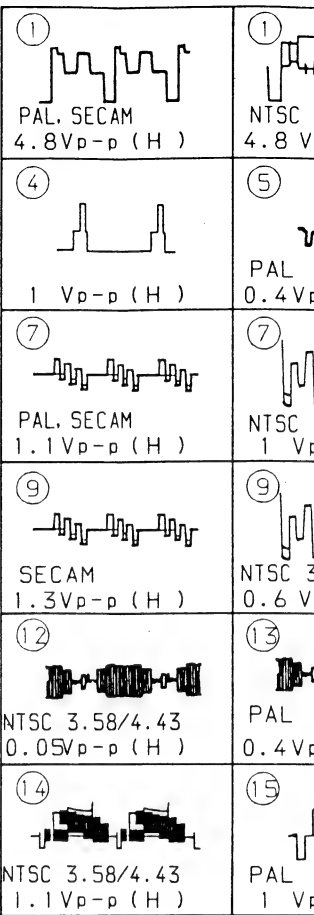

As to the voltage value shown by mark ※ on the Schematic Diagram, the another list.


	PAL	SECAM	NTSC3.58	NTSC4.43
IC301 (A)	0.1	0.1	5.8	0.1
IC301 (B)	6.7	6.8	5.1	5.1
IC331 (A)	3.1	3.6	3.1	2.8
IC331 (B)	3.0	3.5	2.9	2.7
IC331 (C)	5.6	5.6	7.1	7.2
IC331 (D)	7.5	7.0	5.6	5.6
IC331 (E)	0.1	0.1	0.1	5.8
IC331 (F)	0.1	0.1	5.8	0.1
IC331 (G)	0.1	5.8	0.1	0.1
IC331 (H)	5.9	0.1	0.1	0.1
Q331 (A)	0.1	0.1	5.8	0.1
Q331 (B)	1.5	1.9	0	0.8
Q333 (A)	3.4	4.4	4.4	4.4
Q334 (A)	4.9	0.1	4.8	4.8
Q335 (A)	0.1	4.8	0.1	0.1
Q336 (A)	0.1	5.8	0.1	0.1
Q336 (B)	7.3	0	7.3	7.3

TUNING CONTROL,
POWER CONTROL,
AUDIO OUT, H/V OUT

D

D

-D Board-

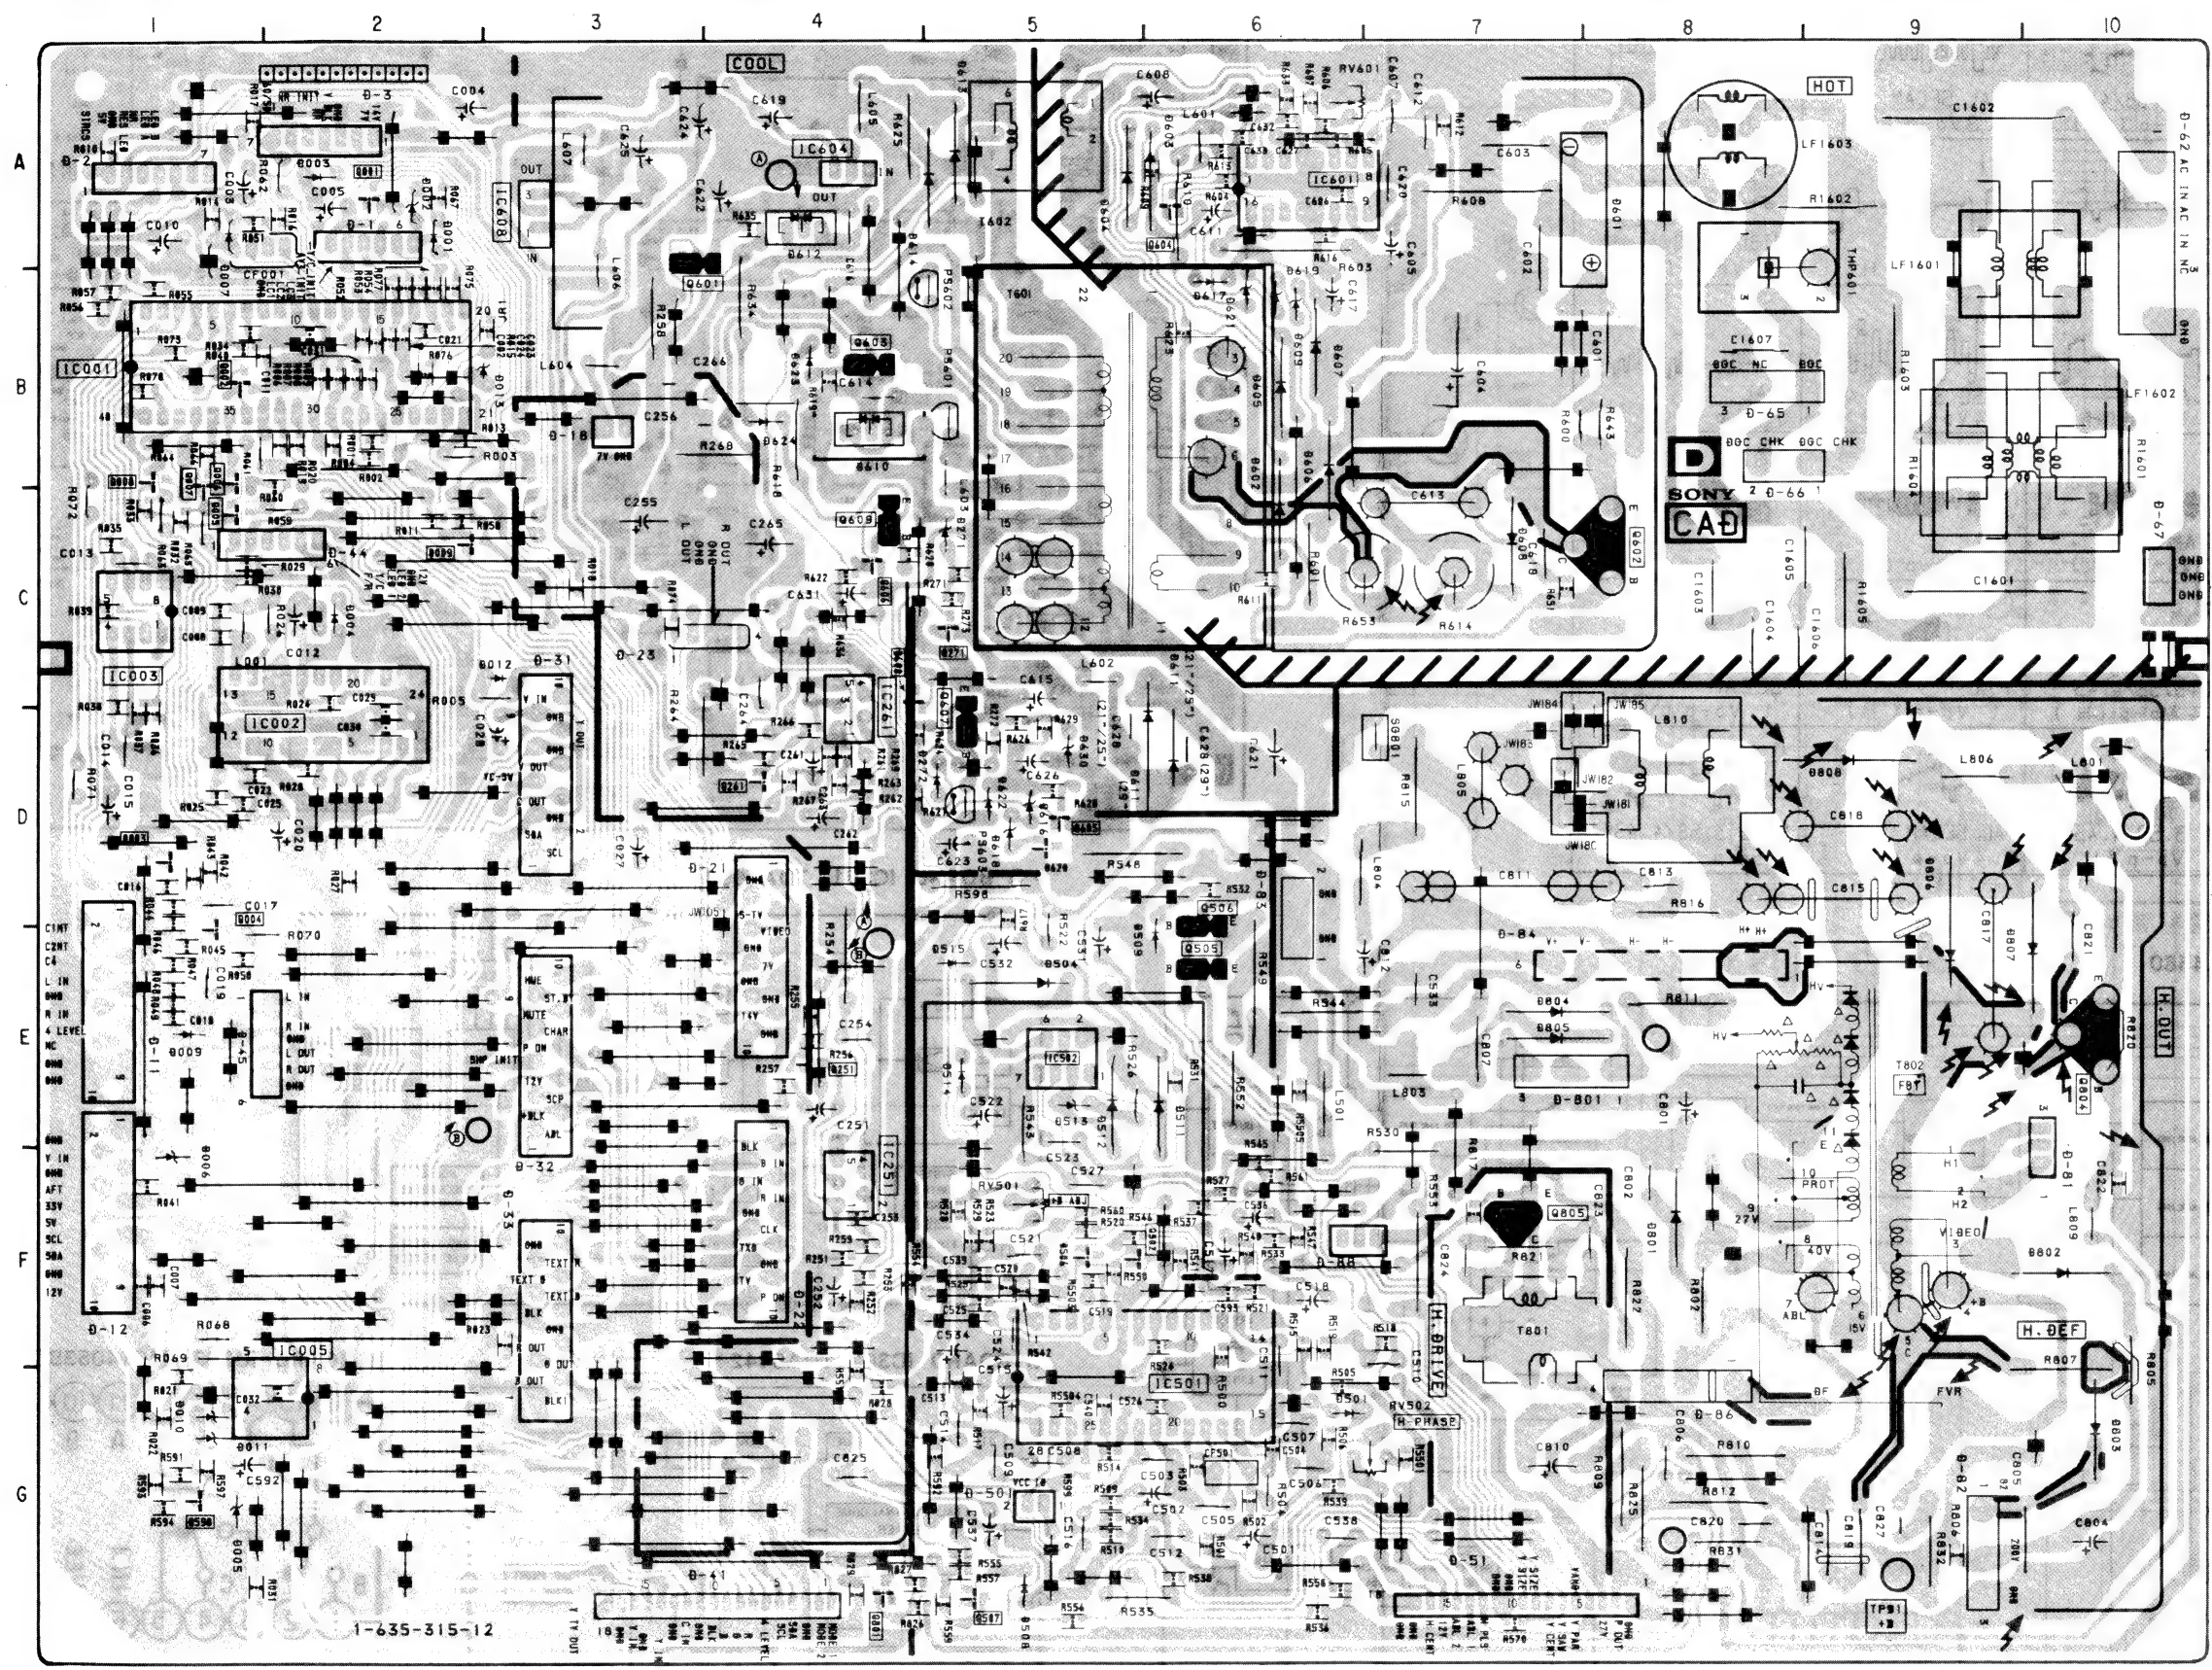


IC		D007	A-1
IC001	B-2	D009	E-1
IC002	D-2	D010	G-1
IC003	C-1	D011	G-1
IC005	G-2	D271	C-5
IC251	F-4	D272	D-5
IC261	C-4	D501	G-6
IC501	G-6	D504	E-5
IC502	E-5	D506	E-6
IC601	A-6	D508	G-5
IC604	A-4	D509	D-6
IC608	A-3	D511	E-6
		D512	E-5
		D513	E-5
		D514	E-5
		D515	E-5
TRANSISTOR		D601	A-8
Q001	A-2	D602	C-6
Q002	B-1	D603	A-6
Q003	D-1	D604	A-5
Q004	D-1	D605	B-6
Q005	C-1	D606	B-6
Q006	B-1	D607	B-6
Q007	C-1	D608	C-7
Q008	C-1	D609	B-6
Q009	C-2	D610	B-4
Q251	E-4	D611	D-6
Q261	D-4	D612	A-4
Q271	C-5	D613	A-5
Q502	F-6	D614	A-5
Q505	E-6	D616	D-5
Q506	E-6	D617	B-6
Q507	G-5	D618	D-5
Q598	G-1	D619	B-6
Q601	B-4	D620	D-5
Q602	C-8	D621	B-6
Q603	B-4	D622	D-5
Q604	A-6	D623	B-4
Q605	D-5	D624	B-4
Q606	C-4	D630	D-5
Q607	D-5	D801	F-8
Q608	C-4	D802	F-10
Q609	C-4	D803	G-10
Q801	G-4	D804	E-7
Q804	E-10	D805	E-7
Q805	F-7	D806	E-9
		D807	E-10
		D808	D-9
DIODE		VARIABLE RESISTOR	
D001	A-2	RV501	F-5
D002	A-2	RV502	G-7
D003	A-2	RV601	A-6
D004	C-2		
D005	G-1		
D006	F-1		


07	A-1
09	E-1
10	G-1
11	G-1
71	C-5
72	D-5
01	G-6
04	E-5
06	E-6
08	G-5
09	D-6
11	E-6
12	E-5
13	E-5
14	E-5
15	E-5
01	A-8
02	C-6
03	A-6
04	A-5
05	B-6
06	B-6
07	B-6
08	C-7
09	B-6
10	B-4
11	D-6
12	A-4
13	A-5
14	A-5
16	D-5
17	B-6
18	D-5
19	B-6
20	D-5
21	B-6
22	D-5
23	B-4
24	B-4
30	D-5
01	F-8
02	F-10
03	G-10
04	E-7
05	E-7
06	E-9
07	E-10
08	D-9

VARIABLE
RESISTOR


501	F-5
502	G-7
501	A-6

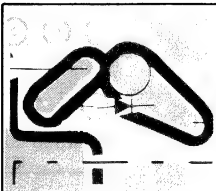

NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

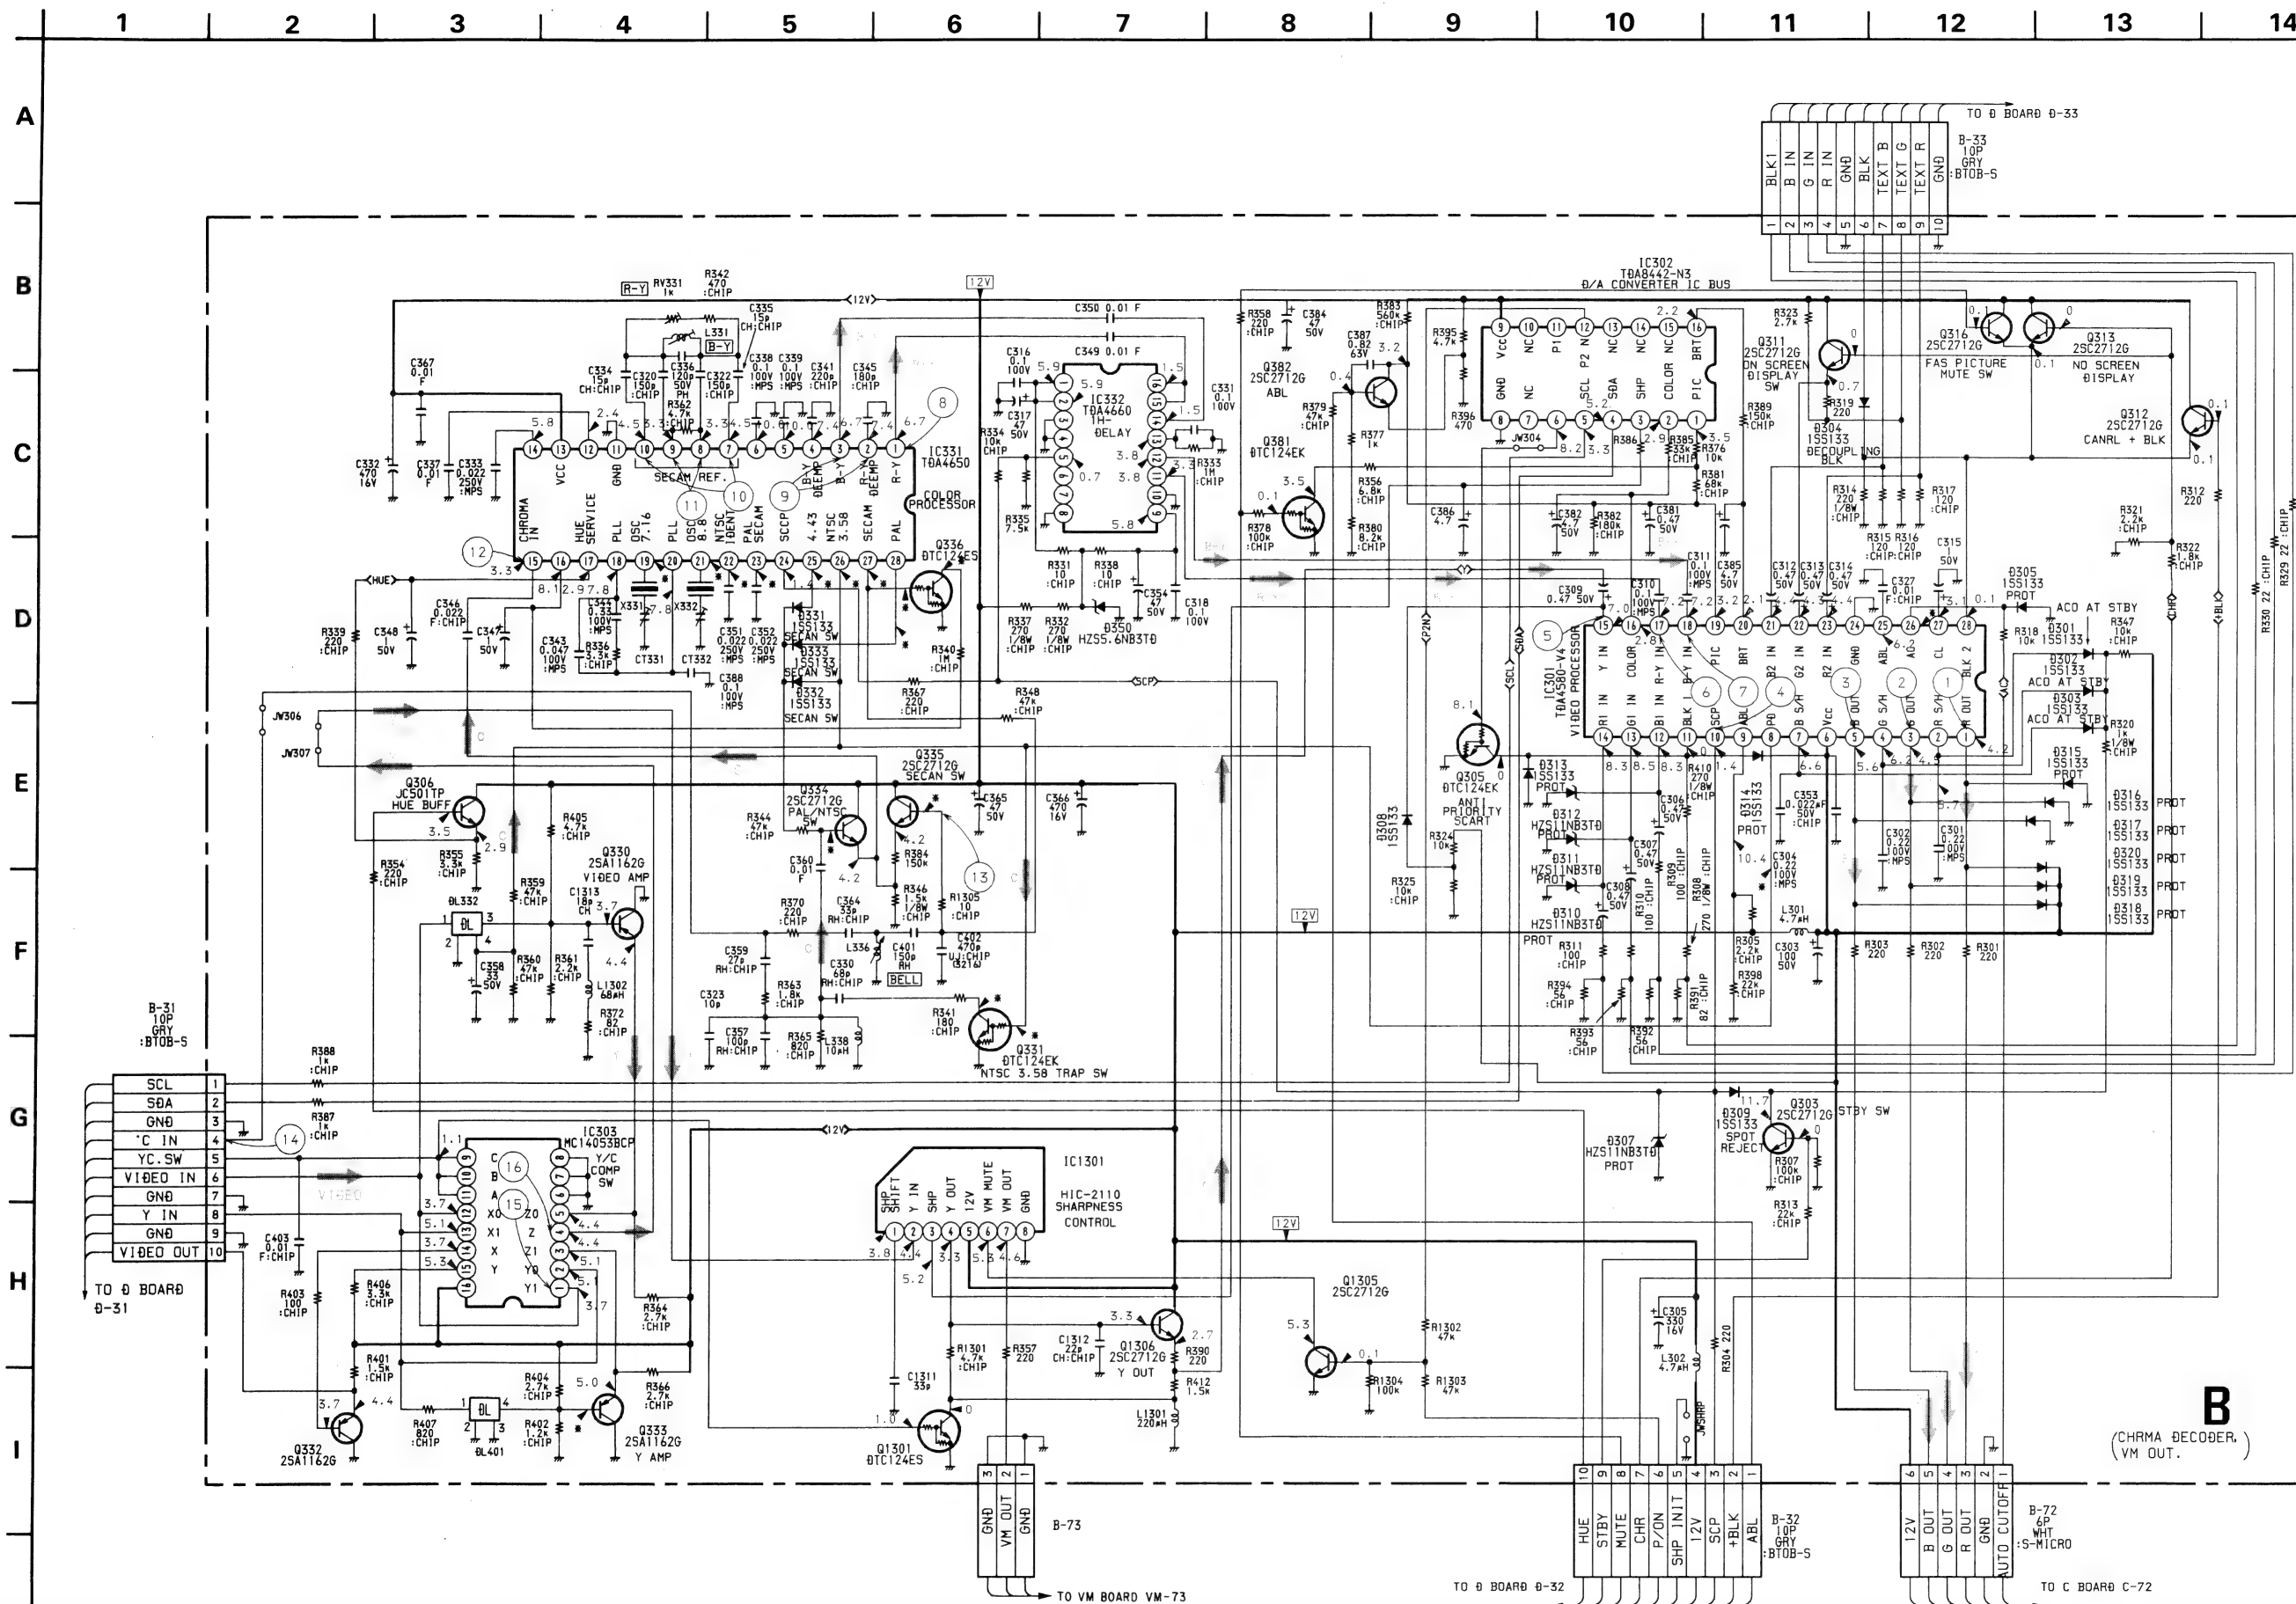


• WAVEFORMS B BOARD

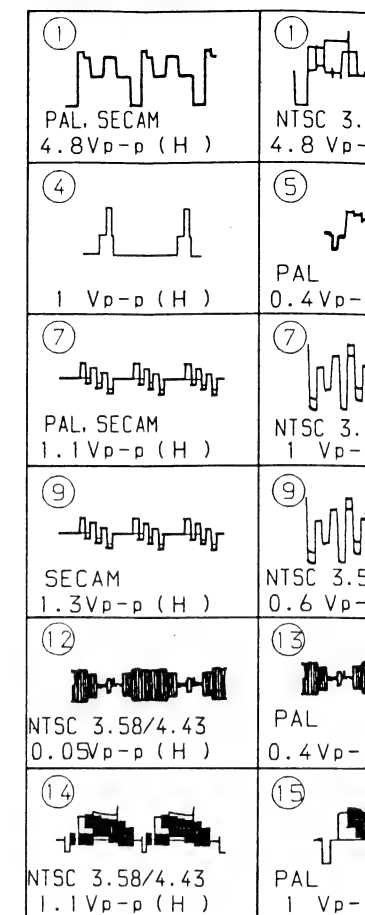


As to the voltage value shown by mark ※ on the Schematic Diagram, the another list.

		PAL	SECAM	NTSC3.58	NTSC4.43
IC301	(8)	0.1	0.1	5.8	0.1
	(26)	6.7	6.8	5.1	5.1
IC331	(19)	3.1	3.6	3.1	2.8
	(21)	3.0	3.5	2.9	2.7
	(22)	5.6	5.6	7.1	7.2
	(23)	7.5	7.0	5.6	5.6
	(25)	0.1	0.1	0.1	5.8
	(26)	0.1	0.1	5.8	0.1
	(27)	0.1	5.8	0.1	0.1
	(28)	5.9	0.1	0.1	0.1
Q331	(B1)	0.1	0.1	5.8	0.1
	(C)	1.5	1.9	0	0.8
Q333	(B1)	3.4	4.4	4.4	4.4
Q334	(B1)	4.9	0.1	4.8	4.8
Q335	(B1)	0.1	4.8	0.1	0.1
Q336	(B1)	0.1	5.8	0.1	0.1
	(C)	7.3	0	7.3	7.3


• WAVEFORMS B BOARD

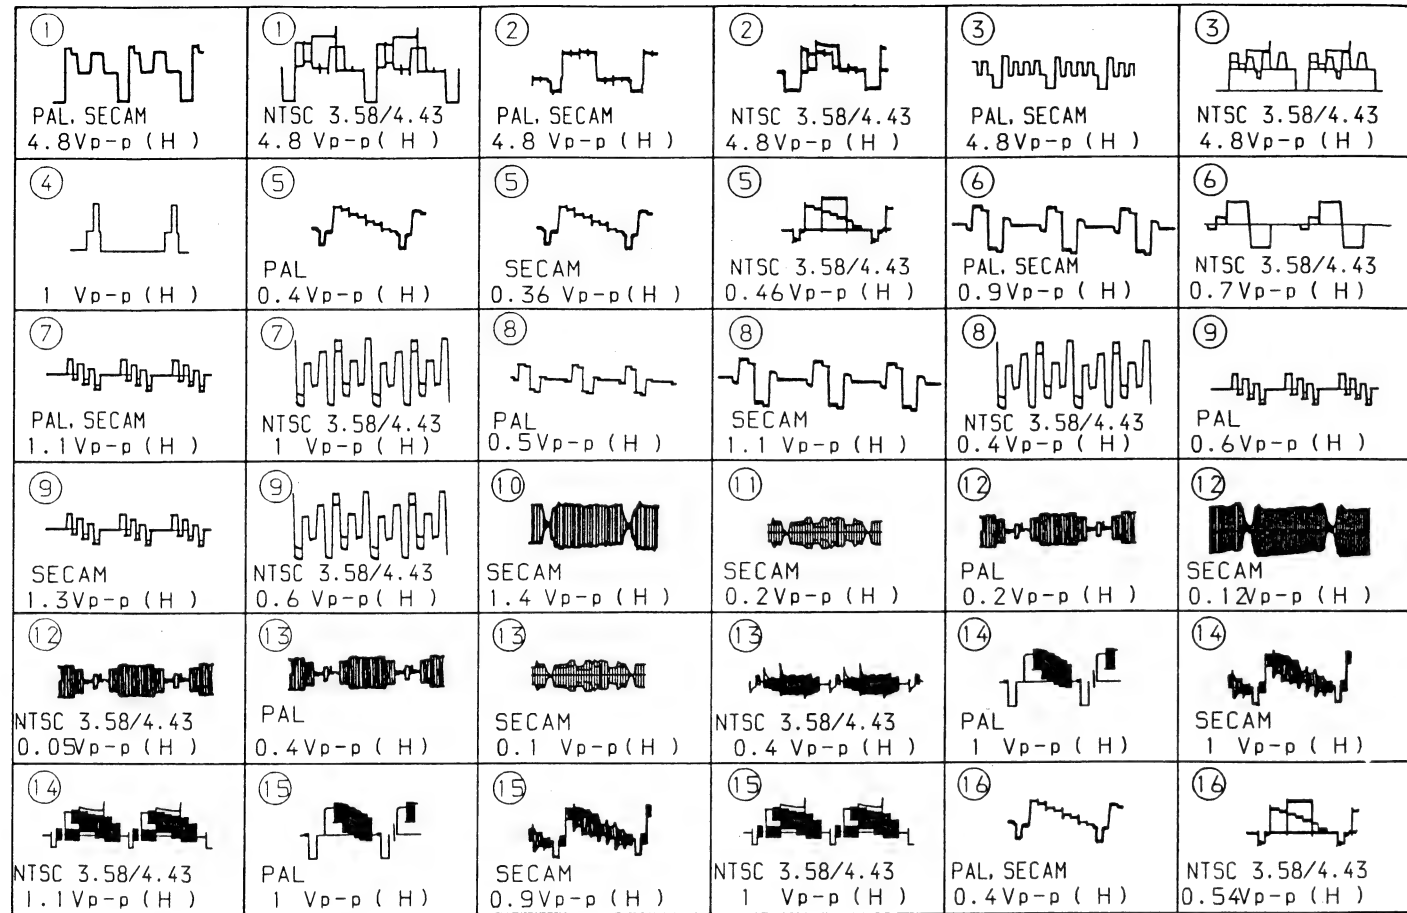


—B Board—

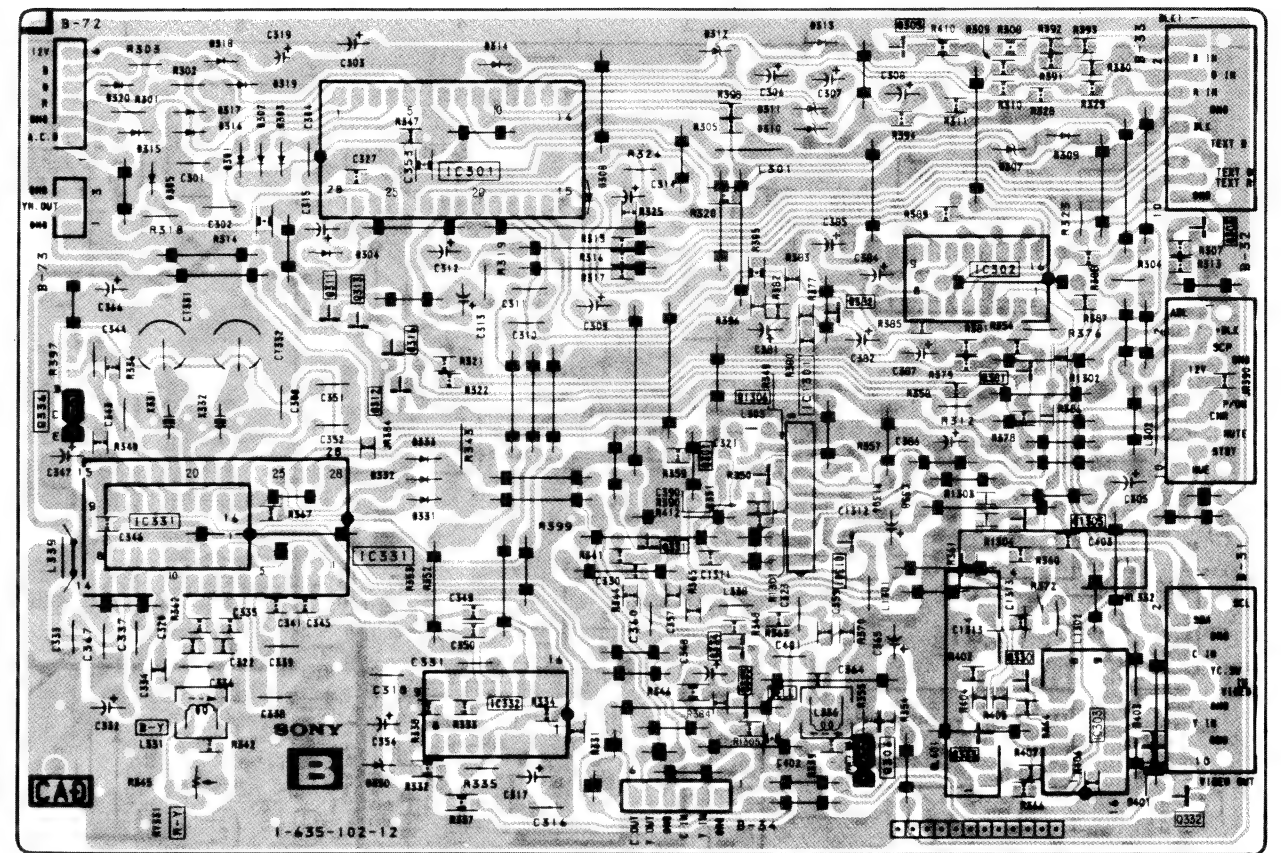


B BOARD IC301 TDA4580

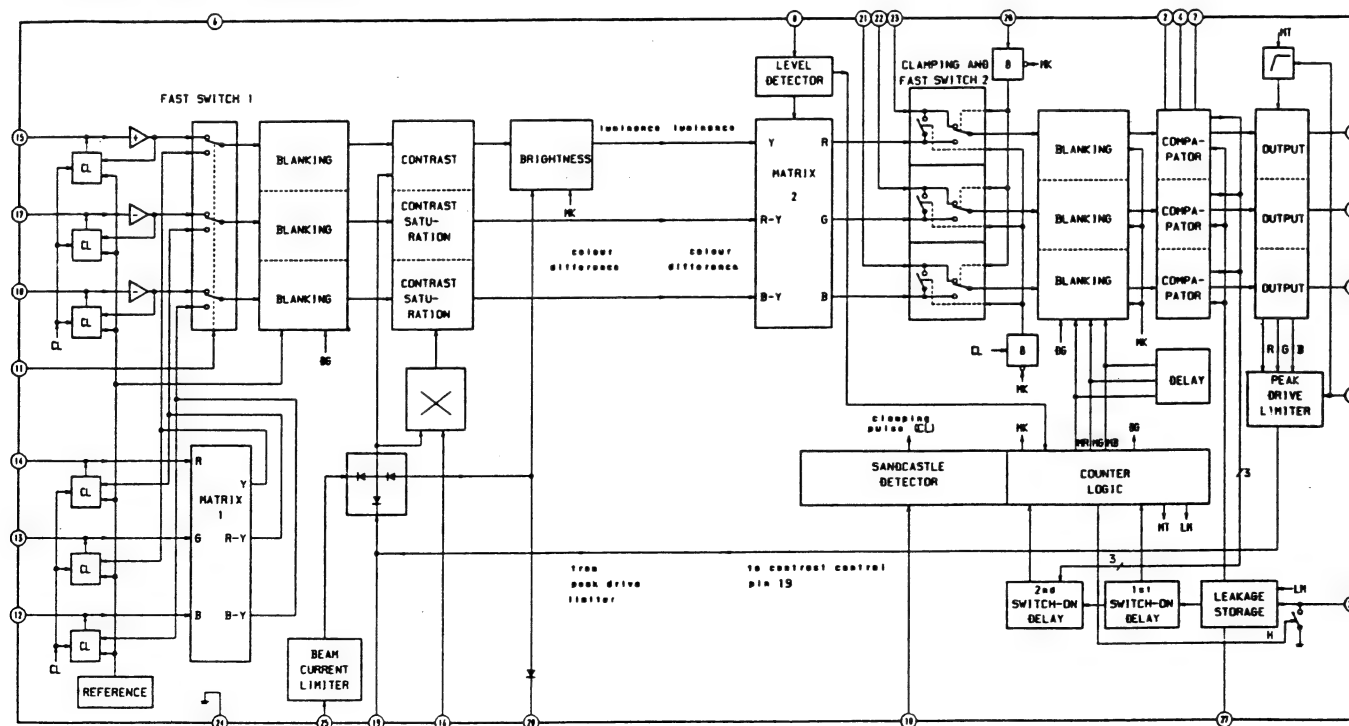


• B BOARD IC331 TDA4650

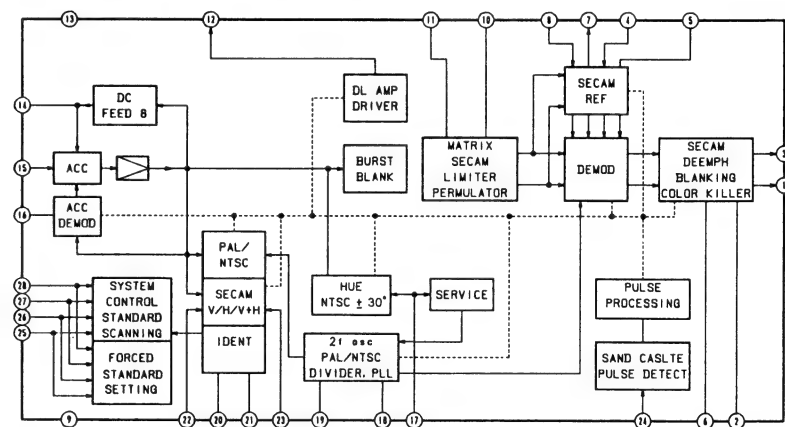

B BOARD IC302 TDA8442-N3

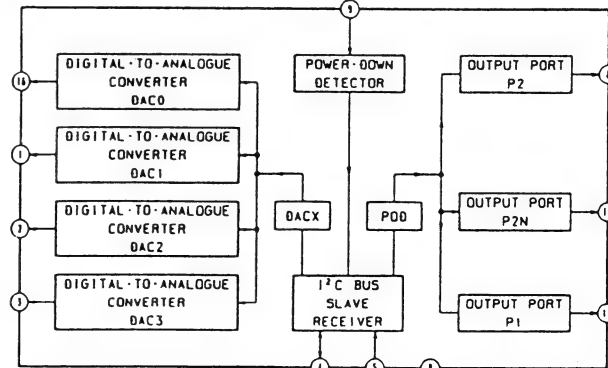




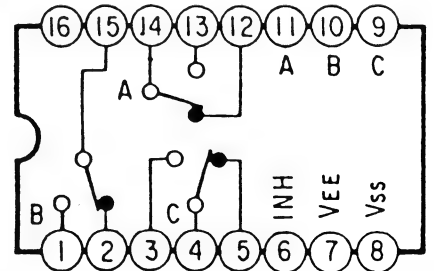


B BOARD IC303 MC14053BCP

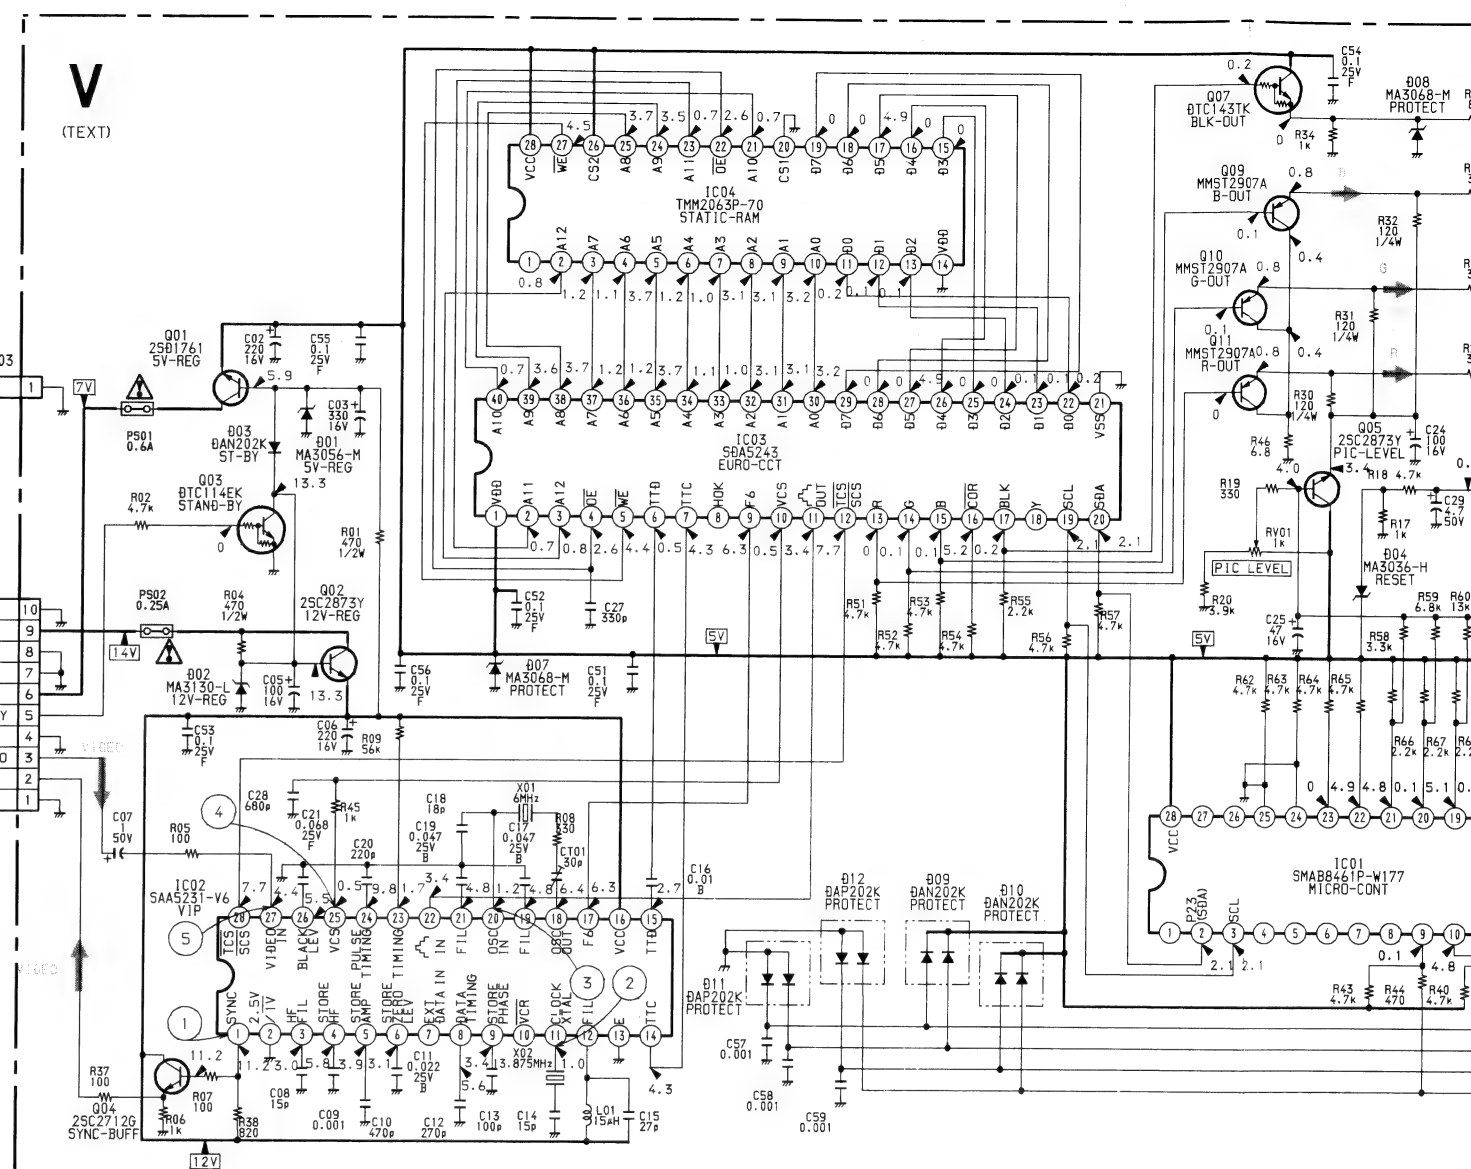


As to the voltage value shown by the mark ※ on the Schematic Diagram, see the another list.


	PAL	SECAM	NTSC3.58	NTSC4.43
IC301 (A)	0.1	0.1	5.8	0.1
(B)	6.7	6.8	5.1	5.1
IC331 (A)	3.1	3.6	3.1	2.8
(B)	3.0	3.5	2.9	2.7
(C)	5.6	5.6	7.1	7.2
(D)	7.5	7.0	5.6	5.6
(E)	0.1	0.1	0.1	5.8
(F)	0.1	0.1	5.8	0.1
(G)	0.1	5.8	0.1	0.1
(H)	5.9	0.1	0.1	0.1
Q331 (B)	0.1	0.1	5.8	0.1
(C)	1.5	1.9	0	0.8
Q333 (B)	3.4	4.4	4.4	4.4
Q334 (B)	4.9	0.1	4.8	4.8
Q335 (B)	0.1	4.8	0.1	0.1
Q336 (B)	0.1	5.8	0.1	0.1
(C)	7.3	0	7.3	7.3




<p>(1)</p>  <p>0.9 V_{p-p} (H)</p>	<p>(2)</p>  <p>0.9 V_{p-p} (13.875MHz)</p>	<p>(3)</p>  <p>0.4 V_{p-p} (6MHz)</p>
<p>(4)</p>  <p>2.8 V_{p-p} (H)</p>	<p>(5)</p>  <p>1 V_{p-p} (H)</p>	

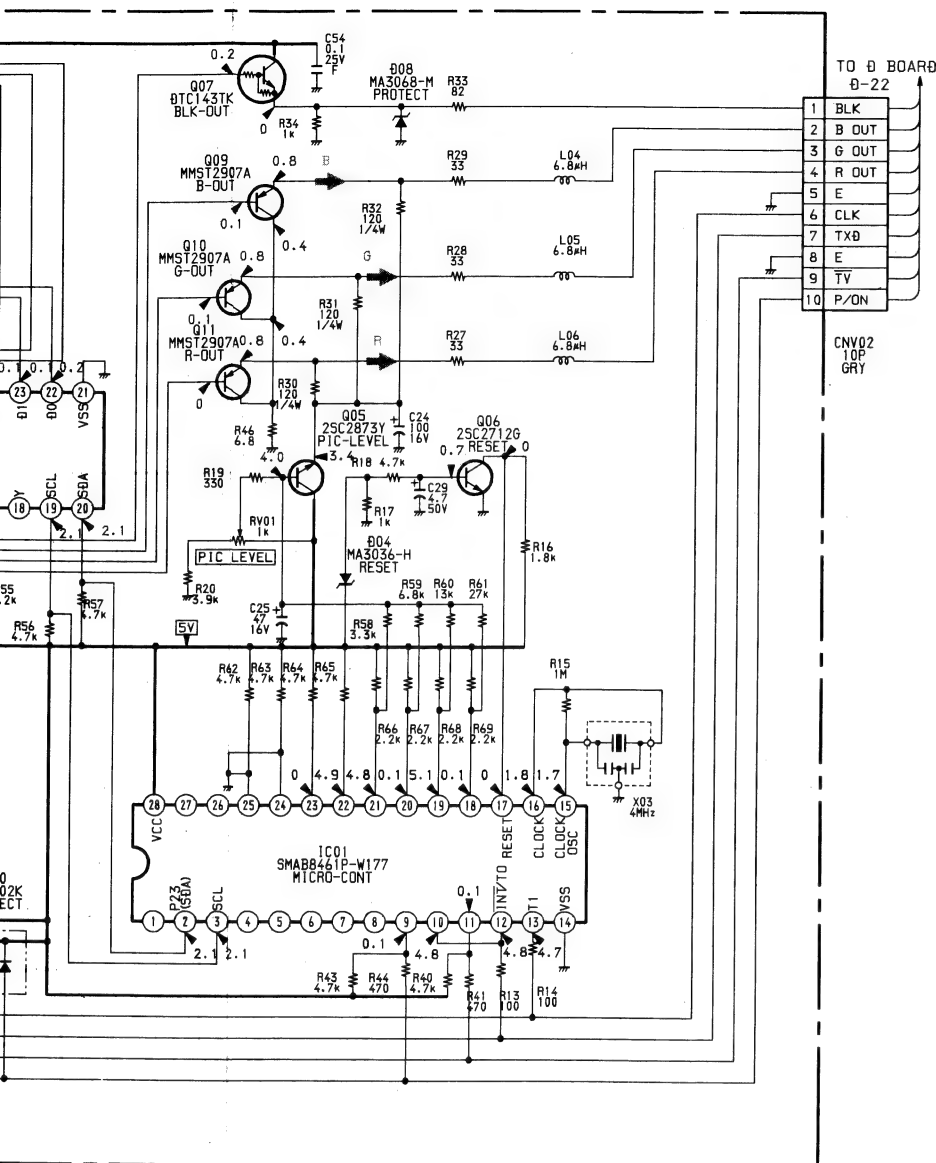


-V Board-

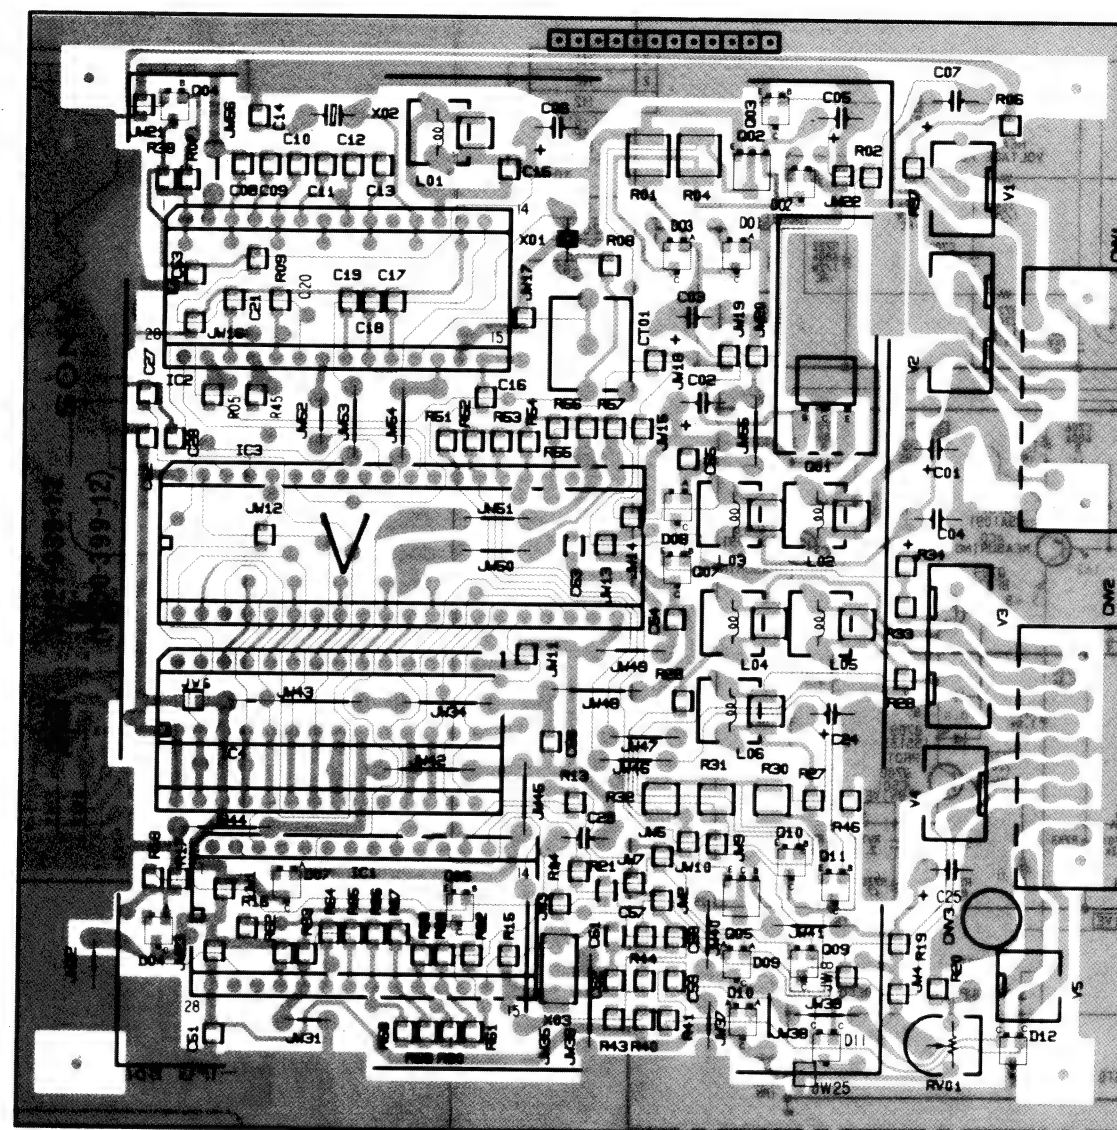

-VM Board-

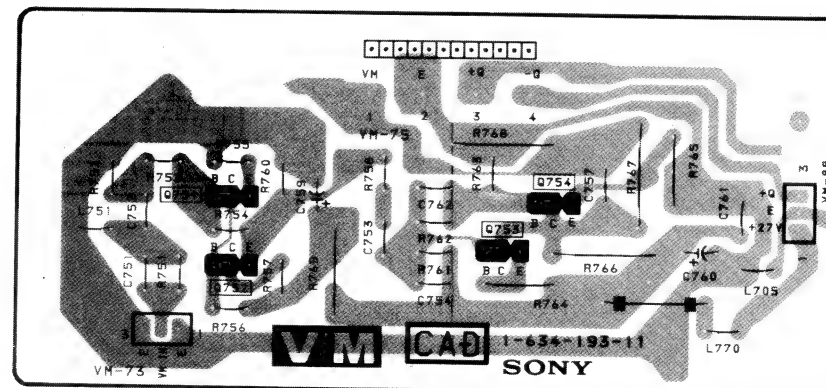

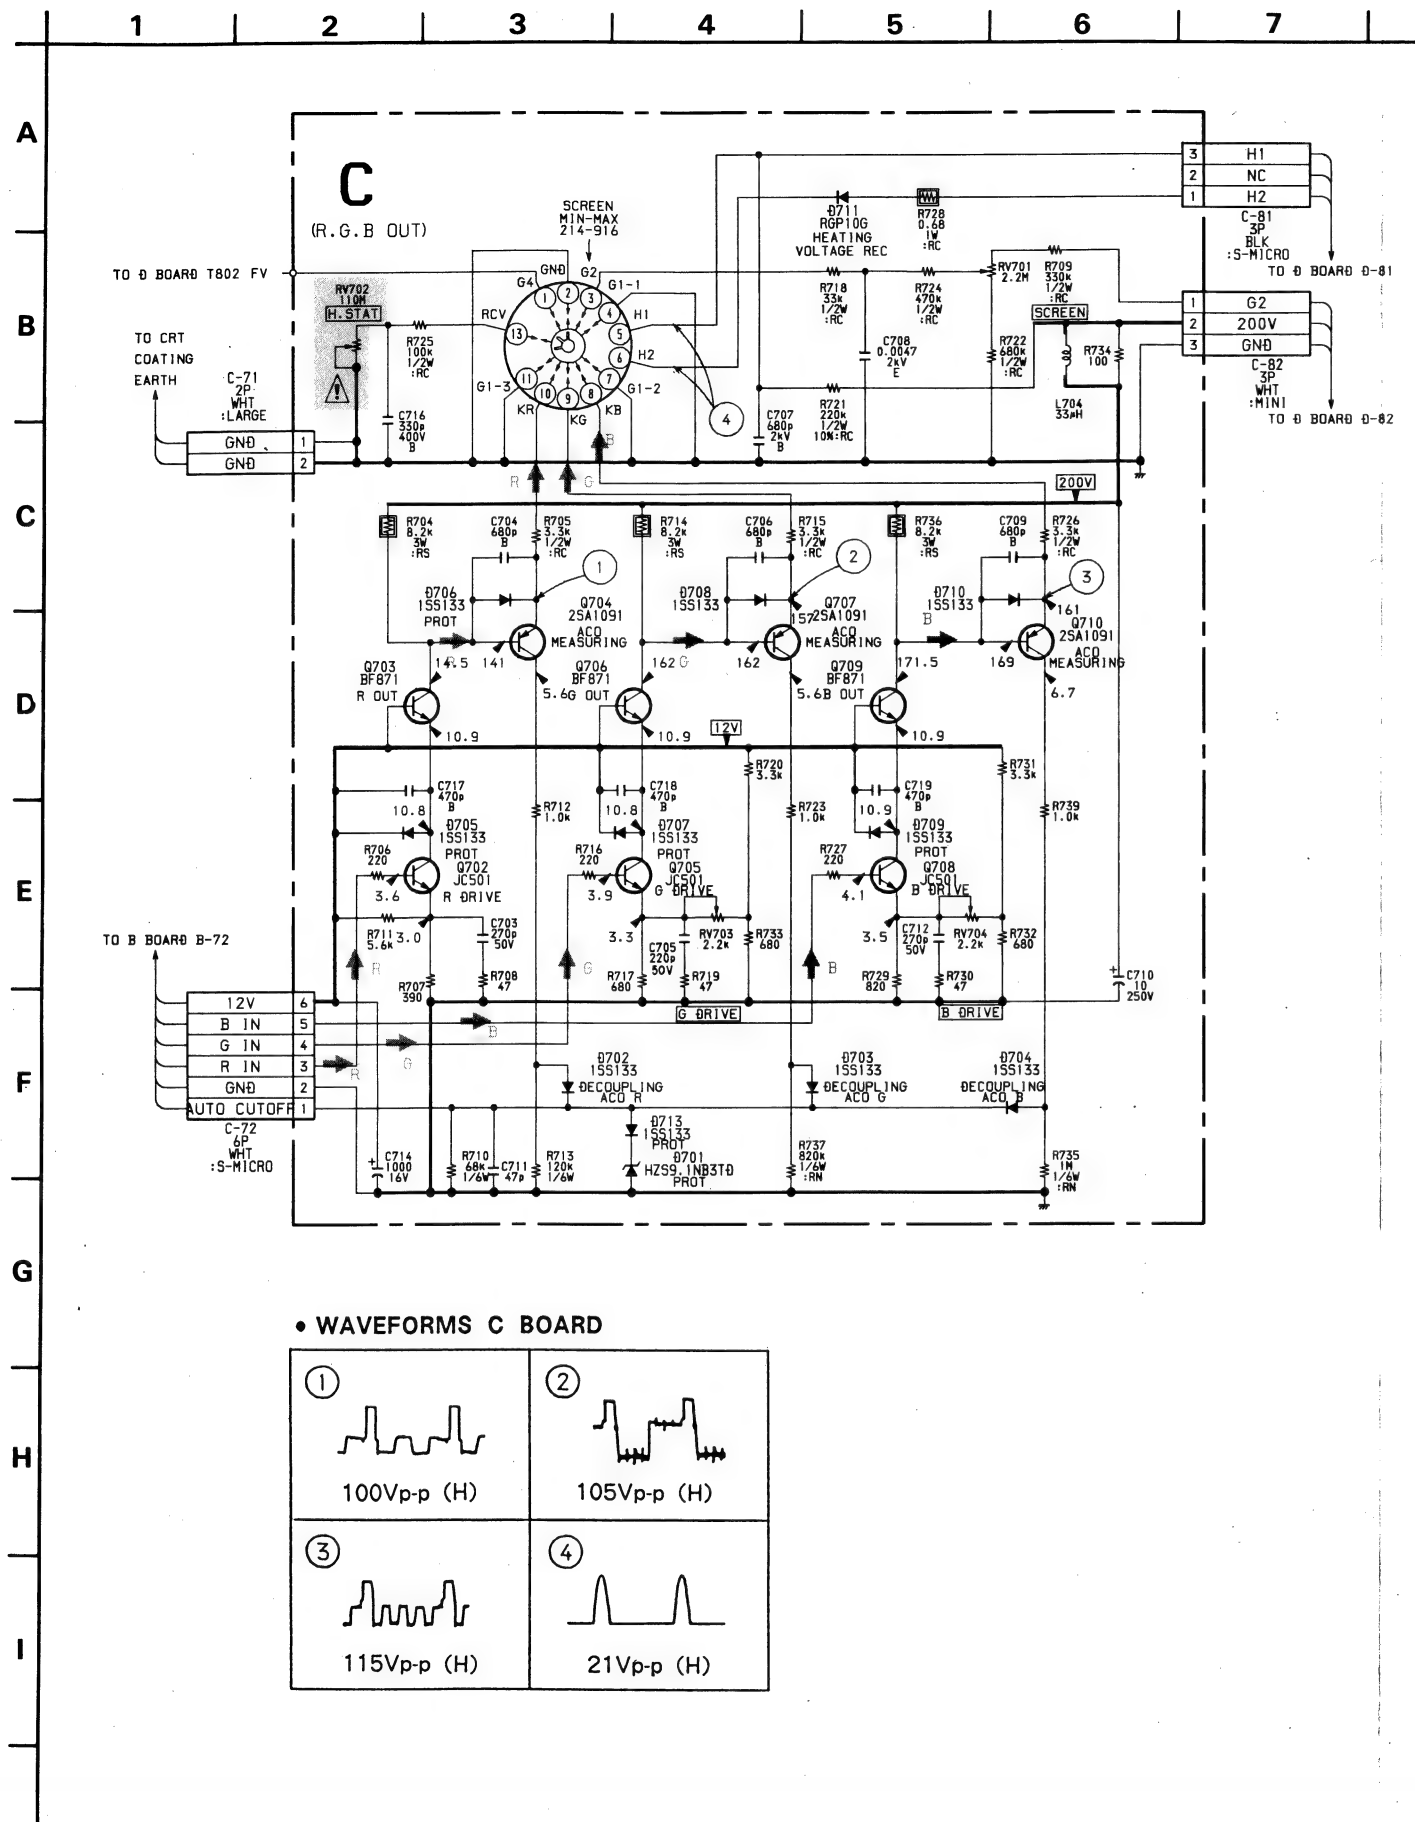

BA4558 SDA2546 TEA2014 TEA2031A	TDA2050	DTC124ES DTC144ES	CTU-12S	HZS10NB3TD HZS11NB3TD HZS13NB2TD HZS15NB1TD HZS33NB1TD HZS36NB4TD HZS4.7NB2TD HZS5.6NB2TD HZS5.6NB3TD HZS6.2NB2TD HZS6.8NB3TD HZS7.5NB3TD HZS9.1NB3TD 1SS133
BX1387	TDA8170	JA101 JC501 2SA1091 2SD789	DAN202K	KBU4JL-6088
CXA1114P SAA5231-V6 SMAB8461P-W177 TDA4580 TDA4650 TDA6200 TEA2028B TMM2063P-70	TYA7812CT μPC24M05HF	2SB734 2SD774	DAP202K	MA3036H MA3056M MA3068M MA3130L
CXD1050A	BF871	2SB1185 2SD1761	DA204K	ERC06-15S ERC25-06S
HIC2110	BU508AS1 BU508AS2 2SD1584-LB 2SD1941	2SC2688	ERD29-08J	LD-201VR
MC14053BCP PCF8574 TDA4660 TDA8442-N3 TEA2260	DTA144EK DTC114EK DTC124EK DTC143TK DTC144EK MMST2907A 2SA1162G 2SC2712	2SC2873Y	ES1F GP08D RGP10G RGP15J	
SDA2083 SDA5243		2SD2096		

SECTION 6 EXPLODED VIEWS

NOTE:


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark **△** are critical for safety.
Replace only with part number specified.

(1) CHASSIS


●: BVTP 3×12 7-685-648-79

■: BVTP 4×16 7-685-663-79

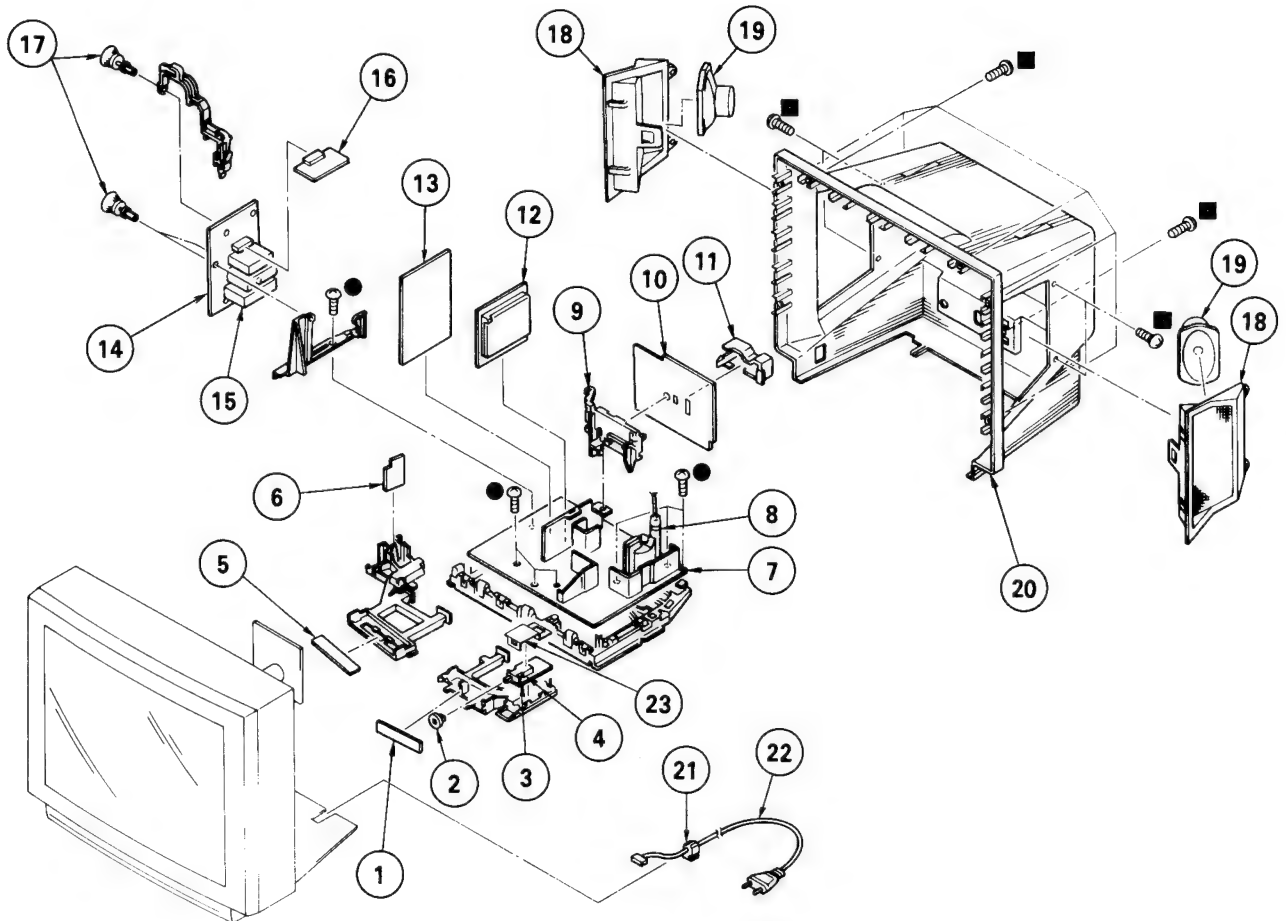

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	*1-633-410-11	H2 BOARD		13	*A-1621-011-A	B BOARD, COMPLETE	
2	4-386-611-01	COVER, SWITCH		14	*A-1632-005-A	A BOARD, COMPLETE	
3	*1-633-408-11	F BOARD		15	△.1-465-301-11	TUNER, ET (UV-816(PLL))	
4	△.1-571-433-11	SWITCH, PUSH (AC POWER)		16	*A-1654-003-A	IFG BOARD, COMPLETE	
5	*1-633-409-11	H1 BOARD		17	4-386-618-01	RIVET, T TYPE	
6	*1-633-411-11	J2 BOARD		18	X-4398-901-1	BOARD ASSY, Baffle	
7	*A-1642-008-A	D BOARD, COMPLETE		19		SPEAKER	
8	△.1-439-416-11	TRANSFORMER ASSY, FLYBACK (UX-1600)		20	4-398-910-01	COVER, REAR	
9	*4-386-624-11	BRACKET, J		21	△.4-389-201-02	HOLDER, AC CORD	
10	*A-1651-015-A	J1 BOARD, COMPLETE		22	△.1-575-487-11	CORD, POWER (WITH NOISE FILTER)	
11	4-200-014-01	BRACKET, TERMINAL		23	4-200-274-01	COVER, POWER SWITCH	
12	*A-1347-031-A	V BOARD, COMPLETE					

(2) PICTURE TUBE

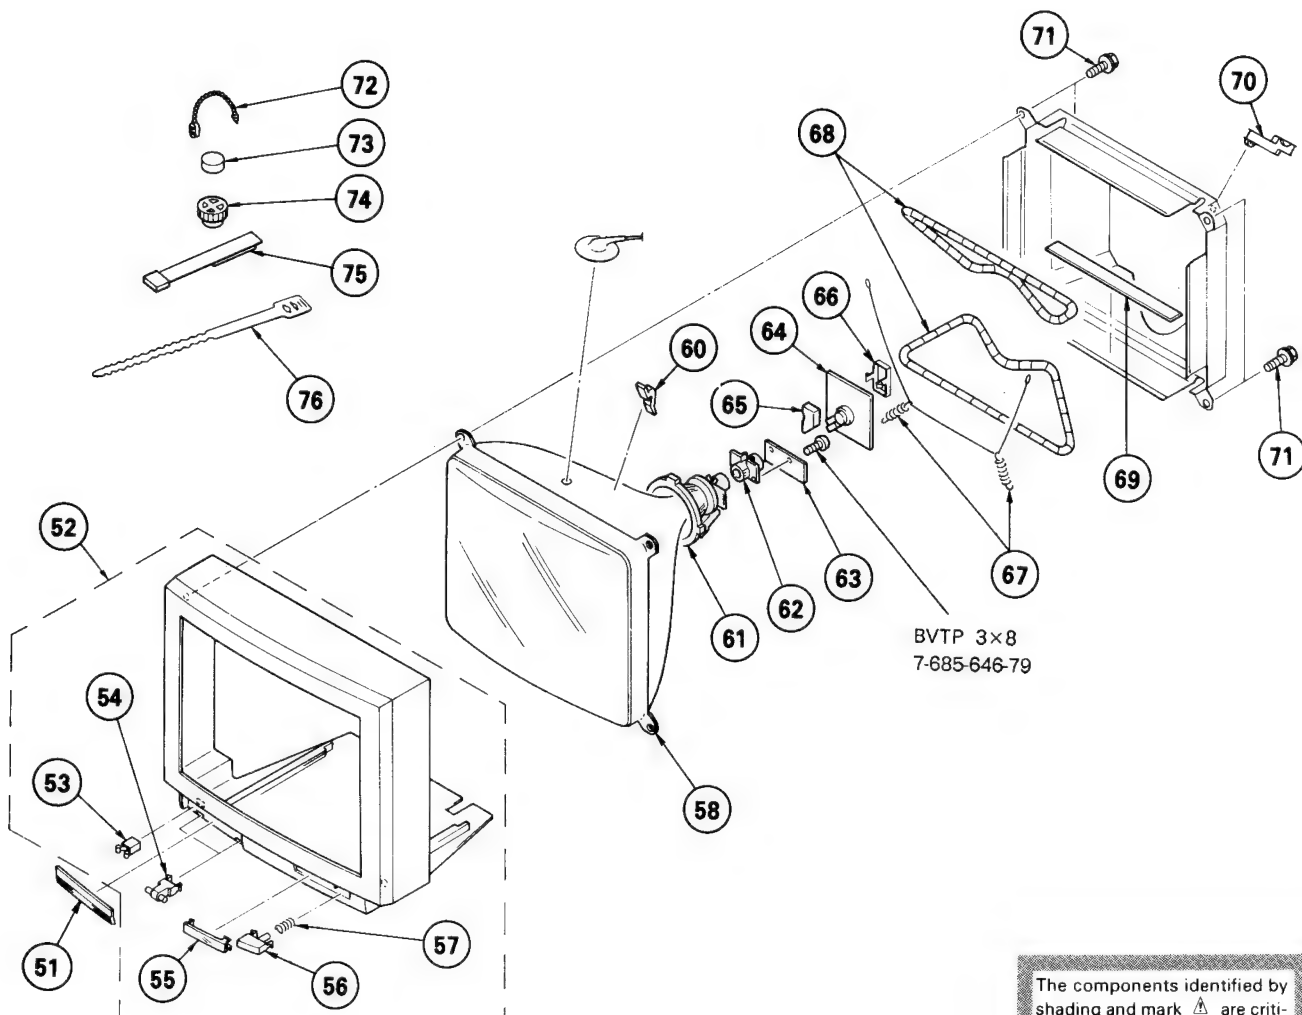

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	4-398-911-01	DOOR, CONTROL		65	*4-379-167-01	COVER (MAIN), CV	
52	X-4398-902-1	CABINET ASSY (WITH BEZEL ASSY)	53-57	66	*4-379-160-01	COVER (REAR LID), CV	
53	4-392-036-01	CATCHER, PUSH		67	4-369-318-00	SPRING, TENSION	
54	3-703-035-11	SHAFT, LID		68	Δ 1-426-398-11	COIL, DEMAGNETIZATION	
55	4-200-148-01	WINDOW, ORNAMENTAL		69	4-389-291-01	CUSHION	
56	4-200-150-01	BUTTON, POWER		70	*4-387-216-01	HOLDER, LEAD	
57	4-329-112-21	SPRING		71	4-373-263-01	SCREW (M), PT	
58	Δ 8-733-823-05	PICTURE TUBE (A68JYK60X)		72	4-308-870-00	CLIP, LEAD WIRE	
60	3-704-495-01	SPACER, DY		73	1-452-032-00	MAGNET, DISK; 10MM ϕ	
61	Δ 1-451-313-21	DEFLECTION YOKE (Y29FXA)		74	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM ϕ	
62	Δ 1-452-509-42	NECK ASSY, PICTURE TUBE (NA-308)		75	X-4387-214-1	PERMALLOY ASSY, CORRECTION	
63	*1-634-193-11	VM BOARD		76	3-701-007-00	BAND, BINDING	
64	*A-1638-007-A	C BOARD, COMPLETE					

SECTION 7 ELECTRICAL PARTS LIST

V

NOTE:

The components identified by shading and mark **A** are critical for safety.
Replace only with part number specified.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

• All resistors are in ohms
• F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS

• MF : μ F, PF : μ F

COILS

• MMH : mH, UH : μ H

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	*A-1347-031-A	V BOARD, COMPLETE *****				<DIODE>	
	*4-380-699-01	CASE (UPPER LID), SHIELD, A1		D01	8-719-105-91	DIODE RD5.6M-B2	
		<CAPACITOR>		D02	8-719-106-79	DIODE RD13M-B1	
C02	1-124-120-11	ELECT 220MF 20% 16V		D03	8-719-400-18	DIODE MA152WK	
C03	1-124-119-00	ELECT 330MF 20% 16V		D04	8-719-105-52	DIODE RD3.6M-B2	
C05	1-126-101-11	ELECT 100MF 20% 16V		D07	8-719-106-17	DIODE RD6.8M-B2	
C06	1-124-120-11	ELECT 220MF 20% 16V		D08	8-719-106-17	DIODE RD6.8M-B2	
C07	1-124-791-11	ELECT 1MF 20% 50V		D09	8-719-400-18	DIODE MA152WK	
C08	1-163-097-00	CERAMIC CHIP 15PF 5% 50V		D10	8-719-400-18	DIODE MA152WK	
C09	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V		D11	8-719-914-44	DIODE DAP202K	
C10	1-163-133-00	CERAMIC CHIP 470PF 5% 50V		D12	8-719-914-44	DIODE DAP202K	
C11	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V				<IC>	
C12	1-163-127-00	CERAMIC CHIP 270PF 5% 50V		IC1	8-759-986-92	IC MAB-8461P-W177	
C13	1-163-117-00	CERAMIC CHIP 100PF 5% 50V		IC2	8-759-972-96	IC SAA5231-V6	
C14	1-163-097-00	CERAMIC CHIP 15PF 5% 50V		IC3	8-759-032-98	IC SDA5243	
C15	1-163-103-00	CERAMIC CHIP 27PF 5% 50V		IC4	8-759-230-68	IC TMW2063P-70	
C16	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V				<COIL>	
C17	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V		L01	1-408-411-00	INDUCTOR 15UH	
C18	1-163-099-00	CERAMIC CHIP 18PF 5% 50V		L04	1-408-407-00	INDUCTOR 6.8UH	
C19	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V		L05	1-408-407-00	INDUCTOR 6.8UH	
C20	1-163-125-00	CERAMIC CHIP 220PF 5% 50V		L06	1-408-407-00	INDUCTOR 6.8UH	
C21	1-163-833-00	CERAMIC CHIP 0.068MF 25V				<IC LINK>	
C24	1-126-101-11	ELECT 100MF 20% 16V		PS01	A.1-532-679-91	LINK, IC (ICP-N15) 0.6A	
C25	1-124-477-11	ELECT 47MF 20% 16V		PS02	A.1-532-727-91	LINK, IC 0.25A	
C27	1-163-129-00	CERAMIC CHIP 330PF 5% 50V				<TRANSISTOR>	
C28	1-163-137-00	CERAMIC CHIP 680PF 5% 50V		Q3	8-729-900-53	TRANSISTOR DTC114EK	
C29	1-124-927-11	ELECT 4.7MF 20% 50V		Q01	8-729-107-26	TRANSISTOR 2SD1585-K	
C51	1-163-038-00	CERAMIC CHIP 0.1MF 25V		Q02	8-729-807-50	TRANSISTOR 2SD1623-R	
C52	1-163-038-00	CERAMIC CHIP 0.1MF 25V		Q04	8-729-271-22	TRANSISTOR 2SC2712-G	
C53	1-163-038-00	CERAMIC CHIP 0.1MF 25V		Q05	8-729-807-50	TRANSISTOR 2SD1623-R	
C54	1-163-038-00	CERAMIC CHIP 0.1MF 25V		Q06	8-729-271-22	TRANSISTOR 2SC2712-G	
C55	1-163-038-00	CERAMIC CHIP 0.1MF 25V		Q07	8-729-900-98	TRANSISTOR DTC143TK	
C56	1-163-038-00	CERAMIC CHIP 0.1MF 25V		Q09	8-729-807-87	TRANSISTOR 2SB1295-UL6	
C57	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V		Q10	8-729-807-87	TRANSISTOR 2SB1295-UL6	
C58	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V		Q11	8-729-807-87	TRANSISTOR 2SB1295-UL6	
C59	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V				<RESISTOR>	
		<CONNECTOR>		JW1	1-216-295-00	METAL GLAZE 0 5% 1/10W	
CNV01	*1-565-393-11	CONNECTOR, BOARD TO BOARD		JW2	1-216-295-00	METAL GLAZE 0 5% 1/10W	
CNV02	*1-565-393-11	CONNECTOR, BOARD TO BOARD		JW3	1-216-295-00	METAL GLAZE 0 5% 1/10W	
CNV03	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P		JW4	1-216-295-00	METAL GLAZE 0 5% 1/10W	
		<TRIMMER>		JW5	1-216-295-00	METAL GLAZE 0 5% 1/10W	
CT01	1-141-392-11	CAP, VAR, TRIMMER (1 GANG)		JW6	1-216-295-00	METAL GLAZE 0 5% 1/10W	



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
JW7	1-216-295-00	METAL GLAZE	0 5% 1/10W	R64	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
JW8	1-216-295-00	METAL GLAZE	0 5% 1/10W	R65	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
JW9	1-216-295-00	METAL GLAZE	0 5% 1/10W	R66	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
JW10	1-216-295-00	METAL GLAZE	0 5% 1/10W	R67	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
JW11	1-216-295-00	METAL GLAZE	0 5% 1/10W	R68	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
JW12	1-216-295-00	METAL GLAZE	0 5% 1/10W	R69	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
JW13	1-216-295-00	METAL GLAZE	0 5% 1/10W			<VARIABLE RESISTOR>	
JW14	1-216-295-00	METAL GLAZE	0 5% 1/10W	RV01	1-238-012-11	RES, ADJ, CARBON 1K	
JW15	1-216-295-00	METAL GLAZE	0 5% 1/10W			<CRYSTAL>	
JW16	1-216-295-00	METAL GLAZE	0 5% 1/10W	X01	1-567-162-00	OSCILLATOR, CRYSTAL	
JW17	1-216-295-00	METAL GLAZE	0 5% 1/10W	X02	1-567-495-11	OSCILLATOR, CRYSTAL	
JW18	1-216-295-00	METAL GLAZE	0 5% 1/10W	X03	1-577-082-11	VIBRATOR, CERAMIC	
JW19	1-216-295-00	METAL GLAZE	0 5% 1/10W			*****	
JW20	1-216-295-00	METAL GLAZE	0 5% 1/10W			*A-1621-011-A B BOARD, COMPLETE	
JW21	1-216-295-00	METAL GLAZE	0 5% 1/10W			*****	
JW22	1-216-295-00	METAL GLAZE	0 5% 1/10W			*1-565-393-11 CONNECTOR, BOARD TO BOARD	
JW23	1-216-295-00	METAL GLAZE	0 5% 1/10W			*1-568-878-51 PIN, CONNECTOR 3P	
JW24	1-216-295-00	METAL GLAZE	0 5% 1/10W			*1-568-881-51 PIN, CONNECTOR 6P	
JW25	1-216-295-00	METAL GLAZE	0 5% 1/10W			<CAPACITOR>	
R01	1-218-326-11	METAL GLAZE	470 5% 1/2W	C301	1-106-228-00	MYLAR 0.22MF 10% 100V	
R02	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C302	1-106-228-00	MYLAR 0.22MF 10% 100V	
R04	1-218-326-11	METAL GLAZE	470 5% 1/2W	C303	1-124-122-11	ELECT 100MF 20% 50V	
R05	1-216-025-00	METAL GLAZE	100 5% 1/10W	C304	1-106-228-00	MYLAR 0.22MF 10% 100V	
R06	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C305	1-124-119-00	ELECT 330MF 20% 16V	
R07	1-216-025-00	METAL GLAZE	100 5% 1/10W	C306	1-124-902-00	ELECT 0.47MF 20% 50V	
R08	1-216-037-00	METAL GLAZE	330 5% 1/10W	C307	1-124-902-00	ELECT 0.47MF 20% 50V	
R09	1-216-091-00	METAL GLAZE	56K 5% 1/10W	C308	1-124-902-00	ELECT 0.47MF 20% 50V	
R13	1-216-025-00	METAL GLAZE	100 5% 1/10W	C309	1-124-902-00	ELECT 0.47MF 20% 50V	
R14	1-216-025-00	METAL GLAZE	100 5% 1/10W	C310	1-106-220-00	MYLAR 0.1MF 10% 100V	
R15	1-216-121-00	METAL GLAZE	1M 5% 1/10W	C311	1-106-220-00	MYLAR 0.1MF 10% 100V	
R16	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W	C312	1-124-902-00	ELECT 0.47MF 20% 50V	
R17	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C313	1-124-902-00	ELECT 0.47MF 20% 50V	
R18	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C314	1-124-902-00	ELECT 0.47MF 20% 50V	
R19	1-216-037-00	METAL GLAZE	330 5% 1/10W	C315	1-124-791-11	ELECT 1MF 20% 50V	
R20	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W	C316	1-106-220-00	MYLAR 0.1MF 10% 100V	
R27	1-216-013-00	METAL GLAZE	33 5% 1/10W	C317	1-124-910-11	ELECT 47MF 20% 50V	
R28	1-216-013-00	METAL GLAZE	33 5% 1/10W	C318	1-106-220-00	MYLAR 0.1MF 10% 100V	
R29	1-216-013-00	METAL GLAZE	33 5% 1/10W	C320	1-163-121-00	CERAMIC CHIP 150PF 5% 50V	
R30	1-218-325-11	METAL GLAZE	120 5% 1/4W	C322	1-163-121-00	CERAMIC CHIP 150PF 5% 50V	
R31	1-218-325-11	METAL GLAZE	120 5% 1/4W	C323	1-102-947-00	CERAMIC CHIP 10PF 0.5PF 50V	
R32	1-218-325-11	METAL GLAZE	120 5% 1/4W	C327	1-164-232-11	CERAMIC CHIP 0.01MF 5% 50V	
R33	1-216-023-00	METAL GLAZE	82 5% 1/10W	C330	1-163-113-00	CERAMIC CHIP 68PF 5% 50V	
R34	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C331	1-106-220-00	MYLAR 0.1MF 10% 100V	
R37	1-216-025-00	METAL GLAZE	100 5% 1/10W	C332	1-126-103-11	ELECT 470MF 20% 16V	
R38	1-216-047-00	METAL GLAZE	820 5% 1/10W	C333	1-106-375-12	MYLAR 0.022MF 10% 250V	
R40	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C334	1-163-097-00	CERAMIC CHIP 15PF 5% 50V	
R41	1-216-041-00	METAL GLAZE	470 5% 1/10W	C335	1-163-097-00	CERAMIC CHIP 15PF 5% 50V	
R43	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C336	1-102-816-00	CERAMIC 120PF 5% 50V	
R44	1-216-041-00	METAL GLAZE	470 5% 1/10W	C337	1-101-004-00	CERAMIC 0.01MF 50V	
R45	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C338	1-106-220-00	MYLAR 0.1MF 10% 100V	
R46	1-216-311-00	METAL GLAZE	6.8 5% 1/10W	C339	1-106-220-00	MYLAR 0.1MF 10% 100V	
R51	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C341	1-163-125-00	CERAMIC CHIP 220PF 5% 50V	
R52	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C343	1-106-383-00	MYLAR 0.047MF 10% 100V	
R53	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C344	1-130-783-00	MYLAR 0.33MF 10% 100V	
R54	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C345	1-163-123-00	CERAMIC CHIP 180PF 5% 50V	
R55	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	C346	1-163-033-00	CERAMIC CHIP 0.022MF 50V	
R56	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R57	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R58	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W				
R59	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W				
R60	1-216-076-00	METAL GLAZE	13K 5% 1/10W				
R61	1-216-083-00	METAL GLAZE	27K 5% 1/10W				
R62	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R63	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C347	1-124-791-11	ELECT	1MF	20%	50V		
C348	1-124-791-11	ELECT	1MF	20%	50V		
C349	1-101-004-00	CERAMIC	0.01MF		50V		
C350	1-164-232-11	CERAMIC CHIP	0.01MF		50V		
C351	1-106-375-12	MYLAR	0.022MF	10%	250V		
C352	1-106-375-12	MYLAR	0.022MF	10%	250V		
C353	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V		
C354	1-124-910-11	ELECT	47MF	20%	50V		
C357	1-163-117-00	CERAMIC CHIP	100PF	5%	50V		
C358	1-124-917-11	ELECT	33MF	20%	50V		
C359	1-163-103-00	CERAMIC CHIP	27PF	5%	50V		
C360	1-101-004-00	CERAMIC	0.01MF		50V		
C364	1-163-105-00	CERAMIC CHIP	33PF	5%	50V		
C365	1-124-910-11	ELECT	47MF	20%	50V		
C366	1-126-103-11	ELECT	470MF	20%	16V		
C367	1-101-004-00	CERAMIC	0.01MF		50V		
C381	1-124-902-00	ELECT	0.47MF	20%	50V		
C382	1-124-927-11	ELECT	4.7MF	20%	50V		
C384	1-124-910-11	ELECT	47MF	20%	50V		
C385	1-124-927-11	ELECT	4.7MF	20%	50V		
C386	1-124-927-11	ELECT	4.7MF	20%	50V		
C387	1-130-833-00	MYLAR	0.82MF	10%	63V		
C388	1-106-220-00	MYLAR	0.1MF	10%	100V		
C401	1-101-361-00	CERAMIC	150PF	5%	50V		
C402	1-163-197-00	CERAMIC CHIP	470PF	5%	50V		
C403	1-164-232-11	CERAMIC CHIP	0.01MF		50V		
C1311	1-163-105-00	CERAMIC CHIP	33PF	5%	50V		
C1312	1-163-101-00	CERAMIC CHIP	22PF	5%	50V		
C1313	1-102-953-00	CERAMIC	18PF	5%	50V		
<TRIMMER>							
CT331	1-141-418-11	CAP, ADJ					
CT332	1-141-418-11	CAP, ADJ					
<DIODE>							
D301	8-719-911-19	DIODE 1SS119					
D302	8-719-911-19	DIODE 1SS119					
D303	8-719-911-19	DIODE 1SS119					
D304	8-719-911-19	DIODE 1SS119					
D305	8-719-911-19	DIODE 1SS119					
D307	8-719-929-24	DIODE HZS11NB3					
D308	8-719-911-19	DIODE 1SS119					
D309	8-719-911-19	DIODE 1SS119					
D310	8-719-929-24	DIODE HZS11NB3					
D311	8-719-929-24	DIODE HZS11NB3					
D312	8-719-929-24	DIODE HZS11NB3					
D313	8-719-911-19	DIODE 1SS119					
D314	8-719-911-19	DIODE 1SS119					
D315	8-719-911-19	DIODE 1SS119					
D316	8-719-911-19	DIODE 1SS119					
D317	8-719-911-19	DIODE 1SS119					
D318	8-719-911-19	DIODE 1SS119					
D319	8-719-911-19	DIODE 1SS119					
D320	8-719-911-19	DIODE 1SS119					
D331	8-719-911-19	DIODE 1SS119					
D332	8-719-911-19	DIODE 1SS119					
D333	8-719-911-19	DIODE 1SS119					
D350	8-719-928-94	DIODE HZS5.6NB3					
<DELAY LINE>							
DL332	1-236-062-11	MODULE, Y DELAY LINE					
DL401	1-415-613-11	DELAY LINE, Y					
<IC>							
IC301	8-759-979-85	IC TDA4580-V4					
IC302	8-759-980-60	IC TDA8442N3					
IC303	8-759-040-53	IC MC14053BCP					
IC331	8-759-990-29	IC TDA4650					
IC332	8-759-505-39	IC TDA4660V2					
IC1301	1-235-534-11	CONTROL MODULE, PICTURE					
<COIL>							
L301	1-410-868-11	INDUCTOR			4.7UH		
L302	1-410-868-11	INDUCTOR			4.7UH		
L331	1-404-554-11	COIL					
L336	1-404-554-11	COIL					
L338	1-408-409-00	INDUCTOR			10UH		
L1301	1-408-425-00	INDUCTOR			220UH		
L1302	1-408-419-00	INDUCTOR			68UH		
<TRANSISTOR>							
Q303	8-729-271-22	TRANSISTOR 2SC2712-G					
Q305	8-729-901-00	TRANSISTOR DTC124EK					
Q306	8-729-119-78	TRANSISTOR 2SC2785-HFE					
Q311	8-729-271-22	TRANSISTOR 2SC2712-G					
Q312	8-729-271-22	TRANSISTOR 2SC2712-G					
Q313	8-729-271-22	TRANSISTOR 2SC2712-G					
Q316	8-729-271-22	TRANSISTOR 2SC2712-G					
Q330	8-729-216-22	TRANSISTOR 2SA1162-G					
Q331	8-729-901-00	TRANSISTOR DTC124EK					
Q332	8-729-216-22	TRANSISTOR 2SA1162-G					
Q333	8-729-216-22	TRANSISTOR 2SA1162-G					
Q334	8-729-271-22	TRANSISTOR 2SC2712-G					
Q335	8-729-271-22	TRANSISTOR 2SC2712-G					
Q336	8-729-900-36	TRANSISTOR DTC124ES					
Q381	8-729-901-00	TRANSISTOR DTC124EK					
Q382	8-729-271-22	TRANSISTOR 2SC2712-G					
Q1301	8-729-901-00	TRANSISTOR DTC124EK					
Q1305	8-729-271-22	TRANSISTOR 2SC2712-G					
Q1306	8-729-271-22	TRANSISTOR 2SC2712-G					
<RESISTOR>							
JR384	1-216-295-00	METAL GLAZE	0	5%	1/10W		
R301	1-249-409-11	CARBON	220	5%	1/4W		
R302	1-249-409-11	CARBON	220	5%	1/4W		
R303	1-249-409-11	CARBON	220	5%	1/4W		
R304	1-249-409-11	CARBON	220	5%	1/4W		
R305	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W		
R307	1-216-097-00	METAL GLAZE	100K	5%	1/10W		
R308	1-216-184-00	METAL GLAZE	270	5%	1/8W		
R309	1-216-025-00	METAL GLAZE	100	5%	1/10W		
R310	1-216-025-00	METAL GLAZE	100	5%	1/10W		
R311	1-216-025-00	METAL GLAZE	100	5%	1/10W		
R312	1-249-409-11	CARBON	220	5%	1/4W		
R313	1-216-081-00	METAL GLAZE	22K	5%	1/10W		
R314	1-216-182-00	METAL GLAZE	220	5%	1/8W		
R315	1-216-027-00	METAL GLAZE	120	5%	1/10W		
R316	1-216-027-00	METAL GLAZE	120	5%	1/10W		
R317	1-216-027-00	METAL GLAZE	120	5%	1/10W		
R318	1-249-429-11	CARBON	10K	5%	1/4W		
R319	1-249-409-11	CARBON	220	5%	1/4W		

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

B F A

REF.NO.	PART NO.	DESCRIPTION				
R320	1-216-198-00	METAL GLAZE	1K	5%	1/8W	
R321	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R322	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R323	1-249-422-11	CARBON	2.7K	5%	1/4W	
R324	1-249-429-11	CARBON	10K	5%	1/4W	
R325	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R328	1-216-009-00	METAL GLAZE	22	5%	1/10W	
R329	1-216-009-00	METAL GLAZE	22	5%	1/10W	
R330	1-216-009-00	METAL GLAZE	22	5%	1/10W	
R331	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R332	1-216-184-00	METAL GLAZE	270	5%	1/8W	
R333	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R334	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R335	1-247-852-11	CARBON	7.5K	5%	1/4W	
R336	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R337	1-216-184-00	METAL GLAZE	270	5%	1/8W	
R338	1-216-001-00	METAL GLAZE	10	5%	1/10W	
R339	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R340	1-216-121-00	METAL GLAZE	1M	5%	1/10W	
R341	1-216-031-00	METAL GLAZE	180	5%	1/10W	
R342	1-216-041-00	METAL GLAZE	470	5%	1/10W	
R344	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R346	1-216-202-00	METAL GLAZE	1.5K	5%	1/8W	
R347	1-216-073-00	METAL GLAZE	10K	5%	1/10W	
R348	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R354	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R355	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R356	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	
R357	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R358	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R359	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R360	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R361	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W	
R362	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R363	1-216-055-00	METAL GLAZE	1.8K	5%	1/10W	
R364	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R365	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R366	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R367	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R370	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R372	1-216-023-00	METAL GLAZE	82	5%	1/10W	
R376	1-249-429-11	CARBON	10K	5%	1/4W	
R377	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R378	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R379	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R380	1-216-071-00	METAL GLAZE	8.2K	5%	1/10W	
R381	1-216-093-00	METAL GLAZE	68K	5%	1/10W	
R382	1-216-103-00	METAL GLAZE	180K	5%	1/10W	
R383	1-216-115-00	METAL GLAZE	560K	5%	1/10W	
R384	1-216-029-00	METAL GLAZE	150	5%	1/10W	
R385	1-216-085-00	METAL GLAZE	33K	5%	1/10W	
R386	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R387	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R388	1-216-049-00	METAL GLAZE	1K	5%	1/10W	
R389	1-216-101-00	METAL GLAZE	150K	5%	1/10W	
R390	1-216-033-00	METAL GLAZE	220	5%	1/10W	
R391	1-216-023-00	METAL GLAZE	82	5%	1/10W	
R392	1-216-019-00	METAL GLAZE	56	5%	1/10W	
R393	1-216-019-00	METAL GLAZE	56	5%	1/10W	
R394	1-216-019-00	METAL GLAZE	56	5%	1/10W	
R395	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W	
R396	1-216-041-00	METAL GLAZE	470	5%	1/10W	
R398	1-216-081-00	METAL GLAZE	22K	5%	1/10W	
R401	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	

REF.NO.	PART NO.	DESCRIPTION				REMARK
R402	1-216-051-00	METAL GLAZE	1.2K	5%	1/10W	
R403	1-216-025-00	METAL GLAZE	100	5%	1/10W	
R404	1-216-059-00	METAL GLAZE	2.7K	5%	1/10W	
R405	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R406	1-216-061-00	METAL GLAZE	3.3K	5%	1/10W	
R407	1-216-047-00	METAL GLAZE	820	5%	1/10W	
R410	1-216-184-00	METAL GLAZE	270	5%	1/8W	
R412	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R1301	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	
R1302	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R1303	1-216-089-00	METAL GLAZE	47K	5%	1/10W	
R1304	1-216-097-00	METAL GLAZE	100K	5%	1/10W	
R1305	1-216-001-00	METAL GLAZE	10	5%	1/10W	
<VARIABLE RESISTOR>						
RV331	1-238-012-11	RES, ADJ, CARBON 1K				
<CRYSTAL>						
X331	1-567-307-11	OSCILLATOR, CRYSTAL				
X332	1-567-131-00	OSCILLATOR, CRYSTAL				

*1-633-408-11 F BOARD						

*1-566-664-11 PIN, CONNECTOR 4P						
<FUSE>						
F1601A	1-532-350-11	FUSE, TIME-LAG 4A/250V				
	1-533-230-11	HOLDER, FUSE; F1601				
<SWITCH>						
S1701A	1-571-433-11	SWITCH, PUSH (AC POWER)				

*A-1632-005-A A BOARD, COMPLETE						

*1-560-290-00 PLUG, CONNECTOR (2.5MM PITCH)						
*1-564-881-11 PLUG, CONNECTOR 4P						
*1-564-886-11 PLUG, CONNECTOR 9P						
*1-565-393-11 CONNECTOR, BOARD TO BOARD						
*1-565-503-11 CONNECTOR, BOARD TO BOARD 12P						
<CAPACITOR>						
C101	1-126-233-11	ELECT	22MF	20%	50V	
C102	1-126-103-11	ELECT	470MF	20%	16V	
C104	1-124-910-11	ELECT	47MF	20%	50V	
C106	1-126-233-11	ELECT	22MF	20%	50V	
C108	1-136-165-00	FILM	0.1MF	5%	50V	
C109	1-163-133-00	CERAMIC CHIP	470PF	5%	50V	
C111	1-124-925-11	ELECT	2.2MF	20%	50V	
C115	1-124-925-11	ELECT	2.2MF	20%	50V	
C127	1-124-122-11	ELECT	100MF	20%	50V	
C128	1-124-910-11	ELECT	47MF	20%	50V	
C129	1-124-910-11	ELECT	47MF	20%	50V	
C138	1-136-165-00	FILM	0.1MF	5%	50V	
C171	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	
C172	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

A C

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C177	1-102-074-00	CERAMIC	0.001MF	10%	50V		
C181	1-101-004-00	CERAMIC	0.01MF		50V		
<IC>				<IF BLOCK>			
IC103	8-759-979-62	IC PCF8574		VIF101	1-466-154-21	IF BLOCK (IFG-389S)	
<COIL>				*****			
L100	1-410-116-11	INDUCTOR	0.56MMH	*A-1638-007-A	C BOARD, COMPLETE		
L101	1-408-225-00	INDUCTOR	3.3UH		*****		
L102	1-408-413-00	INDUCTOR	22UH	1-506-348-99	PIN, CONNECTOR 3P		
L107	1-408-397-00	INDUCTOR	1UH	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P		
<TRANSISTOR>				*1-568-878-51	PIN, CONNECTOR 3P		
Q113	8-729-271-22	TRANSISTOR	2SC2712-G	*1-568-881-51	PIN, CONNECTOR 6P		
Q114	8-729-271-22	TRANSISTOR	2SC2712-G	*4-379-160-01	COVER (REAR LID), CV		
Q115	8-729-271-22	TRANSISTOR	2SC2712-G				
Q116	8-729-271-22	TRANSISTOR	2SC2712-G	*4-379-167-01	COVER (MAIN), CV		
Q125	8-729-900-89	TRANSISTOR	DTC144ES				
Q126	8-729-901-06	TRANSISTOR	DTA144EK	<CAPACITOR>			
Q181	8-729-271-22	TRANSISTOR	2SC2712-G	C703	1-102-980-00	CERAMIC	270PF 5% 50V
<RESISTOR>				C704	1-102-116-00	CERAMIC	680PF 10% 50V
JR230	1-216-295-00	METAL GLAZE	0 5% 1/10W	C705	1-102-978-00	CERAMIC	220PF 5% 50V
JR252	1-216-296-00	METAL GLAZE	0 5% 1/8W	C706	1-102-116-00	CERAMIC	680PF 10% 50V
JR253	1-216-296-00	METAL GLAZE	0 5% 1/8W	C707	1-162-116-00	CERAMIC	680PF 10% 2KV
JR255	1-216-296-00	METAL GLAZE	0 5% 1/8W	C708	1-162-114-00	CERAMIC	0.0047MF 2KV
JR256	1-216-296-00	METAL GLAZE	0 5% 1/8W	C709	1-102-116-00	CERAMIC	680PF 10% 50V
JR257	1-216-296-00	METAL GLAZE	0 5% 1/8W	C710	1-123-947-00	ELECT	10MF 20% 250V
JR258	1-216-296-00	METAL GLAZE	0 5% 1/8W	C711	1-101-880-00	CERAMIC	47PF 5% 50V
R101	1-216-025-00	METAL GLAZE	100 5% 1/10W	C712	1-102-980-00	CERAMIC	270PF 5% 50V
R105	1-216-079-00	METAL GLAZE	18K 5% 1/10W	C714	1-124-360-00	ELECT	1000MF 20% 16V
R107	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C716	1-162-622-11	CERAMIC	330PF 10% 400V
R108	1-216-079-00	METAL GLAZE	18K 5% 1/10W	C717	1-102-114-00	CERAMIC	470PF 10% 50V
R110	1-249-429-11	CARBON	10K 5% 1/4W	C718	1-102-114-00	CERAMIC	470PF 10% 50V
R111	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	C719	1-102-114-00	CERAMIC	470PF 10% 50V
R116	1-216-023-00	METAL GLAZE	82 5% 1/10W	<DIODE>			
R118	1-216-085-00	METAL GLAZE	33K 5% 1/10W	D701	8-719-929-16	DIODE HZS9.1NB3	
R128	1-216-027-00	METAL GLAZE	120 5% 1/10W	D702	8-719-911-19	DIODE 1SS119	
R129	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	D703	8-719-911-19	DIODE 1SS119	
R130	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	D704	8-719-911-19	DIODE 1SS119	
R157	1-216-049-00	METAL GLAZE	1K 5% 1/10W	D705	8-719-911-19	DIODE 1SS119	
R158	1-249-409-11	CARBON	220 5% 1/4W	D706	8-719-911-19	DIODE 1SS119	
R159	1-249-409-11	CARBON	220 5% 1/4W	D707	8-719-911-19	DIODE 1SS119	
R161	1-216-089-00	METAL GLAZE	47K 5% 1/10W	D708	8-719-911-19	DIODE 1SS119	
R162	1-216-095-00	METAL GLAZE	82K 5% 1/10W	D709	8-719-911-19	DIODE 1SS119	
R163	1-216-095-00	METAL GLAZE	82K 5% 1/10W	D710	8-719-911-19	DIODE 1SS119	
R164	1-216-075-00	METAL GLAZE	12K 5% 1/10W	D711	8-719-300-33	DIODE RU-3AM	
R165	1-216-075-00	METAL GLAZE	12K 5% 1/10W	D713	8-719-911-19	DIODE 1SS119	
R167	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W	<JACK>			
R168	1-216-089-00	METAL GLAZE	47K 5% 1/10W	J701	1-526-990-11	SOCKET, PICTURE TUBE	
R169	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W	<COIL>			
R181	1-216-049-00	METAL GLAZE	1K 5% 1/10W	L704	1-410-878-11	INDUCTOR	33UH
R182	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	<TRANSISTOR>			
R193	1-216-073-00	METAL GLAZE	10K 5% 1/10W	Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R194	1-216-017-00	METAL GLAZE	47 5% 1/10W	Q703	8-729-906-70	TRANSISTOR BF871	
R195	1-216-017-00	METAL GLAZE	47 5% 1/10W	Q704	8-729-200-17	TRANSISTOR 2SA1091-0	
R196	1-216-113-00	METAL GLAZE	470K 5% 1/10W	Q705	8-729-119-78	TRANSISTOR 2SC2785-HFE	
<TUNER>				Q706	8-729-906-70	TRANSISTOR BF871	
TU101A	1-465-301-11	TUNER, ET (UV-816(PLL))					



The components identified by shading and mark **A** are critical for safety.
Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q707	8-729-200-17	TRANSISTOR 2SA1091-0		*4-341-751-01	EYELET		
Q708	8-729-119-78	TRANSISTOR 2SC2785-HFE		*4-341-752-01	EYELET		
Q709	8-729-906-70	TRANSISTOR BF871		*4-368-683-01	SPRING		
Q710	8-729-200-17	TRANSISTOR 2SA1091-0					
<RESISTOR>				<CAPACITOR>			
R704	1-216-486-00	METAL OXIDE 8.2K 5% 3W	F	C002	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
R705	1-202-824-00	SOLID 3.3K 10% 1/2W		C003	1-123-875-11	ELECT 10MF	20% 50V
R706	1-249-409-11	CARBON 220 5% 1/4W		C004	1-124-120-11	ELECT 220MF	20% 16V
R707	1-249-412-11	CARBON 390 5% 1/4W		C005	1-124-791-11	ELECT 1MF	20% 50V
R708	1-249-401-11	CARBON 47 5% 1/4W		C006	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R709	1-202-844-00	SOLID 330K 10% 1/2W		C007	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R710	1-215-465-00	METAL 68K 1% 1/6W		C008	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
R711	1-249-426-11	CARBON 5.6K 5% 1/4W		C009	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
R712	1-249-417-11	CARBON 1K 5% 1/4W		C010	1-124-120-11	ELECT 220MF	20% 16V
R713	1-215-471-00	METAL 120K 1% 1/6W		C011	1-164-232-11	CERAMIC CHIP 0.01MF	50V
R714	1-216-486-00	METAL OXIDE 8.2K 5% 3W	F	C012	1-123-875-11	ELECT 10MF	20% 50V
R715	1-202-824-00	SOLID 3.3K 10% 1/2W		C013	1-106-220-00	MYLAR 0.1MF	10% 100V
R716	1-249-409-11	CARBON 220 5% 1/4W		C014	1-106-220-00	MYLAR 0.1MF	10% 100V
R717	1-249-415-11	CARBON 680 5% 1/4W		C015	1-124-902-00	ELECT 0.47MF	20% 50V
R718	1-202-814-11	SOLID 33K 10% 1/2W		C016	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
R719	1-249-401-11	CARBON 47 5% 1/4W		C017	1-106-220-00	MYLAR 0.1MF	10% 100V
R720	1-249-423-11	CARBON 3.3K 5% 1/4W		C018	1-163-127-00	CERAMIC CHIP 270PF	5% 50V
R721	1-202-842-11	SOLID 220K 10% 1/2W		C019	1-106-383-00	MYLAR 0.047MF	10% 100V
R722	1-202-848-00	SOLID 680K 10% 1/2W		C020	1-124-917-11	ELECT 33MF	20% 50V
R723	1-249-417-11	CARBON 1K 5% 1/4W		C021	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R724	1-202-846-00	SOLID 470K 10% 1/2W		C022	1-164-232-11	CERAMIC CHIP 0.01MF	50V
R725	1-202-838-00	SOLID 100K 10% 1/2W		C023	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R726	1-202-824-00	SOLID 3.3K 10% 1/2W		C024	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R727	1-249-409-11	CARBON 220 5% 1/4W		C025	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R728	1-216-347-11	METAL OXIDE 0.68 5% 1W	F	C027	1-124-910-11	ELECT 47MF	20% 50V
R729	1-249-416-11	CARBON 820 5% 1/4W		C029	1-163-081-00	CERAMIC CHIP 0.22MF	25V
R730	1-249-401-11	CARBON 47 5% 1/4W		C030	1-163-081-00	CERAMIC CHIP 0.22MF	25V
R731	1-249-423-11	CARBON 3.3K 5% 1/4W		C031	1-163-081-00	CERAMIC CHIP 0.22MF	25V
R732	1-249-415-11	CARBON 680 5% 1/4W		C032	1-163-081-00	CERAMIC CHIP 0.22MF	25V
R733	1-249-415-11	CARBON 680 5% 1/4W		C251	1-124-791-11	ELECT 1MF	20% 50V
R734	1-249-405-11	CARBON 100 5% 1/4W		C252	1-126-233-11	ELECT 22MF	20% 50V
R735	1-215-493-00	METAL 1K 1% 1/6W		C253	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
R736	1-216-486-00	METAL OXIDE 8.2K 5% 3W	F	C254	1-106-220-00	MYLAR 0.1MF	10% 100V
R737	1-215-485-00	METAL 470K 1% 1/6W		C255	1-124-636-00	ELECT 3300MF	20% 25V
R739	1-249-417-11	CARBON 1K 5% 1/4W		C261	1-124-791-11	ELECT 1MF	20% 50V
<VARIABLE RESISTOR>				C262	1-126-233-11	ELECT 22MF	20% 50V
RV701	1-230-641-11	RES. ADJ. METAL GLAZE 2.2M		C263	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
RV702A	1-230-619-11	RES. ADJ. METAL GLAZE 110M		C264	1-106-220-00	MYLAR 0.1MF	10% 100V
RV703	1-237-749-11	RES. ADJ. CARBON 2200		C265	1-124-564-11	ELECT 4700MF	20% 25V
RV704	1-237-749-11	RES. ADJ. CARBON 2200		C501	1-124-927-11	ELECT 4.7MF	20% 50V
*****				C502	1-124-927-11	ELECT 4.7MF	20% 50V
*A-1642-008-A D BOARD, COMPLETE				C503	1-106-371-00	MYLAR 0.015MF	10% 400V
*****				C504	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P			C505	1-108-794-11	MYLAR 0.0015MF	5% 50V
*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P			C506	1-106-375-12	MYLAR 0.022MF	10% 250V
*1-560-290-00	PLUG, CONNECTOR (2.5MM PITCH)			C507	1-130-783-00	MYLAR 0.33MF	10% 100V
*1-565-394-11	PIN, BOARD TO BOARD CONNECTOR			C508	1-106-375-12	MYLAR 0.022MF	10% 250V
*1-566-367-11	CONNECTOR, HINGE (RECEPTACLE)			C509	1-106-220-00	MYLAR 0.1MF	10% 100V
1-568-106-11	PIN, CONNECTOR 4P			C510	1-161-959-00	CERAMIC 22PF	10% 500V
*1-568-536-11	PLUG (MINIATURE DY) 6P			C511	1-108-620-11	MYLAR 0.0033MF	10% 100V
*1-568-878-51	PIN, CONNECTOR 3P			C512	1-106-220-00	MYLAR 0.1MF	10% 100V
*1-568-881-51	PIN, CONNECTOR 6P			C513	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
*1-568-882-51	PIN, CONNECTOR 7P			C514	1-106-228-00	MYLAR 0.22MF	10% 100V
4-200-001-01	HOLDER, IC			C515	1-124-791-11	ELECT 1MF	20% 50V
				C516	1-108-614-11	MYLAR 0.001MF	10% 100V
				C517	1-124-252-00	ELECT 0.33MF	20% 50V
				C518	1-124-902-00	ELECT 0.47MF	20% 50V
				C519	1-136-171-00	FILM 0.33MF	5% 50V

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C520	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V	C822	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C521	1-106-220-00	MYLAR 0.1MF	10% 100V	C823	1-106-359-00	MYLAR 0.0047MF	10% 400V
C522	1-124-122-11	ELECT 100MF	20% 50V	C824	1-102-212-00	CERAMIC 820PF	10% 500V
C523	1-108-614-11	MYLAR 0.001MF	10% 100V	C825	1-106-375-12	MYLAR 0.022MF	10% 250V
C524	1-108-798-11	MYLAR 0.0033MF	5% 50V	C1601 Δ	1-136-518-11	FILM 0.33MF	20% 300V
C525	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C1602 Δ	1-136-519-11	FILM 0.47MF	20% 300V
C526	1-163-101-00	CERAMIC CHIP 22PF	5% 50V	C1603 Δ	1-162-578-51	CERAMIC 0.0047MF	20% 400V
C527	1-106-220-00	MYLAR 0.1MF	10% 100V	C1604 Δ	1-162-578-51	CERAMIC 0.0047MF	20% 400V
C531	1-124-190-00	ELECT 680MF	10% 25V	C1605 Δ	1-162-578-51	CERAMIC 0.0047MF	20% 400V
C532	1-124-514-11	ELECT 100MF	20% 50V	C1606 Δ	1-162-578-51	CERAMIC 0.0047MF	20% 400V
C533	1-106-216-00	MYLAR 0.068MF	10% 100V	C1607 Δ	1-161-964-61	CERAMIC 0.0047MF	250V
C534	1-124-120-11	ELECT 220MF	20% 16V	<FILTER>			
C536	1-131-365-00	TANTALUM 10MF	10% 16V	CF001	1-577-364-11	VIBRATOR, CERAMIC	
C537	1-124-791-11	ELECT 1MF	20% 50V	CF501	1-567-888-11	OSCILLATOR, CERAMIC	
C538	1-108-614-11	MYLAR 0.001MF	10% 100V	<DIODE>			
C539	1-163-129-00	CERAMIC CHIP 330PF	5% 50V	D001	8-719-911-19	DIODE 1SS119	
C540	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	D002	8-719-929-03	DIODE HZS6.8NB3	
C592	1-124-122-11	ELECT 100MF	20% 50V	D003	8-719-911-19	DIODE 1SS119	
C593	1-163-129-00	CERAMIC CHIP 330PF	5% 50V	D004	8-719-911-19	DIODE 1SS119	
C601 Δ	1-161-964-61	CERAMIC 0.0047MF	250V	D005	8-719-109-89	DIODE RD5.6ES-B2	
C602 Δ	1-161-964-61	CERAMIC 0.0047MF	250V	D006	8-719-929-71	DIODE HZS33NB1	
C603 Δ	1-161-964-61	CERAMIC 0.0047MF	250V	D007	8-719-911-19	DIODE 1SS119	
C604 Δ	1-125-318-11	ELECT(BLOCK) 220MF	20% 400V	D009	8-719-109-89	DIODE RD5.6ES-B2	
C605	1-124-510-11	ELECT 220MF	20% 35V	D010	8-719-120-78	DIODE RD6.2ES-L3	
C606	1-163-137-00	CERAMIC CHIP 680PF	5% 50V	D011	8-719-120-78	DIODE RD6.2ES-L3	
C607	1-130-834-00	MYLAR 1MF	10% 63V	D013	8-719-109-89	DIODE RD5.6ES-B2	
C608	1-124-927-11	ELECT 4.7MF	20% 50V	D271	8-719-110-36	DIODE RD13ES-B2	
C611	1-124-910-11	ELECT 47MF	20% 50V	D272	8-719-911-19	DIODE 1SS119	
C612	1-108-614-11	MYLAR 0.001MF	10% 100V	D501	8-719-911-19	DIODE 1SS119	
C613	1-136-539-11	FILM 0.0022MF	3% 2KV	D504	8-719-911-55	DIODE U05G	
C614	1-102-030-00	CERAMIC 330PF	10% 500V	D506	8-719-800-76	DIODE 1SS226	
C615	1-124-557-11	ELECT 1000MF	20% 25V	D508	8-719-911-19	DIODE 1SS119	
C616	1-102-030-00	CERAMIC 330PF	10% 500V	D509	8-719-911-19	DIODE 1SS119	
C617	1-124-122-11	ELECT 100MF	20% 50V	D511	8-719-911-55	DIODE U05G	
C618	1-162-115-00	CERAMIC 330PF	10% 2KV	D512	8-719-911-55	DIODE U05G	
C619	1-124-556-11	ELECT 2200MF	20% 16V	D513	8-719-928-85	DIODE HZS4.7NB2	
C620	1-136-173-00	FILM 0.47MF	5% 50V	D514	8-719-911-19	DIODE 1SS119	
C621	1-124-347-00	ELECT 100MF	20% 160V	D515	8-719-911-19	DIODE 1SS119	
C622	1-124-556-11	ELECT 2200MF	20% 16V	D601 Δ	8-719-946-90	DIODE KBU4JL-6088	
C623	1-124-910-11	ELECT 47MF	20% 50V	D602	8-719-300-33	DIODE RU-3AM	
C624	1-124-122-11	ELECT 100MF	20% 50V	D603	8-719-911-55	DIODE U05G	
C625	1-124-360-00	ELECT 1000MF	20% 16V	D604	8-719-911-55	DIODE U05G	
C626	1-123-875-11	ELECT 10MF	20% 50V	D605	8-719-911-55	DIODE U05G	
C627	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	D606	8-719-300-33	DIODE RU-3AM	
C631	1-124-927-11	ELECT 4.7MF	20% 50V	D607	8-719-300-33	DIODE RU-3AM	
C632	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	D608	8-719-300-33	DIODE RU-3AM	
C633	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	D609	8-719-929-71	DIODE HZS33NB1	
C801	1-126-105-11	ELECT 1000MF	20% 35V	D610	8-719-300-59	DIODE CTU-12S	
C802	1-102-030-00	CERAMIC 330PF	10% 500V	D611	8-719-900-26	DIODE ERD29-08J	
C804	1-123-948-00	ELECT 22MF	20% 250V	D612	8-719-300-59	DIODE CTU-12S	
C805	1-162-114-00	CERAMIC 0.0047MF	2KV	D613	8-719-979-85	DIODE EGP20G	
C806	1-106-220-00	MYLAR 0.1MF	10% 100V	D614	8-719-979-85	DIODE EGP20G	
C807	1-106-395-00	MYLAR 0.15MF	10% 200V	D616	8-719-120-78	DIODE RD6.2ES-L3	
C810	1-123-024-21	ELECT 33MF	160V	D617	8-719-911-19	DIODE 1SS119	
C811	1-136-113-00	FILM 2MF	5% 200V	D618	8-719-109-89	DIODE RD5.6ES-B2	
C812	1-124-634-11	ELECT 1MF	20% 250V	D619	8-719-929-71	DIODE HZS33NB1	
C813	1-102-212-00	CERAMIC 820PF	10% 500V	D620	8-719-800-76	DIODE 1SS226	
C814 Δ	1-161-731-11	CERAMIC 0.001MF	10% 2KV	D621	8-719-929-71	DIODE HZS33NB1	
C815	1-136-540-11	FILM 0.82MF	5% 200V	D622	8-719-911-19	DIODE 1SS119	
C817	1-136-591-11	FILM 0.017MF	3% 1.4KV	D623	8-719-911-19	DIODE 1SS119	
C818	1-136-759-11	FILM 0.039MF	10% 630V	D624	8-719-911-19	DIODE 1SS119	
C819 Δ	1-161-731-11	CERAMIC 0.001MF	10% 2KV				
C820	1-106-218-00	MYLAR 0.0082MF	10% 400V				
C821 Δ	1-162-134-51	CERAMIC 470PF	10% 2KV				

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

D

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D630	8-719-110-39	DIODE RD15ES-B1		<TRANSISTOR>			
D801	8-719-300-33	DIODE RU-3AM		Q001	8-729-901-01	TRANSISTOR DTC144EK	
D802	8-719-300-33	DIODE RU-3AM		Q002	8-729-901-06	TRANSISTOR DTA144EK	
D803	8-719-300-65	DIODE ES1F		Q003	8-729-216-22	TRANSISTOR 2SA1162-G	
D804	8-719-911-55	DIODE U05G		Q004	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q005	8-729-901-01	TRANSISTOR DTC144EK	
D805	8-719-911-55	DIODE U05G		Q006	8-729-901-01	TRANSISTOR DTC144EK	
D806	8-719-945-80	DIODE ERC06-15S		Q007	8-729-271-22	TRANSISTOR 2SC2712-G	
D807	8-719-945-80	DIODE ERC06-15S		Q008	8-729-271-22	TRANSISTOR 2SC2712-G	
D808	8-719-900-26	DIODE ERD29-08J		Q009	8-729-271-22	TRANSISTOR 2SC2712-G	
				Q251	8-729-271-22	TRANSISTOR 2SC2712-G	
<IC>				Q261	8-729-271-22	TRANSISTOR 2SC2712-G	
IC001	8-759-501-66	IC SDA2083-B012		Q271	8-729-271-22	TRANSISTOR 2SC2712-G	
IC002	8-752-332-82	IC CXD1050A-09P		Q502	8-729-216-22	TRANSISTOR 2SA1162-G	
IC003	8-759-945-58	IC RC4558P		Q505	8-729-140-96	TRANSISTOR 2SD774-34	
IC005	8-759-748-56	IC SDA2546		Q506	8-729-140-97	TRANSISTOR 2SB734-34	
IC251	8-759-988-94	IC TDA2050		Q507	8-729-216-22	TRANSISTOR 2SA1162-G	
	4-201-023-01	SPACER, INSULATING; IC251		Q598	8-729-216-22	TRANSISTOR 2SA1162-G	
IC261	4-812-134-00	RIVET NYLON, 3.5; IC251		Q601	8-729-111-67	TRANSISTOR 2SB1094-L	
	8-759-988-94	IC TDA2050		Q602	8-729-209-02	TRANSISTOR 2SD1548-LB	
	4-201-023-01	SPACER, INSULATING; IC261		Q603	8-729-111-67	TRANSISTOR 2SB1094-L	
	4-812-134-00	RIVET NYLON, 3.5; IC261		Q604	8-729-216-22	TRANSISTOR 2SA1162-G	
IC501	8-759-970-73	IC TEA2028B		Q605	8-729-271-22	TRANSISTOR 2SC2712-G	
IC502	8-759-944-57	IC TDA8170		Q606	8-729-271-22	TRANSISTOR 2SC2712-G	
IC601	8-759-988-95	IC TEA2260		Q607	8-729-920-92	TRANSISTOR 2SD2096-EF	
IC604	8-759-144-84	IC UPC24M05HF		Q608	8-729-271-22	TRANSISTOR 2SC2712-G	
IC608	8-759-037-26	IC TYA7812CT		Q609	8-729-320-62	TRANSISTOR 2SD789-34	
<COIL>				Q801	8-729-271-22	TRANSISTOR 2SC2712-G	
L001	1-408-414-00	INDUCTOR 27UH		Q804	8-729-304-50	TRANSISTOR 2SD1941-06	
L501	1-408-225-00	INDUCTOR 3.3UH		Q805	8-729-119-80	TRANSISTOR 2SC2688-LK	
L601	*1-420-872-00	COIL, AIR CORE		<RESISTOR>			
L602	1-410-396-41	FERRITE BEAD INDUCTOR		JR1	1-216-295-00	METAL GLAZE 0 5% 1/10W	
L603	1-410-396-41	FERRITE BEAD INDUCTOR		R001	1-216-041-00	METAL GLAZE 470 5% 1/10W	
L604	1-410-671-31	INDUCTOR 47UH		R002	1-216-041-00	METAL GLAZE 470 5% 1/10W	
L605	1-459-585-11	COIL (WITH CORE) (DRUM TYPE)		R003	1-249-417-11	CARBON 1K 5% 1/4W	
L606	1-421-013-00	COIL (HORIZONTAL CHOKE) 25UH		R004	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
L607	1-410-671-31	INDUCTOR 47UH		R005	1-249-417-11	CARBON 1K 5% 1/4W	
L801	1-459-087-00	COIL, HCC DUST CORE 3.9MMH		R006	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
L803	1-459-104-00	COIL, DUST CORE		R007	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
L804	1-408-239-00	INDUCTOR 4.7MMH		R008	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
L805 Δ	1-459-907-22	COIL, HORIZONTAL LINEARITY		R009	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
L806	1-459-087-00	COIL, HCC DUST CORE 3.9MMH		R010	1-216-041-00	METAL GLAZE 470 5% 1/10W	
L809	*1-420-872-00	COIL, AIR CORE		R011	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
L810 Δ	1-421-794-21	TRANSFORMER, FERRITE (PMT)		R013	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
<TRANSFORMER>				R014	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W	
LF1601 Δ	1-421-866-12	LFT		R015	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
LF1602 Δ	1-421-776-11	LFT		R016	1-216-085-00	METAL GLAZE 33K 5% 1/10W	
LF1603 Δ	1-421-592-21	TRANSFORMER, FERRITE		R017	1-216-748-11	METAL GLAZE 39K 5% 1/10W	
T601 Δ	1-450-037-11	S.R.T		R018	1-216-095-00	METAL GLAZE 82K 5% 1/10W	
T602 Δ	1-424-277-11	TRANSFORMER, TRIGGER PULSE		R019	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
T801 Δ	1-437-090-21	HDT		R020	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
T802 Δ	1-439-416-11	TRANSFORMER ASSY, FLYBACK (UX-1600)		R021	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
<IC LINK>				R022	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
PS601 Δ	1-532-984-91	LINK, IC (ICP-N50) 2A		R023	1-216-035-00	METAL GLAZE 270 5% 1/10W	
PS602 Δ	1-532-984-91	LINK, IC (ICP-N50) 2A		R024	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
PS603 Δ	1-532-679-91	LINK, IC (ICP-N15) 0.6A		R025	1-216-025-00	METAL GLAZE 100 5% 1/10W	
				R026	1-249-417-11	CARBON 1K 5% 1/4W	
				R027	1-216-025-00	METAL GLAZE 100 5% 1/10W	
				R028	1-216-025-00	METAL GLAZE 100 5% 1/10W	
				R029	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
				R030	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
				R031	1-216-081-00	METAL GLAZE 22K 5% 1/10W	
				R032	1-216-073-00	METAL GLAZE 10K 5% 1/10W	

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R033	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R271	1-216-045-00	METAL GLAZE	680 5% 1/10W
R034	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R272	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R035	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R273	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R036	1-216-079-00	METAL GLAZE	18K 5% 1/10W	R500	1-216-115-00	METAL GLAZE	560K 5% 1/10W
R037	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R501	1-216-041-00	METAL GLAZE	470 5% 1/10W
R038	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W	R502	1-216-033-00	METAL GLAZE	220 5% 1/10W
R039	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R503	1-216-035-00	METAL GLAZE	270 5% 1/10W
R040	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R504	1-249-420-11	CARBON	1.8K 5% 1/4W
R041	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R505	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R042	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R506	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R043	1-216-041-00	METAL GLAZE	470 5% 1/10W	R509	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W
R044	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R510	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W
R045	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	R514	1-216-033-00	METAL GLAZE	220 5% 1/10W
R046	1-216-085-00	METAL GLAZE	33K 5% 1/10W	R515	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R047	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R517	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R048	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R518	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R049	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R519	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R050	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R520	1-216-037-00	METAL GLAZE	330 5% 1/10W
R051	1-216-041-00	METAL GLAZE	470 5% 1/10W	R521	1-216-025-00	METAL GLAZE	100 5% 1/10W
R052	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R522	1-215-469-00	METAL	100K 1% 1/6W
R053	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R523	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R054	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R524	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R055	1-216-037-00	METAL GLAZE	330 5% 1/10W	R526	1-249-409-11	CARBON	220 5% 1/4W F
R056	1-216-025-00	METAL GLAZE	100 5% 1/10W	R527	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R057	1-216-033-00	METAL GLAZE	220 5% 1/10W	R528	1-216-031-00	METAL GLAZE	180 5% 1/10W
R058	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W	R529	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R059	1-249-417-11	CARBON	1K 5% 1/4W	R530	1-249-448-11	CARBON	1.2 5% 1/4W F
R060	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R531	1-216-099-00	METAL GLAZE	120K 5% 1/10W
R061	1-249-417-11	CARBON	1K 5% 1/4W	R532	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R062	1-249-417-11	CARBON	1K 5% 1/4W	R533	1-216-295-00	METAL GLAZE	0 5% 1/10W
R063	1-249-429-11	CARBON	10K 5% 1/4W	R534	1-216-119-00	METAL GLAZE	820K 5% 1/10W
R064	1-249-417-11	CARBON	1K 5% 1/4W	R535	1-249-749-00	CARBON	2.2M 5% 1/4W
R065	1-249-429-11	CARBON	10K 5% 1/4W	R536	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R066	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R537	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R067	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R538	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R068	1-249-417-11	CARBON	1K 5% 1/4W	R539	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R069	1-249-417-11	CARBON	1K 5% 1/4W	R540	1-216-013-00	METAL GLAZE	33 5% 1/10W
R070	1-249-417-11	CARBON	1K 5% 1/4W	R541	1-216-091-00	METAL GLAZE	56K 5% 1/10W
R071	1-249-417-11	CARBON	1K 5% 1/4W	R542	1-216-308-00	METAL GLAZE	4.7 5% 1/10W
R072	1-249-417-11	CARBON	1K 5% 1/4W	R543	1-249-451-11	CARBON	2.2 5% 1/4W
R073	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R544	1-247-745-11	CARBON	330 5% 1/2W
R074	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R545	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R075	1-216-033-00	METAL GLAZE	220 5% 1/10W	R546	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R076	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R547	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R077	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R548	1-216-349-00	METAL OXIDE	1 5% 1W F
R078	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R549	1-216-454-11	METAL OXIDE	390 5% 2W F
R251	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R550	1-216-095-00	METAL GLAZE	82K 5% 1/10W
R252	1-216-039-00	METAL GLAZE	390 5% 1/10W	R551	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R253	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R553	1-216-869-11	METAL OXIDE	1K 5% 1W
R254	1-216-357-00	METAL OXIDE	4.7 5% 1W F	R554	1-216-037-00	METAL GLAZE	330 5% 1/10W
R255	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R555	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R256	1-216-115-00	METAL GLAZE	560K 5% 1/10W	R556	1-216-025-00	METAL GLAZE	100 5% 1/10W
R257	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R557	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R258	1-215-869-11	METAL OXIDE	1K 5% 1W F	R558	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R259	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R559	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R261	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R560	1-216-037-00	METAL GLAZE	330 5% 1/10W
R262	1-216-039-00	METAL GLAZE	390 5% 1/10W	R561	1-216-107-00	METAL GLAZE	270K 5% 1/10W
R263	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R570	1-216-045-00	METAL GLAZE	680 5% 1/10W
R264	1-216-357-00	METAL OXIDE	4.7 5% 1W F	R591	1-216-047-00	METAL GLAZE	820 5% 1/10W
R265	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R592	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R266	1-216-115-00	METAL GLAZE	560K 5% 1/10W	R593	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R267	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R594	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R268	1-215-869-11	METAL OXIDE	1K 5% 1W F	R597	1-216-041-00	METAL GLAZE	470 5% 1/10W
R269	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

D VM

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R598	1-215-900-11	METAL OXIDE	22K 5% 2W F	<VARIABLE RESISTOR>			
R600	1-249-381-11	CARBON	1 5% 1/4W	RV501	1-238-013-11	RES, ADJ, CARBON 2.2K	
R601	1-216-353-00	METAL OXIDE	2.2 5% 1W F	RV502	1-238-016-11	RES, ADJ, CARBON 10K	
R603	1-216-469-11	METAL OXIDE	12 5% 3W F	RV601	1-238-011-11	RES, ADJ, CARBON 470	
R604	1-216-025-00	METAL GLAZE	100 5% 1/10W	<SPARK GAP>			
R605	1-216-081-00	METAL GLAZE	22K 5% 1/10W	SG801	1-519-422-11	GAP, SPARK	
R606	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W	<THERMISTOR>			
R607	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	THP601 Δ	1-808-059-31	THERMISTOR, POSITIVE	
R608 Δ	1-216-488-51	METAL OXIDE	18K 5% 3W F	*****			
R609	1-216-007-00	METAL GLAZE	18 5% 1/10W	*1-634-193-11	VM BOARD		
R610	1-244-941-00	CARBON	680K 5% 1/2W	*****			
R611	1-216-015-00	METAL GLAZE	39 5% 1/10W	*1-568-878-51	PIN, CONNECTOR 3P		
R612	1-216-049-00	METAL GLAZE	1K 5% 1/10W	<CAPACITOR>			
R613	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C751	1-101-361-00	CERAMIC 150PF 5% 50V	
R614	1-205-758-11	WIREWOUND	100 10% 10W F	C752	1-108-629-11	MYLAR 0.018MF 10% 100V	
R616	1-216-099-00	METAL GLAZE	120K 5% 1/10W	C753	1-106-367-00	MYLAR 0.01MF 10% 400V	
R617	1-216-037-00	METAL GLAZE	330 5% 1/10W	C754	1-102-980-00	CERAMIC 270PF 5% 50V	
R618	1-216-431-11	METAL OXIDE	560 5% 1W F	C757	1-108-692-11	MYLAR 0.01MF 10% 200V	
R619	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C759	1-123-875-11	ELECT 10MF 20% 50V	
R620	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C760	1-124-917-11	ELECT 33MF 20% 50V	
R621	1-216-077-00	METAL GLAZE	15K 5% 1/10W	C761	1-101-006-00	CERAMIC 0.047MF 50V	
R622	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C762	1-106-367-00	MYLAR 0.01MF 10% 400V	
R623	1-216-081-00	METAL GLAZE	22K 5% 1/10W	<COIL>			
R624	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	L751	1-408-413-00	INDUCTOR 22UH	
R625	1-215-865-11	METAL OXIDE	220 5% 1W F	L770	1-410-665-31	INDUCTOR 15UH	
R626	1-216-037-00	METAL GLAZE	330 5% 1/10W	<TRANSISTOR>			
R628	1-216-001-00	METAL GLAZE	10 5% 1/10W	Q751	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R629	1-216-037-00	METAL GLAZE	330 5% 1/10W	Q752	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R633	1-216-049-00	METAL GLAZE	1K 5% 1/10W	Q753	8-729-140-97	TRANSISTOR 2SB734-34	
R634	1-216-430-11	METAL OXIDE	390 5% 1W F	Q754	8-729-140-96	TRANSISTOR 2SD774-34	
R635	1-216-073-00	METAL GLAZE	10K 5% 1/10W	<RESISTOR>			
R636	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R751	1-249-418-11	CARBON 1.2K 5% 1/4W	
R643	1-217-189-21	WIREWOUND	0.12 5% 2W F	R752	1-249-426-11	CARBON 5.6K 5% 1/4W	
R651	1-216-025-00	METAL GLAZE	100 5% 1/10W	R753	1-249-414-11	CARBON 560 5% 1/4W	
R653	1-205-758-11	WIREWOUND	100 10% 10W F	R754	1-249-434-11	CARBON 27K 5% 1/4W	
R802	1-249-443-11	CARBON	0.47 5% 1/4W F	R755	1-249-405-11	CARBON 100 5% 1/4W	
R805	1-249-448-11	CARBON	1.2 5% 1/4W F	R756	1-249-419-11	CARBON 1.5K 5% 1/4W	
R806	1-216-093-00	METAL GLAZE	68K 5% 1/10W	R757	1-249-405-11	CARBON 100 5% 1/4W	
R807	1-215-869-11	METAL OXIDE	1K 5% 1W F	R758	1-249-409-11	CARBON 220 5% 1/4W	
R809	1-202-821-11	SOLID	1.8K 10% 1/2W	R760	1-249-411-11	CARBON 330 5% 1/4W	
R810	1-202-818-00	SOLID	1K 10% 1/2W	R761	1-249-429-11	CARBON 10K 5% 1/4W	
R811	1-215-882-00	METAL OXIDE	22 5% 2W F	R762	1-247-895-00	CARBON 470K 5% 1/4W	
R812	1-244-916-11	CARBON	62K 5% 1/2W	R763	1-249-429-11	CARBON 10K 5% 1/4W	
R815	1-215-884-11	METAL OXIDE	47 5% 2W F	R764	1-249-455-11	CARBON 4.7 5% 1/4W F	
R816	1-215-868-00	METAL OXIDE	680 5% 1W F	R765	1-249-455-11	CARBON 4.7 5% 1/4W F	
R817	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R766	1-247-753-11	CARBON 1.2K 5% 1/2W	
R820	1-249-403-11	CARBON	68 5% 1/4W	R767	1-247-751-11	CARBON 820 5% 1/2W	
R821	1-247-725-11	CARBON	10K 5% 1/4W F	R768	1-215-887-00	METAL OXIDE 150 5% 2W F	
R822 Δ	1-217-778-61	FUSIBLE	1K 5% 1W				
R825	1-216-345-11	METAL OXIDE	0.47 5% 1W F				
R826	1-216-097-00	METAL GLAZE	100K 5% 1/10W				
R827	1-216-073-00	METAL GLAZE	10K 5% 1/10W				
R828	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W				
R829	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W				
R831	1-249-451-11	CARBON	2.2 5% 1/4W				
R1601 Δ	1-246-513-75	CARBON	47K 5% 1/4W				
R1602 Δ	1-244-945-91	CARBON	1M 5% 1/2W				
R1603 Δ	1-217-328-11	WIREWOUND	2.7 10% 7W F				
R1604 Δ	1-246-513-75	CARBON	47K 5% 1/4W				
R1605 Δ	1-218-265-91	METAL GLAZE	8.2M 5% 1W				
R5501	1-216-073-00	METAL GLAZE	10K 5% 1/10W				
R5503	1-216-001-00	METAL GLAZE	10 5% 1/10W				
R5504	1-216-121-00	METAL GLAZE	1M 5% 1/10W				
R5505	1-216-001-00	METAL GLAZE	10 5% 1/10W				

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

VM

H1

H2

J2

J1

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R769	Δ 1-212-889-51	FUSIBLE 220 5% 1/4W F		*A-1651-015-A	J1 BOARD, COMPLETE	*****	
*****				1-561-534-41	SOCKET 21P		
	*1-633-409-11	H1 BOARD		*1-564-524-11	PLUG, CONNECTOR 9P		
		*****		*1-564-527-11	PLUG, CONNECTOR 12P		
	1-562-837-11	JACK		*1-566-641-11	CONNECTOR, HINGE (TAB) 18P		
	*1-564-512-11	PLUG, CONNECTOR 9P					
	*1-568-879-51	PIN, CONNECTOR 4P					
	*1-568-881-51	PIN, CONNECTOR 6P					
	1-569-473-11	JACK BLOCK, PIN 3P					
		<RESISTOR>					
R1651	1-249-413-11	CARBON 470 5% 1/4W		C203	1-124-925-11	ELECT 2.2MF 20% 50V	
R1652	1-249-413-11	CARBON 470 5% 1/4W		C205	1-124-927-11	ELECT 4.7MF 20% 50V	
		<SWITCH>		C206	1-124-925-11	ELECT 2.2MF 20% 50V	
S1651	1-571-532-21	SWITCH, TACTIL		C207	1-124-927-11	ELECT 4.7MF 20% 50V	
S1652	1-571-532-21	SWITCH, TACTIL		C213	1-126-233-11	ELECT 22MF 20% 50V	
S1653	1-571-532-21	SWITCH, TACTIL					
*****				C214	1-106-363-00	MYLAR 0.0068MF 10% 400V	
	*1-633-410-11	H2 BOARD		C217	1-106-363-00	MYLAR 0.0068MF 10% 400V	
		*****		C218	1-106-375-12	MYLAR 0.022MF 10% 250V	
	*1-568-882-51	PIN, CONNECTOR 7P		C219	1-106-375-12	MYLAR 0.022MF 10% 250V	
	*4-374-987-01	GUIDE, LIGHT		C220	1-108-620-11	MYLAR 0.0033MF 10% 100V	
	*4-381-686-01	BRACKET (B), LIGHT GUIDE		C221	1-108-620-11	MYLAR 0.0033MF 10% 100V	
		<DIODE>		C222	1-106-385-00	MYLAR 0.056MF 10% 100V	
D1651	8-719-948-31	DIODE LD-201VR		C223	1-106-385-00	MYLAR 0.056MF 10% 100V	
	*4-201-076-01	HOLDER, LED; D1651		C224	1-106-367-00	MYLAR 0.01MF 10% 400V	
D1652	8-719-948-31	DIODE LD-201VR		C225	1-136-173-00	FILM 0.47MF 5% 50V	
	*4-201-076-01	HOLDER, LED; D1652		C226	1-136-173-00	FILM 0.47MF 5% 50V	
D1654	8-719-948-31	DIODE LD-201VR		C227	1-106-375-12	MYLAR 0.022MF 10% 250V	
	*4-201-076-01	HOLDER, LED; D1654		C228	1-106-379-12	MYLAR 0.033MF 10% 250V	
		<IC>		C229	1-106-371-00	MYLAR 0.015MF 10% 400V	
IC1651	8-741-138-70	IC BX-1387		C230	1-106-371-00	MYLAR 0.015MF 10% 400V	
		<RESISTOR>		C231	1-124-902-00	ELECT 0.47MF 20% 50V	
R1662	1-249-413-11	CARBON 470 5% 1/4W		C232	1-123-875-11	ELECT 10MF 20% 50V	
*****				C233	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
	*1-633-411-11	J2 BOARD		C234	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
		*****		C235	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
	1-537-088-21	TERMINAL BOARD, INPUT/OUTPUT		C236	1-163-005-11	CERAMIC CHIP 470PF 10% 50V	
	*1-560-278-21	PLUG, CONNECTOR 4P		C237	1-124-902-00	ELECT 0.47MF 20% 50V	
	*1-564-517-11	PLUG, CONNECTOR 2P		C238	1-163-125-00	CERAMIC CHIP 220PF 5% 50V	
	*1-564-519-11	PLUG, CONNECTOR 4P		C239	1-126-103-11	ELECT 470MF 20% 16V	
		<CAPACITOR>		C240	1-163-018-00	CERAMIC CHIP 0.0056MF 10% 50V	
C1751	1-101-005-00	CERAMIC 0.022MF 50V		C241	1-163-018-00	CERAMIC CHIP 0.0056MF 10% 50V	
C1752	1-101-005-00	CERAMIC 0.022MF 50V		C242	1-163-033-00	CERAMIC CHIP 0.022MF 50V	
C1755	1-102-114-00	CERAMIC 470PF 10% 50V		C243	1-163-033-00	CERAMIC CHIP 0.022MF 50V	
C1756	1-102-114-00	CERAMIC 470PF 10% 50V		C244	1-163-033-00	CERAMIC CHIP 0.022MF 50V	
		<COIL>		C245	1-163-033-00	CERAMIC CHIP 0.022MF 50V	
L1751	1-412-240-11	INDUCTOR, WIDE BAND		C1401	1-123-875-11	ELECT 10MF 20% 50V	
L1752	1-412-240-11	INDUCTOR, WIDE BAND		C1402	1-126-103-11	ELECT 470MF 20% 16V	
*****				C1403	1-163-003-11	CERAMIC CHIP 330PF 10% 50V	
				C1404	1-106-220-00	MYLAR 0.1MF 10% 100V	
				C1405	1-136-017-00	CERAMIC CHIP 0.0047MF 50V	
				C1406	1-106-220-00	MYLAR 0.1MF 10% 100V	
				C1407	1-124-910-11	ELECT 47MF 20% 50V	
				C1408	1-124-122-11	ELECT 100MF 20% 50V	
				C1409	1-126-233-11	ELECT 22MF 20% 50V	
				C1410	1-123-875-11	ELECT 10MF 20% 50V	
				C1411	1-123-875-11	ELECT 10MF 20% 50V	
				C1412	1-124-910-11	ELECT 47MF 20% 50V	
				C1413	1-124-910-11	ELECT 47MF 20% 50V	
				C1414	1-123-875-11	ELECT 10MF 20% 50V	
				C1415	1-106-220-00	MYLAR 0.1MF 10% 100V	
				C1416	1-106-220-00	MYLAR 0.1MF 10% 100V	
				C1417	1-124-120-11	ELECT 220MF 20% 16V	

J1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C1418	1-163-003-11	CERAMIC CHIP 330PF	10% 50V	D1505	8-719-911-19	DIODE 1SS119	
C1419	1-163-003-11	CERAMIC CHIP 330PF	10% 50V	D1506	8-719-929-79	DIODE HZS36NB4	
C1425	1-124-902-00	ELECT 0.47MF	20% 50V	D1507	8-719-911-19	DIODE 1SS119	
C1426	1-124-902-00	ELECT 0.47MF	20% 50V	D1510	8-719-911-19	DIODE 1SS119	
C1427	1-136-017-00	CERAMIC CHIP 0.0047MF	50V				
C1428	1-136-017-00	CERAMIC CHIP 0.0047MF	50V			<IC>	
C1429	1-136-017-00	CERAMIC CHIP 0.0047MF	50V	IC201	8-759-013-17	IC TDA6200	
C1430	1-163-003-11	CERAMIC CHIP 330PF	10% 50V	IC1401	8-752-032-27	IC CXA1114P	
C1431	1-126-529-11	ELECT 0.47MF	20% 50V	IC1402	8-759-946-32	IC TEA2014A	
C1432	1-124-902-00	ELECT 0.47MF	20% 50V	IC1403	8-759-040-53	IC MC14053BCP	
C1433	1-124-122-11	ELECT 100MF	20% 50V	IC1501	8-759-942-16	IC TEA2031A	
C1436	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V			<TRANSISTOR>	
C1437	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	Q201	8-729-271-22	TRANSISTOR 2SC2712-G	
C1438	1-106-367-00	MYLAR 0.01MF	10% 400V	Q202	8-729-271-22	TRANSISTOR 2SC2712-G	
C1439	1-106-367-00	MYLAR 0.01MF	10% 400V	Q1401	8-729-216-22	TRANSISTOR 2SA1162-G	
C1440	1-123-875-11	ELECT 10MF	20% 50V	Q1402	8-729-271-22	TRANSISTOR 2SC2712-G	
C1441	1-123-875-11	ELECT 10MF	20% 50V	Q1403	8-729-271-22	TRANSISTOR 2SC2712-G	
C1442	1-106-220-00	MYLAR 0.1MF	10% 100V				
C1443	1-106-220-00	MYLAR 0.1MF	10% 100V	Q1404	8-729-216-22	TRANSISTOR 2SA1162-G	
C1444	1-124-910-11	ELECT 47MF	20% 50V			<RESISTOR>	
C1445	1-102-824-00	CERAMIC 470PF	5% 50V	R201	1-216-079-00	METAL GLAZE 18K 5%	1/10W
C1446	1-102-824-00	CERAMIC 470PF	5% 50V	R202	1-216-206-00	METAL GLAZE 2.2K 5%	1/8W
C1501	1-124-927-11	ELECT 4.7MF	20% 50V	R203	1-216-075-00	METAL GLAZE 12K 5%	1/10W
C1502	1-124-791-11	ELECT 1MF	20% 50V	R204	1-216-085-00	METAL GLAZE 33K 5%	1/10W
C1503	1-108-614-11	MYLAR 0.001MF	10% 100V	R205	1-216-085-00	METAL GLAZE 33K 5%	1/10W
C1504	1-124-910-11	ELECT 47MF	20% 50V	R206	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
C1505	1-106-383-00	MYLAR 0.047MF	10% 100V	R207	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
C1507	1-108-620-11	MYLAR 0.0033MF	10% 100V	R208	1-216-077-00	METAL GLAZE 15K 5%	1/10W
C1508	1-124-791-11	ELECT 1MF	20% 50V	R209	1-216-081-00	METAL GLAZE 22K 5%	1/10W
C1509	1-124-791-11	ELECT 1MF	20% 50V	R210	1-216-077-00	METAL GLAZE 15K 5%	1/10W
C1511	1-124-927-11	ELECT 4.7MF	20% 50V	R211	1-216-097-00	METAL GLAZE 100K 5%	1/10W
C1513	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	R212	1-216-081-00	METAL GLAZE 22K 5%	1/10W
		<CONNECTOR>		R213	1-216-077-00	METAL GLAZE 15K 5%	1/10W
CN1401	1-565-838-11	PIN JACK BLOCK 2P		R214	1-216-033-00	METAL GLAZE 220 5%	1/10W
		<DIODE>		R215	1-216-081-00	METAL GLAZE 22K 5%	1/10W
D201	8-719-929-16	DIODE HZS9.1NB3		R216	1-216-081-00	METAL GLAZE 22K 5%	1/10W
D202	8-719-929-16	DIODE HZS9.1NB3		R217	1-216-077-00	METAL GLAZE 15K 5%	1/10W
D205	8-719-929-08	DIODE HZS7.5NB3		R218	1-216-033-00	METAL GLAZE 220 5%	1/10W
D206	8-719-929-08	DIODE HZS7.5NB3		R219	1-216-073-00	METAL GLAZE 10K 5%	1/10W
D1401	8-719-929-08	DIODE HZS7.5NB3		R220	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
D1404	8-719-929-08	DIODE HZS7.5NB3		R221	1-216-041-00	METAL GLAZE 470 5%	1/10W
D1405	8-719-929-08	DIODE HZS7.5NB3		R222	1-216-041-00	METAL GLAZE 470 5%	1/10W
D1407	8-719-929-20	DIODE HZS10NB3		R223	1-216-049-00	METAL GLAZE 1K 5%	1/10W
D1408	8-719-929-16	DIODE HZS9.1NB3		R224	1-216-049-00	METAL GLAZE 1K 5%	1/10W
D1409	8-719-929-16	DIODE HZS9.1NB3		R225	1-216-049-00	METAL GLAZE 1K 5%	1/10W
D1410	8-719-929-16	DIODE HZS9.1NB3		R226	1-216-049-00	METAL GLAZE 1K 5%	1/10W
D1415	8-719-929-08	DIODE HZS7.5NB3		R227	1-216-033-00	METAL GLAZE 220 5%	1/10W
D1418	8-719-929-08	DIODE HZS7.5NB3		R228	1-216-033-00	METAL GLAZE 220 5%	1/10W
D1419	8-719-929-08	DIODE HZS7.5NB3		R229	1-216-075-00	METAL GLAZE 12K 5%	1/10W
D1420	8-719-929-08	DIODE HZS7.5NB3		R230	1-216-079-00	METAL GLAZE 18K 5%	1/10W
D1421	8-719-929-08	DIODE HZS7.5NB3		R231	1-216-073-00	METAL GLAZE 10K 5%	1/10W
D1422	8-719-929-08	DIODE HZS7.5NB3		R232	1-216-073-00	METAL GLAZE 10K 5%	1/10W
D1423	8-719-929-08	DIODE HZS7.5NB3		R233	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
D1424	8-719-929-08	DIODE HZS7.5NB3		R234	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
D1425	8-719-929-08	DIODE HZS7.5NB3		R240	1-216-033-00	METAL GLAZE 220 5%	1/10W
D1426	8-719-929-08	DIODE HZS7.5NB3		R241	1-216-091-00	METAL GLAZE 56K 5%	1/10W
D1501	8-719-300-33	DIODE RU-3AM		R242	1-216-091-00	METAL GLAZE 56K 5%	1/10W
D1502	8-719-911-19	DIODE 1SS119		R243	1-216-075-00	METAL GLAZE 12K 5%	1/10W
D1503	8-719-911-19	DIODE 1SS119		R244	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
D1504	8-719-911-19	DIODE 1SS119		R245	1-216-075-00	METAL GLAZE 12K 5%	1/10W

— 67 —

IFG

The components identified by shading and mark **Δ** are critical for safety.
Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK
C11	1-163-119-00	CERAMIC CHIP 120PF	5%
C12	1-136-298-00	FILM 0.0033MF	2%
C13	1-124-477-11	ELECT 47MF	20%
C14	1-124-477-11	ELECT 47MF	20%
C15	1-124-477-11	ELECT 47MF	20%
C16	1-124-477-11	ELECT 47MF	20%
C17	1-123-875-11	ELECT 10MF	20%
C18	1-106-367-00	MYLAR 0.01MF	10%
C19	1-106-367-00	MYLAR 0.01MF	10%
C20	1-126-233-11	ELECT 22MF	20%
C21	1-126-233-11	ELECT 22MF	20%
C22	1-106-220-00	MYLAR 0.1MF	10%
C23	1-106-228-00	MYLAR 0.22MF	10%
C24	1-124-963-11	ELECT 33MF	20%
C25	1-106-375-12	MYLAR 0.022MF	10%
C26	1-106-383-00	MYLAR 0.047MF	10%
C27	1-124-791-11	ELECT 1MF	20%
C28	1-163-103-00	CERAMIC CHIP 27PF	5%
C29	1-124-791-11	ELECT 1MF	20%
C30	1-124-791-11	ELECT 1MF	20%
C31	1-106-367-00	MYLAR 0.01MF	10%
C32	1-130-479-00	MYLAR 0.0047MF	5%
C33	1-163-081-00	CERAMIC CHIP 0.22MF	25V
C34	1-106-228-00	MYLAR 0.22MF	10%
C35	1-123-875-11	ELECT 10MF	20%
C36	1-163-119-00	CERAMIC CHIP 120PF	5%
C37	1-124-477-11	ELECT 47MF	20%
C38	1-124-477-11	ELECT 47MF	20%
<FILTER>			
CDA1	1-404-751-11	DISCRIMINATOR, CERAMIC	
CDA2	1-404-750-11	DISCRIMINATOR, CERAMIC	
SFT1	1-527-840-00	FILTER, CERAMIC	
SFT2	1-527-839-00	FILTER, CERAMIC	
<DIODE>			
D3	8-719-400-18	DIODE MA152WK	
<IC>			
IC1	8-759-003-90	IC TBA129	
IC2	8-759-003-90	IC TBA129	
IC3	8-759-030-48	IC TDA6600-2	
IC4	8-759-946-99	IC TDA2595-V7	
<COIL>			
L1	1-408-410-00	INDUCTOR 12UH	
L2	1-408-410-00	INDUCTOR 12UH	
L3	1-410-064-11	INDUCTOR 2.7MMH	
L4	1-408-421-00	INDUCTOR 100UH	
L5	1-408-421-00	INDUCTOR 100UH	
<TRANSISTOR>			
Q2	8-729-901-00	TRANSISTOR DTC124EK	
Q3	8-729-216-22	TRANSISTOR 2SA1162-G	
Q4	8-729-901-00	TRANSISTOR DTC124EK	
<RESISTOR>			
JR8	1-216-296-00	METAL GLAZE 0	5%
JR10	1-216-296-00	METAL GLAZE 0	5%

REF.NO.	PART NO.	DESCRIPTION	REMARK
R1	1-216-045-00	METAL GLAZE 680 5%	1/10W
R2	1-216-043-00	METAL GLAZE 560 5%	1/10W
R3	1-216-043-00	METAL GLAZE 560 5%	1/10W
R5	1-216-045-00	METAL GLAZE 680 5%	1/10W
R6	1-216-043-00	METAL GLAZE 560 5%	1/10W
R7	1-216-043-00	METAL GLAZE 560 5%	1/10W
R9	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R10	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R11	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R12	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R15	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R16	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R17	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R18	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
R19	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R20	1-216-075-00	METAL GLAZE 12K 5%	1/10W
R22	1-216-099-00	METAL GLAZE 120K 5%	1/10W
R24	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R25	1-216-077-00	METAL GLAZE 15K 5%	1/10W
<VARIABLE RESISTOR>			
RV1	1-238-016-11	RES, ADJ, CARBON 10K	
RV2	1-238-019-11	RES, ADJ, CARBON 47K	

MISCELLANEOUS			

Δ.1-426-398-11	COIL, DEMAGNETIZATION		
Δ.1-451-313-21	DEFLECTION Yoke (Y29FXA)		
1-452-032-00	MAGNET, DISK; 10MM φ		
1-452-094-00	MAGNET, ROTATABLE DISK; 15MM φ		
Δ.1-452-509-42	NECK ASSY, PICTURE TUBE (NA-308)		
SPEAKER			
Δ.1-575-487-11	CORD,POWER (WITH NOISE FILTER)		
V901 Δ.8-733-823-05	PICTURE TUBE (A68JYK60X)		

ACCESSORIES AND PACKING MATERIALS			

PART NO.	DESCRIPTION	REMARK	
3-752-237-11	MANUAL, INSTRUCTION		
*4-384-027-01	BAG, PROTECTION		
*4-398-903-01	CUSHION (UPPER) (ASSY)		
*4-398-904-01	CUSHION (LOWER) (ASSY)		
*4-398-905-01	INDIVIDUAL CARTON		
REMOTE COMMANDER			
1-465-363-11	COMMANDER, REMOTE (RM-689)		
4-395-610-01	COVER, BATTERY (FOR RM-689)		